aiwa

aiwa SERVICE

NSX-A707
NSX-S707
NSX-S708

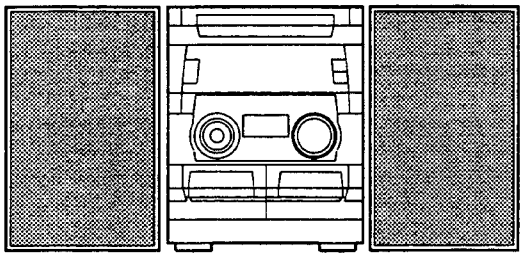

COMPACT DISC STEREO
CASSETTE RECEIVER

- BASIC TAPE MECHANISM : 2ZM-3MK2 PR4NM
- BASIC CD MECHANISM : 4ZG–1 Z3DSHNM
- TYPE : 707(U,LH), 708LH

SYSTEM	CD CASSEIVER	SPEAKER	REMOTE CONTROLLER
NSX-A707	CX-NA707 (TYPE : U)	SX–NA702	RC - 7AS06
NSX-S707	CX-NS707 (TYPE : LH)	SX–FNS705	
NSX-S708	CX-NS708 (TYPE : LH)	SX–ANS707	

- If requiring information about the CD mechanism, see Service Manual of 4ZG-1, S/M Code No. 09-983-249-3OT.

SERVICE MANUAL

S/M Code No. 09–984–250–2FE

SPECIFICATIONS

<FM Tuner section>

Tuning range	87.5 MHz to 108 MHz
Usable sensitivity(IHF)	13.2 dBf
Antenna terminals	75 ohms (unbalanced)

<MW Tuner section>

Tuning range	531 kHz to 1602 kHz (9 kHz step) 530 kHz to 1710 kHz (10 kHz step)
Usable sensitivity	350 uV/m
Antenna	Loop antenna

<Amplifier section>

Power output	U : 80 W + 80 W (50 Hz - 20 kHz, T.H.D. less than 1%, 6 ohms) LH : 140 W + 140 W (6 ohms, T.H.D.10%, 1 kHz)
Total harmonic distortion	U : 0.1% (40 W, 1 kHz, 6 ohms, DIN AUDIO) LH : 0.1% (70 W, 1 kHz, 6 ohms, DIN AUDIO)
Inputs	VIDEO/AUX : 210 mV(adjustable) MD : 210mV (adjustable) MIC1, MIC2 : 1.4mV (10 kohms)
Outputs	U : SUPER WOOFERS: 2.2 V LH : SUPER WOOFERS: 2.6 V LINE OUT: 280 mV SPEAKERS: accept speakers of 6 ohms or more SURROUND SPEAKERS: accept speakers of 8 ohms to 16 ohms PHONES (stereo jack) : accepts headphones of 32 ohms or more

<Cassette deck section>

Track format	4 tracks, 2 channels stereo
Frequency response	CrO_2 tape : 50 Hz – 16000 Hz Normal tape : 50 Hz – 15000 Hz
Recording system	AC bias
Heads	Deck 1 : playback head x 1 Deck 2 : Recording/Playback head x 1/ erase head x 1

<Compact disc player section>

Laser	Semiconductor laser (λ =780 nm)
D-A converter	1 bit dual
Signal-to-noise ratio	85 dB (1 kHz, 0 dB)
Harmonic distortion	0.05 % (1 kHz, 0 dB)
Wow and flutter	Unmeasurable

<Speaker system SX-NA702 (For NSX-A707)>

Cabinet type	3 way, bass reflex (magnetic shielded type)
Speakers	Woofer : 160 mm ($6^3/_8$ in.) cone type Tweeter : 60 mm ($2^3/_5$ in.) ceramic type Super tweeter: 20 mm ($^{13}/_{16}$ in.) ceramic type
Impedance	6 ohms
Output sound pressure level	87 dB/W/m
Dimensions (W x H x D)	235 x 324 x 250mm ($9^3/_8$ X $12^7/_8$ X $9^7/_8$ in.)
Weight	3.2 kg (7 lbs 11 oz.)

<Speaker system SX-FNS705 (For NSX-S707)>

Cabinet type	3 way, bass reflex with surround speaker (magnetic shielded type)
Speakers	Woofer : 160 mm cone type Tweeter : 80 mm ceramic type Super tweeter : 20 mm ceramic type Surround speaker : 80 mm cone type
Impedance	Front speaker : 6 ohms Surround speaker : 8 ohms
Output sound pressure level	87 dB/W/m
Dimensions (W x H x D)	250 x 324 x 275 mm
Weight	3.9 kg

<Speaker system SX-ANS707 (For NSX-S708)>

Cabinet type	4 way, bass reflex with surround speaker (magnetic shielded type)
Speakers	Woofer : 160 mm cone type Mid-range : 80 mm cone type Tweeter : 50 mm cone type Super tweeter: 20 mm ceramic type Surround speaker : 60 mm cone type
Impedance	Front speaker : 6 ohms Surround speaker : 8 ohms
Output sound pressure level	87 dB/W/m
Dimensions (W x H x D)	250 x 427 x 294 mm
Weight	5.8 kg

<General>

Power requirements	U : 120 V AC, 60 Hz LH : 120 V/220-230 V/240 V AC (switchable), 50/60 Hz
Power consumption	U : 125 W LH : 170 W
Dimensions of main unit	260 x 324 x 348 mm ($10^1/_4$ X $12^7/_8$ X $13^3/_4$ in.)
Weight	U : 7.1 kg (15 lbs 10 oz.) LH : 8.1 kg

- Design and specifications are subject to change without notice.

- The word "BBE"and the "BBE symbol" are trademarks of BBE Sound, Inc.
  Under license from BBE Sound,Inc.

ACCESSORIES / PACKAGE LIST

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	88-NF6-902-010		IB,LH(ESP)M<LH>
1	88-NF6-903-010		IB,U(ESF)M<U>
2	87-006-225-010		AM LOOP ANT NC2
3	87-A90-064-010		FEEDER-ANT,FM (SHS)
⚠ 4	87-A90-312-010		PLUG,CONVERSION WTN-1157R1<LH>
5	87-NF6-635-010		RC UNIT,RC-7AS06

NOTE ON BEFORE STARTING REPAIR

1. Forced discharge of electrolytic capacitor of power supply block

When repair is going to be attempted in the set that uses relay circuit in the power supply block, electric potential is kept charged across the electrolytic capacitors (C101, 102) even though AC power cord is removed. If repair is attempted in this condition, the secondary defect can occur.
In order to prevent the secondary trouble, perform the following measures before starting repair work.

Discharge procedure

① Remove the AC power cord.
② Connect a discharging resistor at an end of lead wire that has clips at both ends. Connector the other end of the lead wire to metal chassis.
③ Contact the other end of the discharging resistor to the positive (+) side (+VH) of C101. (For two seconds)
④ Contact the same end of the discharging resistor as step ③ to the negative (-) side (-VH) of C102 in the same way. (For two seconds)
⑤ Check that voltage across C101 and C102 has decreased 1 V or less using a multimeter or an oscilloscope.

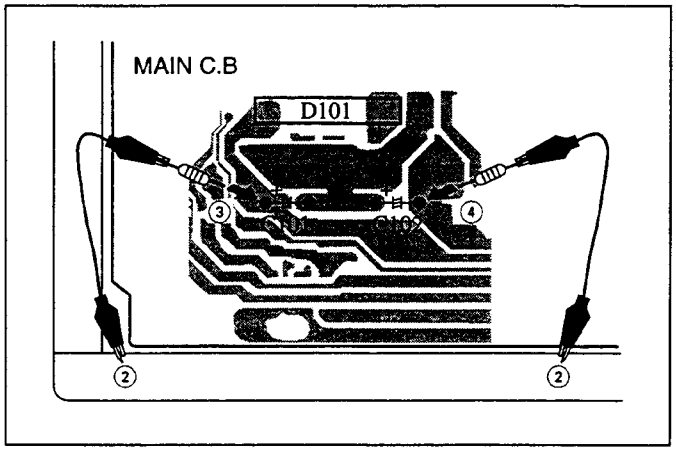

Fig-1

Select a discharging resistor referring to the following table.

Charging voltage (V) (C101, 102)	Discharging resistor (Ω)	Rated power (W)	Parts number
25-48	100	3	87-A00-247-090
49-140	220	5	87-A00-232-090

Note: The reference numbers (C101, C102) of the electrolytic capacitors can change depending on the models. Be sure to check the reference numbers of the charging capacitor on schematic diagram before starting the discharging work.

2. Check items before exchanging the MICROCOMPUTER

Be sure to check the following items before exchanging the MICROCOMPUTER. Exchange the MICROCOMPUTER after confirming that the MICROCOMPUTER is surely defective.

2-1. Regarding the HOLD terminal of the MICROCOMPUTER

When the HOLD terminal (INPUT) of the MICROCOMPUTER is "H", the MICROCOMPUTER is judged to be operating correctly. When this terminal is "L", the main power cannot be turned on. Therefore, be sure to check the terminal voltage of the HOLD terminal before exchange.
When the MICROCOMPUTER is not defective, the HOLD terminal can also go "L" when the POWER AMPLIFIER has any abnormalities that triggers the abnormality detection circuit on the MAIN C. B. that sets the HOLD terminal to "L".

- Good or no good judgment of the MICROCOMPUTER

① Turn on the AC main power.
② Confirm that the main power is turned on and the HOLD terminal of the MICROCOMPUTER keeps the "H" level or not.
③ When the HOLD terminal is "L" level, the abnormality detection circuit is judged to be working correctly and the MICROCOMPUTER is judged to be good.

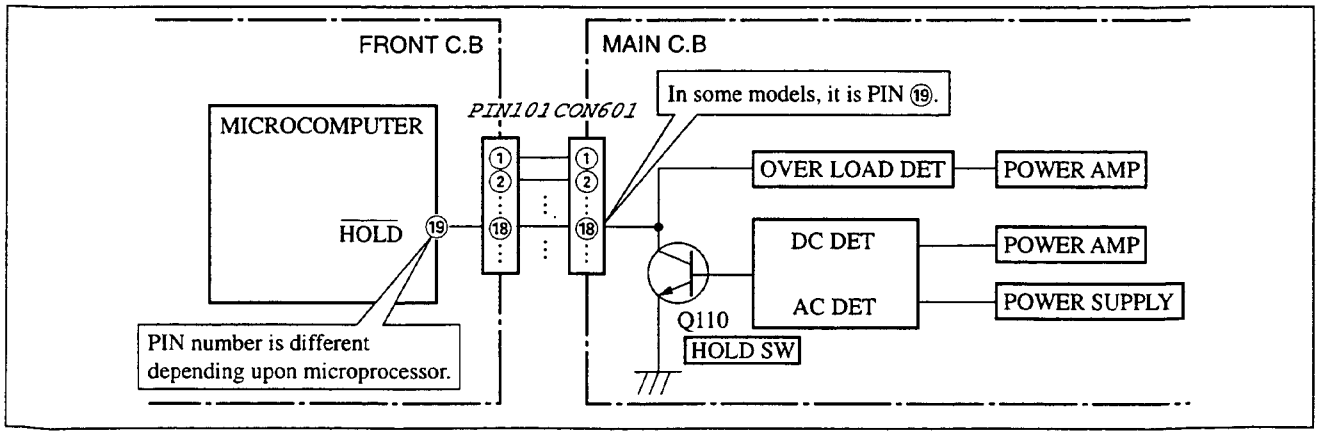

Fig-2-1

In such a case, check also if the POWER AMPLIFIER circuit or power supply circuit has any abnormalities or not.

2-2. Regarding reset

There are cases that the machine does not work correctly because the MICROCOMPUTER is not reset even though the AC power cord is re-inserted, or the software reset (pressing the STOP key + POWER key) is performed.
When the above described phenomenon occurs, it can leads to wrong judgment as if the MICROCOMPUTER is defective and to exchange the MICROCOMPUTER. In such a case, perform the forced-reset by the following procedure and check good or no good of the MICROCOMPUTER.

① Remove the AC power cord.

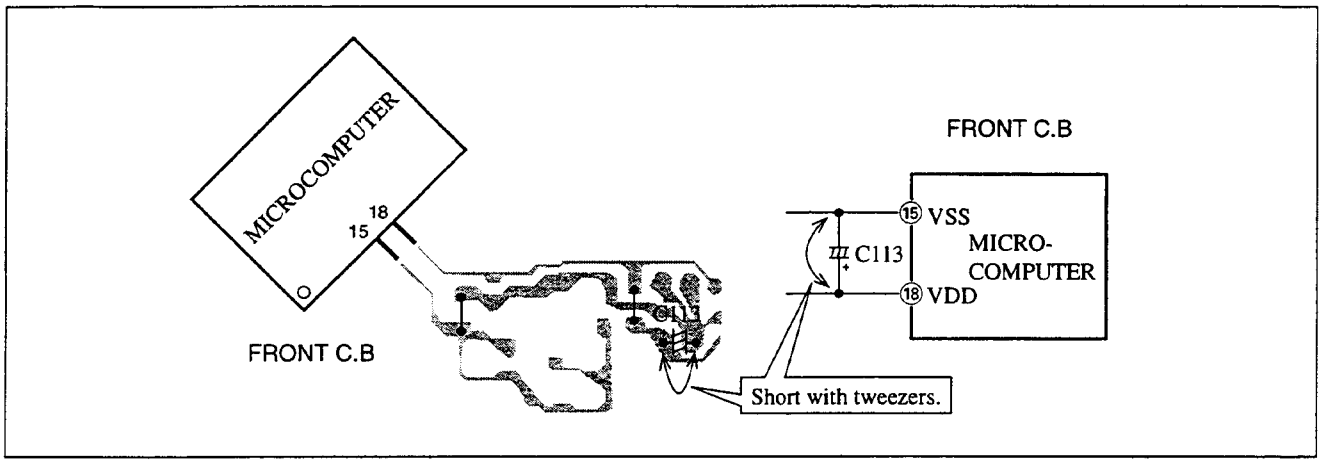

Fig-2-2

② Short the both ends of the electrolytic capacitor C113 that is connected to VDD of the MICROCOMPUTER with tweezers.
③ Connect the AC power cord again. If the MICROCOMPUTER returns to the normal operation, the MICROCOMPUTER is good.

Note: The reference number or MICROCOMPUTER pin number of transistor (Q110) and electrolytic capacitor (C113) can change depending on the models. Be sure to check the reference numbers on schematic diagram before starting the discharging work.

2-3. Confirmation of soldering state of MICROCOMPUTER

Check the soldering state of the MICROCOMPUTER in addition to the above described procedures. Be sure to exchange the MICROCOMPUTER after surely confirming that the trouble is not caused by poor soldering but the MICROCOMPUTER itself.

ELECTRICAL MAIN PARTS LIST

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
IC			
	88-NF5-615-040		C-IC,MSM6654A-521GS-KR1
	88-NF7-690-010		C-IC,LC866560W-5G73
	87-070-083-010		IC,GP1U281X
	87-A20-783-040		C-IC,BA7762AFS
	87-A20-083-010		IC,BA3835S
	87-A20-804-040		C-IC,NJM2152M
	87-017-915-080		IC,BU4094BCF
	87-A20-613-040		C-IC,BU9262AFS
	87-A20-954-040		C-IC,M62445FP-601
	87-017-888-080		IC,NJM4558MD
	86-NFZ-655-010		IC,LC72131D(Z)
	87-A20-438-010		IC,LA1837
	87-020-454-010		IC,DN6851
	87-070-289-040		C-IC,BU2092F
TRANSISTOR			
	87-A30-087-080		C-FET,2SK2158
	89-213-702-010		TR,2SB1370 (1.8W)
	87-026-263-080		C-TR,RN1410
	87-A30-071-080		C-TR,RT1N 144C
	87-026-610-080		TR,KTC3198GR
	87-A30-076-080		C-TR,2SC3052F
	87-A30-196-080		TR,2SC4115SRS
	87-A30-075-080		C-TR,2SA1235F
	87-026-609-080		TR,KTA1266GR
	87-A30-107-070		C-TR,CMBT5401
	87-A30-190-080		TR,CC5551
	87-A30-097-010		TR,FN 1016
	87-A30-098-010		TR,FP 1016
	87-A30-106-070		C-TR,CMBT5551
	87-A30-072-080		C-TR,RT1P 144C
	87-A30-074-080		C-TR,RT1P 141C
	87-026-232-080		C-TR,DTA 144WK
	87-A30-073-080		C-TR,RT1N 141C
	87-A30-105-080		C-TR,RT1P 441C
	89-112-965-080		TR,2SA1296 (0.75W)
	87-A30-085-070		C-TR,CSA1362GR
	89-327-143-080		TR,2SC2714 (0.1W)
	87-026-463-080		TR,2SA933SRS
	87-A30-162-010		FET,2SK2937
	87-026-580-080		C-TR,DTA123JK
DIODE			
	87-A40-470-080		DIODE,1SS254
	87-017-654-060		DIODE,GBU6JL 6131<LH>
	87-A40-269-080		C-DIODE,MC2836
	87-A40-509-080		ZENER,MTZJ6.8C
	87-070-136-080		ZENER,MTZJ5.1B
	87-A40-270-080		C-DIODE,MC2838
	87-070-274-080		DIODE,1N4003 SEM
	87-A40-341-080		ZENER,MTZJ 36 A
	87-A40-004-080		ZENER,MTZJ16A
	87-A40-488-080		DIODE,1SS244
	87-A40-345-080		ZENER,MTZJ10C
	87-A40-184-090		DIODE,RF34
	87-A40-002-080		ZENER,MTZJ5.1C
	87-A40-438-080		ZENER,MTZJ4.7A
	87-A40-234-080		ZENER,MTZJ5.6A
	87-A40-115-060		DIODE,RS603M
	87-017-931-080		ZENER,MTZJ5.6B
MAIN C.B			
C101	87-016-657-090		CAP,E 3300-71<LH>
C102	87-016-657-090		CAP,E 3300-71<LH>
C103	87-016-658-090		CAP,E 4700-35 SMG
C104	87-016-658-090		CAP,E 4700-35 SMG
C105	87-012-368-080		C-CAP,S 0.1-50 F
C106	87-012-368-080		C-CAP,S 0.1-50 F
C107	87-012-368-080		C-CAP,S 0.1-50 F
C108	87-012-368-080		C-CAP,S 0.1-50 F
C109	87-010-196-080		CHIP CAPACITOR,0.1-25
C110	87-010-196-080		CHIP CAPACITOR,0.1-25
C111	87-010-196-080		CHIP CAPACITOR,0.1-25
C112	87-010-196-080		CHIP CAPACITOR,0.1-25
C113	87-010-247-080		CAP, ELECT 100-50V
C116	87-010-247-080		CAP, ELECT 100-50V
C117	87-010-430-080		CAP, ELECT 100-63
C118	87-010-263-080		CAP, ELECT 100-10V
C119	87-010-260-080		CAP, ELECT 47-25V
C120	87-010-403-080		CAP, ELECT 3.3-50V
C121	87-012-140-080		CAP 470P
C122	87-010-263-080		CAP, ELECT 100-10V<U>
C123	87-010-247-080		CAP, ELECT 100-50V
C124	87-010-112-080		CAP, ELECT 100-16V
C125	87-010-235-080		CAP,E 470-16 SME
C151	87-016-520-090		CAP,E 3300-65
C152	87-016-520-090		CAP,E 3300-65
C209	87-010-546-080		CAP, ELECT 0.33-50V
C210	87-010-546-080		CAP, ELECT 0.33-50V
C211	87-010-183-080		C-CAP,S 2700P-50 B
C212	87-010-183-080		C-CAP,S 2700P-50 B
C213	87-010-186-080		CAP,CHIP 4700P
C214	87-010-186-080		CAP,CHIP 4700P
C215	87-010-403-080		CAP, ELECT 3.3-50V
C216	87-010-403-080		CAP, ELECT 3.3-50V
C217	87-010-260-080		CAP, ELECT 47-25V
C218	87-010-260-080		CAP, ELECT 47-25V
C223	87-010-197-080		CAP,CHIP 0.01 DM
C224	87-010-197-080		CAP,CHIP 0.01 DM
C229	87-A10-812-080		C-CAP,S 220P-200 J CH
C230	87-A10-812-080		C-CAP,S 220P-200 J CH
C233	87-010-544-080		CAP, ELECT 0.1-50V
C234	87-010-544-080		CAP, ELECT 0.1-50V
C235	87-010-196-080		CHIP CAPACITOR,0.1-25
C237	87-012-368-080		C-CAP,S 0.1-50 F
C238	87-012-368-080		C-CAP,S 0.1-50 F
C239	87-012-368-080		C-CAP,S 0.1-50 F
C240	87-012-368-080		C-CAP,S 0.1-50 F
C243	87-010-178-080		CHIP,CAP 1000P
C244	87-010-178-080		CHIP,CAP 1000P
C247	87-012-154-080		C-CAP,S 150P-50 CH
C248	87-012-154-080		C-CAP,S 150P-50 CH
C280	87-010-182-080		C-CAP,S 2200P-50 B
C298	87-010-196-080		CHIP CAPACITOR,0.1-25
C301	87-010-318-080		C-CAP,S 47P-50 CH
C302	87-010-318-080		C-CAP,S 47P-50 CH
C303	87-012-157-080		C-CAP,S 330P-50 CH
C304	87-012-157-080		C-CAP,S 330P-50 CH
C305	87-012-145-080		CAP, CHIP S 270P CH
C306	87-012-145-080		CAP, CHIP S 270P CH
C307	87-010-196-080		CHIP CAPACITOR,0.1-25
C309	87-010-196-080		CHIP CAPACITOR,0.1-25
C310	87-010-196-080		CHIP CAPACITOR,0.1-25
C311	87-010-198-080		CAP, CHIP 0.022
C312	87-010-198-080		CAP, CHIP 0.022
C313	87-010-178-080		CHIP CAP 1000P
C314	87-010-178-080		CHIP CAP 1000P
C315	87-010-178-080		CHIP CAP 1000P
C316	87-010-178-080		CHIP CAP 1000P
C321	87-016-492-080		C-CAP,S 0.33-16 FZ
C322	87-016-492-080		C-CAP,S 0.33-16 FZ
C324	87-010-260-080		CAP, ELECT 47-25V
C325	87-010-370-080		CAP,E 330-6.3 SME
C327	87-010-404-080		CAP, ELECT 4.7-50V
C328	87-010-404-080		CAP, ELECT 4.7-50V
C332	87-010-196-080		CHIP CAPACITOR,0.1-25

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!
WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserståling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!
Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyt-täjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

VARNING!
Om apparaten används på annat sätt än vad som specificeras i denna bruksanvising, kan användaren utsättas för osynling laserstrålning, som överskrider gränsen för laserklass 1.

CAUTION
Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION
L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!
Usynlig laserståling ved åbning, når sikkerhedsafbrydereer ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.
The CLASS 1 LASER PRODUCT label is located on the rear exterior.

CLASS 1	LASER PRODUCT
KLASSE 1	LASER PRODUKT
LUOKAN 1	LASER LAITE
KLASS 1	LASER APPARAT

Precaution to replace Optical block

(KSS – 213F)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

1) After the connection, remove solder shown in right figure.

PICK-UP Assy P.C.B

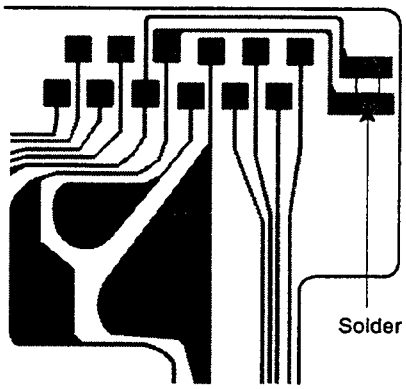

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
C335	87-010-401-080		CAP, ELECT 1-50V
C336	87-010-401-080		CAP, ELECT 1-50V
C337	87-010-196-080		CHIP CAPACITOR,0.1-25
C339	87-010-196-080		CHIP CAPACITOR,0.1-25
C340	87-010-196-080		CHIP CAPACITOR,0.1-25
C351	87-012-140-080		CAP 470P
C352	87-012-140-080		CAP 470P
C354	87-010-175-080		CAP 560P
C355	87-012-349-080		C-CAP,S 1000P-50 CH
C356	87-010-260-080		CAP, ELECT 47-25V
C357	87-010-197-080		CAP, CHIP 0.01 DM
C358	87-010-183-080		C-CAP,S 2700P-50 B
C359	87-010-183-080		C-CAP,S 2700P-50 B
C360	87-010-183-080		C-CAP,S 2700P-50 B
C370	87-010-196-080		CHIP CAPACITOR,0.1-25
C373	87-016-083-080		C-CAP,S 0.15-16 RK
C374	87-016-083-080		C-CAP,S 0.15-16 RK
C378	87-010-196-080		CHIP CAPACITOR,0.1-25
C379	87-010-382-080		CAP, ELECT 22-25V
C380	87-010-382-080		CAP, ELECT 22-25V
C381	87-010-197-080		CAP, CHIP 0.01 DM
C382	87-010-312-080		C-CAP,S 15P-50 CH
C383	87-010-197-080		CAP, CHIP 0.01 DM
C384	87-010-402-080		CAP, ELECT 2.2-50V
C386	87-010-196-080		CHIP CAPACITOR,0.1-25
C387	87-012-145-080		CAP, CHIP S 270P CH
C401	87-010-405-080		CAP, ELECT 10-50V
C402	87-010-405-080		CAP, ELECT 10-50V
C403	87-010-182-080		C-CAP,S 2200P-50 B
C404	87-010-182-080		C-CAP,S 2200P-50 B
C405	87-010-193-080		CHIP CAPACITOR,0.033
C406	87-010-193-080		CHIP CAPACITOR,0.033
C407	87-010-405-080		CAP, ELECT 10-50V
C408	87-010-405-080		CAP, ELECT 10-50V
C409	87-010-380-080		CAP, ELECT 47-16V
C410	87-010-380-080		CAP, ELECT 47-16V
C411	87-010-405-080		CAP, ELECT 10-50V
C412	87-010-112-080		CAP, ELECT 100-16V
C415	87-010-184-080		CHIP CAPACITOR 3300P (K)
C416	87-010-184-080		CHIP CAPACITOR 3300P (K)
C457	87-010-400-080		CAP, ELECT 0.47-50V
C458	87-010-400-080		CAP, ELECT 0.47-50V
C516	87-010-196-080		CHIP CAPACITOR,0.1-25
C601	87-010-180-080		C-CER 1500P
C602	87-010-180-080		C-CER 1500P
C613	87-016-081-080		C-CAP,S 0.1-16 RK
C614	87-016-081-080		C-CAP,S 0.1-16 RK
C619	87-010-185-080		C-CAP,S 3900P-50 B
C620	87-010-185-080		C-CAP,S 3900P-50 B
C621	87-010-401-080		CAP, ELECT 1-50V
C622	87-010-401-080		CAP, ELECT 1-50V
C625	87-010-405-080		CAP, ELECT 10-50V
C626	87-010-405-080		CAP, ELECT 10-50V
C629	87-010-405-080		CAP, ELECT 10-50V
C630	87-010-213-080		CAP, CHIP 0.015-25 KB GRM
C631	87-010-992-080		CHIP-CAP,S 0.047-25B
C632	87-010-263-080		CAP, ELECT 100-10V
C633	87-010-263-080		CAP, ELECT 100-10V
C634	87-010-196-080		CHIP CAPACITOR,0.1-25
C635	87-010-196-080		CHIP CAPACITOR,0.1-25
C636	87-010-194-080		CAP, CHIP 0.047
C637	87-010-183-080		C-CAP,S 2700P-50 B
C641	87-010-196-080		CHIP CAPACITOR,0.1-25
C667	87-010-196-080		CHIP CAPACITOR,0.1-25
C701	87-010-381-080		CAP, ELECT 330-16V
C702	87-010-404-080		CAP, ELECT 4.7-50V
C703	87-010-197-080		CAP, CHIP 0.01 DM
C704	87-010-197-080		CAP, CHIP 0.01 DM
C709	87-010-322-080		C-CAP,S 100P-50 CH
C711	87-010-263-080		CAP, ELECT 100-10V
C712	87-010-196-080		CHIP CAPACITOR,0.1-25
C713	87-010-197-080		CAP, CHIP 0.01 DM
C714	87-010-197-080		CAP, CHIP 0.01 DM
C721	87-010-312-080		C-CAP,S 15P-50 CH
C722	87-010-312-080		C-CAP,S 15P-50 CH
C723	87-010-178-080		CHIP CAP 1000P
C725	87-010-178-080		CHIP CAP 1000P
C727	87-010-196-080		CHIP CAPACITOR,0.1-25
C728	87-010-248-080		CAP, ELECT 220-10V
C755	87-010-197-080		CAP, CHIP 0.01 DM
C756	87-010-197-080		CAP, CHIP 0.01 DM
C757	87-010-318-080		C-CAP,S 47P-50 CH
C758	87-010-149-080		C-CAP,S 5P-50 CH
C759	87-012-156-080		C-CAP,S 220P-50 CH
C760	87-012-156-080		C-CAP,S 220P-50 CH
C761	87-010-196-080		CHIP CAPACITOR,0.1-25
C762	87-010-197-080		CAP, CHIP 0.01 DM
C763	87-010-194-080		CAP, CHIP 0.047
C764	87-010-319-080		C-CAP,S 56P-50 CH
C765	87-010-197-080		CAP, CHIP 0.01 DM
C766	87-010-197-080		CAP, CHIP 0.01 DM
C767	87-010-405-080		CAP, ELECT 10-50V
C768	87-010-197-080		CAP, CHIP 0.01 DM
C769	87-010-408-080		CAP, ELECT 47-50V
C770	87-015-821-080		C-CAP 0.047
C771	87-010-407-080		CAP, ELECT 33-50V
C772	87-010-194-080		CAP, CHIP 0.047
C773	87-010-196-080		CHIP CAPACITOR,0.1-25
C774	87-010-263-080		CAP, ELECT 100-10V
C775	87-010-404-080		CAP, ELECT 4.7-50V
C776	87-010-197-080		CAP, CHIP 0.01 DM
C777	87-010-400-080		CAP, ELECT 0.47-50V
C778	87-010-401-080		CAP, ELECT 1-50V
C779	87-010-401-080		CAP, ELECT 1-50V
C780	87-010-196-080		CHIP CAPACITOR,0.1-25
C781	87-010-405-080		CAP, ELECT 10-50V
C782	87-010-405-080		CAP, ELECT 10-50V
C783	87-015-819-080		CAPACITOR,0.01
C784	87-010-197-080		CAP, CHIP 0.01 DM
C785	87-010-403-080		CAP, ELECT 3.3-50V
C786	87-010-403-080		CAP, ELECT 3.3-50V
C787	87-010-181-080		CAP,CHIP S 1800P
C788	87-010-181-080		CAP,CHIP S 1800P
C789	87-010-179-080		CAP,CHIP S B1200P
C790	87-010-179-080		CAP,CHIP S B1200P
C791	87-010-405-080		CAP, ELECT 10-50V
C793	87-010-177-080		C-CAP,S 820P-50 SL
C794	87-010-406-080		CAP, ELECT 22-50
C795	87-010-596-080		CAP, S 0.047-16
C796	87-010-403-080		CAP, ELECT 3.3-50V
C799	87-010-194-080		CAP, CHIP 0.047
C812	87-010-197-080		CAP, CHIP 0.01 DM
C814	87-010-197-080		CAP, CHIP 0.01 DM
C820	87-010-408-080		CAP, ELECT 47-50V
C821	87-010-197-080		CAP, CHIP 0.01 DM
C822	87-010-197-080		CAP, CHIP 0.01 DM
C823	87-010-197-080		CAP, CHIP 0.01 DM
C828	87-010-196-080		CHIP CAPACITOR,0.1-25
C829	87-010-196-080		CHIP CAPACITOR,0.1-25
C959	87-010-196-080		CHIP CAPACITOR,0.1-25
C960	87-010-196-080		CHIP CAPACITOR,0.1-25
C961	87-010-152-080		C-CAP,S 8P-50 CH
CF801	87-008-261-010		FILTER, SFE10.7MA5-A
CF802	87-008-261-010		FILTER, SFE10.7MA5-A
FB601	87-A50-190-080		C-COIL,S BLM21A102S
FC602	88-906-241-110		FF-CABLE,6P 1.25
FFE801	A8-8ZA-190-030		8ZA-1 FEUNM
J201	87-A60-488-010		JACK,DIA6.3 BLK ST W/SW KM16AT
J202	87-A60-547-010		JACK,PIN 4P R/W/B
J203	87-033-240-010		TERMINAL,SP 4P32SV1-05

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
J601	87-A60-402-010		JACK,PIN 6P R/W HSP-246V30
J801	87-033-239-010		TERMINAL,HSP-154V-2
L201	87-003-383-010		COIL,1UH-S
L202	87-003-383-010		COIL,1UH-S
L301	87-A50-049-010		COIL,TRAP 85K(COI)
L302	87-A50-049-010		COIL,TRAP 85K(COI)
L351	87-007-342-010		COIL,OSC 85K BIAS
L771	87-A50-266-010		COIL,FM DET-2N(TOK)
L772	87-A90-733-010		FLTR,PCFAZH-450 (TOK)
L781	87-005-847-080		COIL,2.2UH(CECS)
L832	86-NFZ-694-080		COIL,2.2UH K CECS
L981	87-NF4-650-010		COIL,AM PACK 4N(TOK)
R123	87-022-200-080		RESISTOR, METAL 0.56 1W<U>
R237	87-A00-262-080		RES,M/F 0.15-2W J
R238	87-A00-262-080		RES,M/F 0.15-2W J
R239	87-A00-262-080		RES,M/F 0.15-2W J
R240	87-A00-262-080		RES,M/F 0.15-2W J
RY101	87-045-389-010		RELAY, 12V OSA-SS-212DM5
RY201	87-A90-713-010		RELAY, 12V DQ12D1
SFR351	87-A90-433-080		SFR,50K H NVZ6TLTA
SFR352	87-A90-433-080		SFR,50K H NVZ6TLTA
W104	85-NF5-628-010		F-CABLE 7P-2.5
X721	87-A70-061-010		VIB,XTAL 4.500MHZ CSA-309

FRONT C.B

C101	87-010-075-040		CAP,E 10-16 5L
C102	87-010-196-080		CHIP CAPACITOR,0.1-25
C103	87-010-196-080		CHIP CAPACITOR,0.1-25
C104	87-010-494-040		CAP,E 1-50 GAS
C105	87-010-178-080		CHIP CAP 1000P
C106	87-A10-189-040		CAP,E 220-10
C107	87-010-197-080		CAP, CHIP 0.01 DM
C108	87-010-196-080		CHIP CAPACITOR,0.1-25
C109	87-010-194-080		CAP, CHIP 0.047
C110	87-012-157-080		C-CAP,S 330P-50 CH
C111	87-010-320-080		CHIP CAP 68P
C112	87-010-312-080		C-CAP,S 15P-50 CH
C113	87-010-316-080		C-CAP,S 33P-50 CH
C114	87-010-182-080		C-CAP,S 2200P-50 B
C115	87-010-182-080		C-CAP,S 2200P-50 B
C116	87-010-405-040		CAP,E 10-50
C117	87-012-157-080		C-CAP,S 330P-50 CH
C118	87-010-196-080		CHIP CAPACITOR,0.1-25
C119	87-010-196-080		CHIP CAPACITOR,0.1-25
C120	87-010-196-080		CHIP CAPACITOR,0.1-25
C121	87-010-194-080		CAP, CHIP 0.047
C122	87-010-194-080		CAP, CHIP 0.047
C125	87-010-196-080		CHIP CAPACITOR,0.1-25
C151	87-010-197-080		CAP, CHIP 0.01 DM
C201	87-010-178-080		CHIP CAP 1000P
C202	87-010-194-080		CAP, CHIP 0.047
C203	87-010-408-040		CAP,E 47-50 SME
C204	87-010-404-040		CAP,E 4.7-50 SME
C205	87-010-404-040		CAP,E 4.7-50 SME
C371	87-010-196-080		CHIP CAPACITOR,0.1-25
C372	87-010-196-080		CHIP CAPACITOR,0.1-25
C373	87-010-196-080		CHIP CAPACITOR,0.1-25
C375	87-010-196-080		CHIP CAPACITOR,0.1-25
C376	87-012-158-080		C-CAP,S 390P-50 CH
C377	87-010-196-080		CHIP CAPACITOR,0.1-25
C378	87-010-196-080		CHIP CAPACITOR,0.1-25
C402	87-010-196-080		CHIP CAPACITOR,0.1-25
C404	87-010-196-080		CHIP CAPACITOR,0.1-25
C406	87-010-196-080		CHIP CAPACITOR,0.1-25
C408	87-010-196-080		CHIP CAPACITOR,0.1-25
C501	87-010-319-080		C-CAP,S 56P-50 CH
C502	87-010-319-080		C-CAP,S 56P-50 CH
C503	87-012-393-080		C-CAP,S 0.22-16 R K
C504	87-010-197-080		CAP, CHIP 0.01 DM
C505	87-010-180-080		C-CER 1500P
C506	87-010-213-080		C-CAP,S 0.015-50 B
C507	87-010-213-080		C-CAP,S 0.015-50 B
C508	87-010-197-080		CAP, CHIP 0.01 DM
C509	87-010-181-080		CAP,CHIP S 1800P
C510	87-010-196-080		CHIP CAPACITOR,0.1-25
C511	87-010-544-040		CAP,E 0.1-50 SME
C512	87-010-374-040		CAP,E 47-10
C513	87-010-401-040		CAP,E 1-50 SME
C514	87-010-401-040		CAP,E 1-50 SME
C515	87-010-183-080		C-CAP,S 2700P-50 B
C516	87-010-183-080		C-CAP,S 2700P-50 B
C518	87-010-196-080		CHIP CAPACITOR,0.1-25
C519	87-010-263-040		CAP,E 100-10
C523	87-012-141-080		CHIP-CAPACITOR,0.22-16F
C601	87-010-405-040		CAP,E 10-50
C602	87-010-186-080		CAP,CHIP 4700P
C603	87-010-405-040		CAP,E 10-50
C604	87-010-406-040		CAP,E 22-50 SME
C605	87-010-196-080		CHIP CAPACITOR,0.1-25
C606	87-010-322-080		C-CAP,S 100P-50 CH
C607	87-010-321-080		CHIP CAPACITOR,82P(J)
C608	87-010-196-080		CHIP CAPACITOR,0.1-25
C609	87-010-545-040		CAP,E 0.22-50 SME
C611	87-010-177-080		C-CAP,S 820P-50 SL
C614	87-010-248-040		CAP,E 220-10 SME
C651	87-010-401-040		CAP,E 1-50 SME
C652	87-010-196-080		CHIP CAPACITOR,0.1-25
C653	87-010-196-080		CHIP CAPACITOR,0.1-25
C901	87-010-263-040		CAP,E 100-10
C902	87-010-196-080		CHIP CAPACITOR,0.1-25
C903	87-010-313-080		CAP, CHIP 18P
C904	87-012-155-080		C-CAP 180P-50CH
C905	87-010-400-040		CAP,E 0.47-50
FB601	87-008-372-080		FILTER, EMI BL OIRNI
FC301	88-906-241-110		FF-CABLE,6P-1.25
FC501	88-915-221-110		FF-CABLE,15P-1.25 220MM
FC801	85-NF5-618-010		CABLE,FFC 13P-1.25
FL201	88-NF6-611-010		FL,BJ610GK
J601	87-A60-284-010		JACK,3.5MO (MSC)
J602	87-A60-284-010		JACK,3.5MO (MSC)
L501	87-005-212-080		COIL,220UH
L901	87-007-340-010		COIL,CLOCK 4.19MHZ
LED401	87-070-197-080		LED,SLP7118C-51-S-T1
LED402	87-070-197-080		LED,SLP7118C-51-S-T1
LED403	87-070-197-080		LED,SLP7118C-51-S-T1
LED404	87-070-197-080		LED,SLP7118C-51-S-T1
LED405	87-070-197-080		LED,SLP7118C-51-S-T1
LED406	87-070-197-080		LED,SLP7118C-51-S-T1
LED407	87-070-197-080		LED,SLP7118C-51-S-T1
LED408	87-070-197-080		LED,SLP7118C-51-S-T1
LED409	87-070-197-080		LED,SLP7118C-51-S-T1
LED410	87-070-197-080		LED,SLP7118C-51-S-T1
LED411	87-070-201-080		LED,SLP9118C-51-S-T1
LED412	87-070-201-080		LED,SLP9118C-51-S-T1
LED413	87-070-201-080		LED,SLP9118C-51-S-T1
LED414	87-070-201-080		LED,SLP9118C-51-S-T1
LED415	87-070-201-080		LED,SLP9118C-51-S-T1
LED417	87-070-281-080		LED,SLZ736A-25-S-T1
LED419	87-070-281-080		LED,SLZ736A-25-S-T1
LED421	87-070-281-080		LED,SLZ736A-25-S-T1
LED423	87-070-281-080		LED,SLZ736A-25-S-T1
LED425	87-070-281-080		LED,SLZ736A-25-S-T1
LED427	87-070-281-080		LED,SLZ736A-25-S-T1
LED428	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN
LED429	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN
LED430	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN
LED431	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN
LED432	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN
LED433	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
LED434	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN
LED435	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN
LED436	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN
LED437	87-A40-446-040		LED,SLP-7131F-81H-S-T1 P-GRN
LED444	87-070-278-010		LED,SLZ-738A-24-S
LED445	87-070-290-010		LED,SLZ 936-30-S
LED446	87-070-278-010		LED,SLZ-738A-24-S
LED447	87-070-278-010		LED,SLZ-738A-24-S
LED448	87-070-290-010		LED,SLZ 936-30-S
LED449	87-070-278-010		LED,SLZ-738A-24-S
S101	87-A90-792-010		SW,RTRY EC12E12244 ENCORDER
S102	87-A90-535-010		SW,RTRY EC16B24304
S301	87-A90-095-080		SW,TACT EVQ11G04M
S302	87-A90-095-080		SW,TACT EVQ11G04M
S303	87-A90-095-080		SW,TACT EVQ11G04M
S304	87-A90-095-080		SW,TACT EVQ11G04M
S305	87-A90-095-080		SW,TACT EVQ11G04M
S306	87-A90-095-080		SW,TACT EVQ11G04M
S307	87-A90-095-080		SW,TACT EVQ11G04M
S308	87-A90-095-080		SW,TACT EVQ11G04M
S309	87-A90-095-080		SW,TACT EVQ11G04M
S310	87-A90-095-080		SW,TACT EVQ11G04M
S311	87-A90-095-080		SW,TACT EVQ11G04M
S312	87-A90-095-080		SW,TACT EVQ11G04M
S313	87-A90-095-080		SW,TACT EVQ11G04M
S321	87-A90-095-080		SW,TACT EVQ11G04M
S322	87-A90-095-080		SW,TACT EVQ11G04M
S323	87-A90-095-080		SW,TACT EVQ11G04M
S324	87-A90-095-080		SW,TACT EVQ11G04M
S325	87-A90-095-080		SW,TACT EVQ11G04M
S326	87-A90-095-080		SW,TACT EVQ11G04M
S327	87-A90-095-080		SW,TACT EVQ11G04M
S333	87-A90-095-080		SW,TACT EVQ11G04M
S341	87-A90-095-080		SW,TACT EVQ11G04M
S342	87-A90-095-080		SW,TACT EVQ11G04M
S343	87-A90-095-080		SW,TACT EVQ11G04M
S344	87-A90-095-080		SW,TACT EVQ11G04M
S345	87-A90-095-080		SW,TACT EVQ11G04M
S346	87-A90-095-080		SW,TACT EVQ11G04M
S347	87-A90-095-080		SW,TACT EVQ11G04M
S348	87-A90-095-080		SW,TACT EVQ11G04M
S349	87-A90-095-080		SW,TACT EVQ11G04M
S350	87-A90-095-080		SW,TACT EVQ11G04M
X101	87-A70-070-080		VIB,CER 5.76MHZ CRHF
SW C.B			
LED438	87-070-197-080		LED,SLP7118C-51-S-T1
LED439	87-070-197-080		LED,SLP7118C-51-S-T1
LED440	87-070-197-080		LED,SLP7118C-51-S-T1
LED441	87-070-197-080		LED,SLP7118C-51-S-T1
LED442	87-070-197-080		LED,SLP7118C-51-S-T1
LED443	87-070-197-080		LED,SLP7118C-51-S-T1
S351	87-A90-095-080		SW,TACT EVQ11G04M
S352	87-A90-095-080		SW,TACT EVQ11G04M
S353	87-A90-095-080		SW,TACT EVQ11G04M
S354	87-A90-095-080		SW,TACT EVQ11G04M
S355	87-A90-095-080		SW,TACT EVQ11G04M
AC1 C.B			
⚠ FC1	87-033-147-010		FUSE CLAMP,MT-20<LH>
⚠ F101	87-035-368-010		FUSE,4A 250V<LH>
⚠ F101	87-035-491-010		FUSE,6A 125V D UL<U>
⚠ F102	87-035-368-010		FUSE,4A 250V<LH>
⚠ FC2	87-033-147-010		FUSE CLAMP,MT-20<LH>
⚠ FC3	87-033-147-010		FUSE CLAMP,MT-20<LH>
⚠ FC4	87-033-147-010		FUSE CLAMP,MT-20<LH>
⚠ FC101	87-A90-505-080		FUSE CLAMP,TP00351-51<U>
⚠ FC102	87-A90-505-080		FUSE CLAMP,TP00351-51<U>

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
⚠ PT101	88-NF6-624-010		PT,8NF-6 LH<LH>
⚠ PT101	88-NF6-621-010		PT,8NF-6 U<U>
⚠ SW101	87-A90-165-010		SW,SL 1-2-3 SWS2301<LH>
⚠ T1	87-A60-317-010		TERMINAL, 1P MSC<LH>
⚠ T101	87-A60-317-010		TERMINAL, 1P MSC<U>
⚠ T102	87-A60-317-010		TERMINAL, 1P MSC<U>
⚠ T2	87-A60-317-010		TERMINAL, 1P MSC<LH>
AC2 C.B			
⚠ PR101	87-026-691-080		FUSE,10A 125V 251<U>
⚠ PR101	87-026-682-080		PROTECTOR,10A 60V491<LH>
⚠ PR102	87-026-691-080		FUSE,10A 125V 251<U>
⚠ PR102	87-026-682-080		PROTECTOR,10A 60V491<LH>
⚠ PR103	87-026-691-080		FUSE,10A 125V 251<U>
⚠ PR103	87-026-682-080		PROTECTOR,10A 60V491<LH>
⚠ PR104	87-026-691-080		FUSE,10A 125V 251<U>
⚠ PR104	87-026-682-080		PROTECTOR,10A 60V491<LH>
⚠ W104	85-NF5-628-010		F-CABLE,7P-2.5
DECK C.B			
CON105	87-099-756-019		CONN, 15P 9604 S F
SFR1	87-024-581-019		SFR,3.3K DIA 6H
SOL1	82-ZM1-618-410		SOL ASSY, 27
SOL2	82-ZM1-618-410		SOL ASSY, 27
SW1	87-A90-248-019		SW,MICRO ESE11SH2CXQ
SW2	87-A90-248-019		SW,MICRO ESE11SH2CXQ
SW3	87-A90-248-019		SW,MICRO ESE11SH2CXQ
SW4	87-036-110-010		SW,MICRO SPPB62
SW5	87-036-110-010		SW,MICRO SPPB62
SW6	87-036-110-010		SW,MICRO SPPB62
SW8	87-A90-248-019		SW,MICRO ESE11SH2CXQ
SW9	87-A90-248-019		SW,MICRO ESE11SH2CXQ
W001	82-ZM3-601-019		RBN,CORD,4P-75
HEAD-1 C.B			
HEAD-2 C.B			
CON351	87-NF6-616-010		CONN ASSY,8P-RPB

○ チップ抵抗部品コード／CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち
Chip Resistor Part Coding

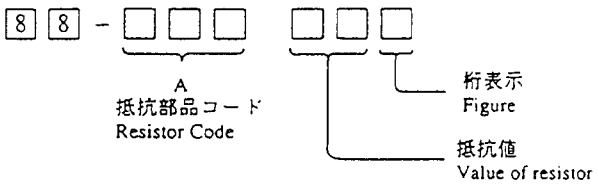

チップ抵抗
Chip resistor

容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法／Dimensions (mm) 外形／Form	L	W	t	抵抗コード：A Resistor Code: A
1／16W	1608	±5%	CJ		1.6	0.8	0.45	108
1／10W	2125	±5%	CJ		2	1.25	0.45	118
1／8W	3216	±5%	CJ		3.2	1.6	0.55	128

TRANSISTOR ILLUSTRATION

E C B

KTA1266GR
KTC3198GR

E C B

CC5551

E C B

2SA1296

B C E

2SB1370
FN1016
FP1016



E C B

2SA933
2SC4115

G D S

2SK2937

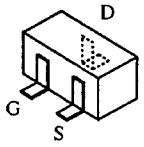

2SK2158

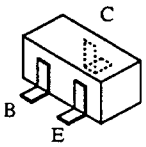

2SA1235F
2SC2714
2SC3052F
CMBT5401
CMBT5551
CSA1362GR
DTA123JK
DTA144WK
RN1410
RT1N141C
RT1N144C
RT1P141C
RT1P144C
RT1P441C

BLOCK DIAGRAM (MAIN / FRONT)

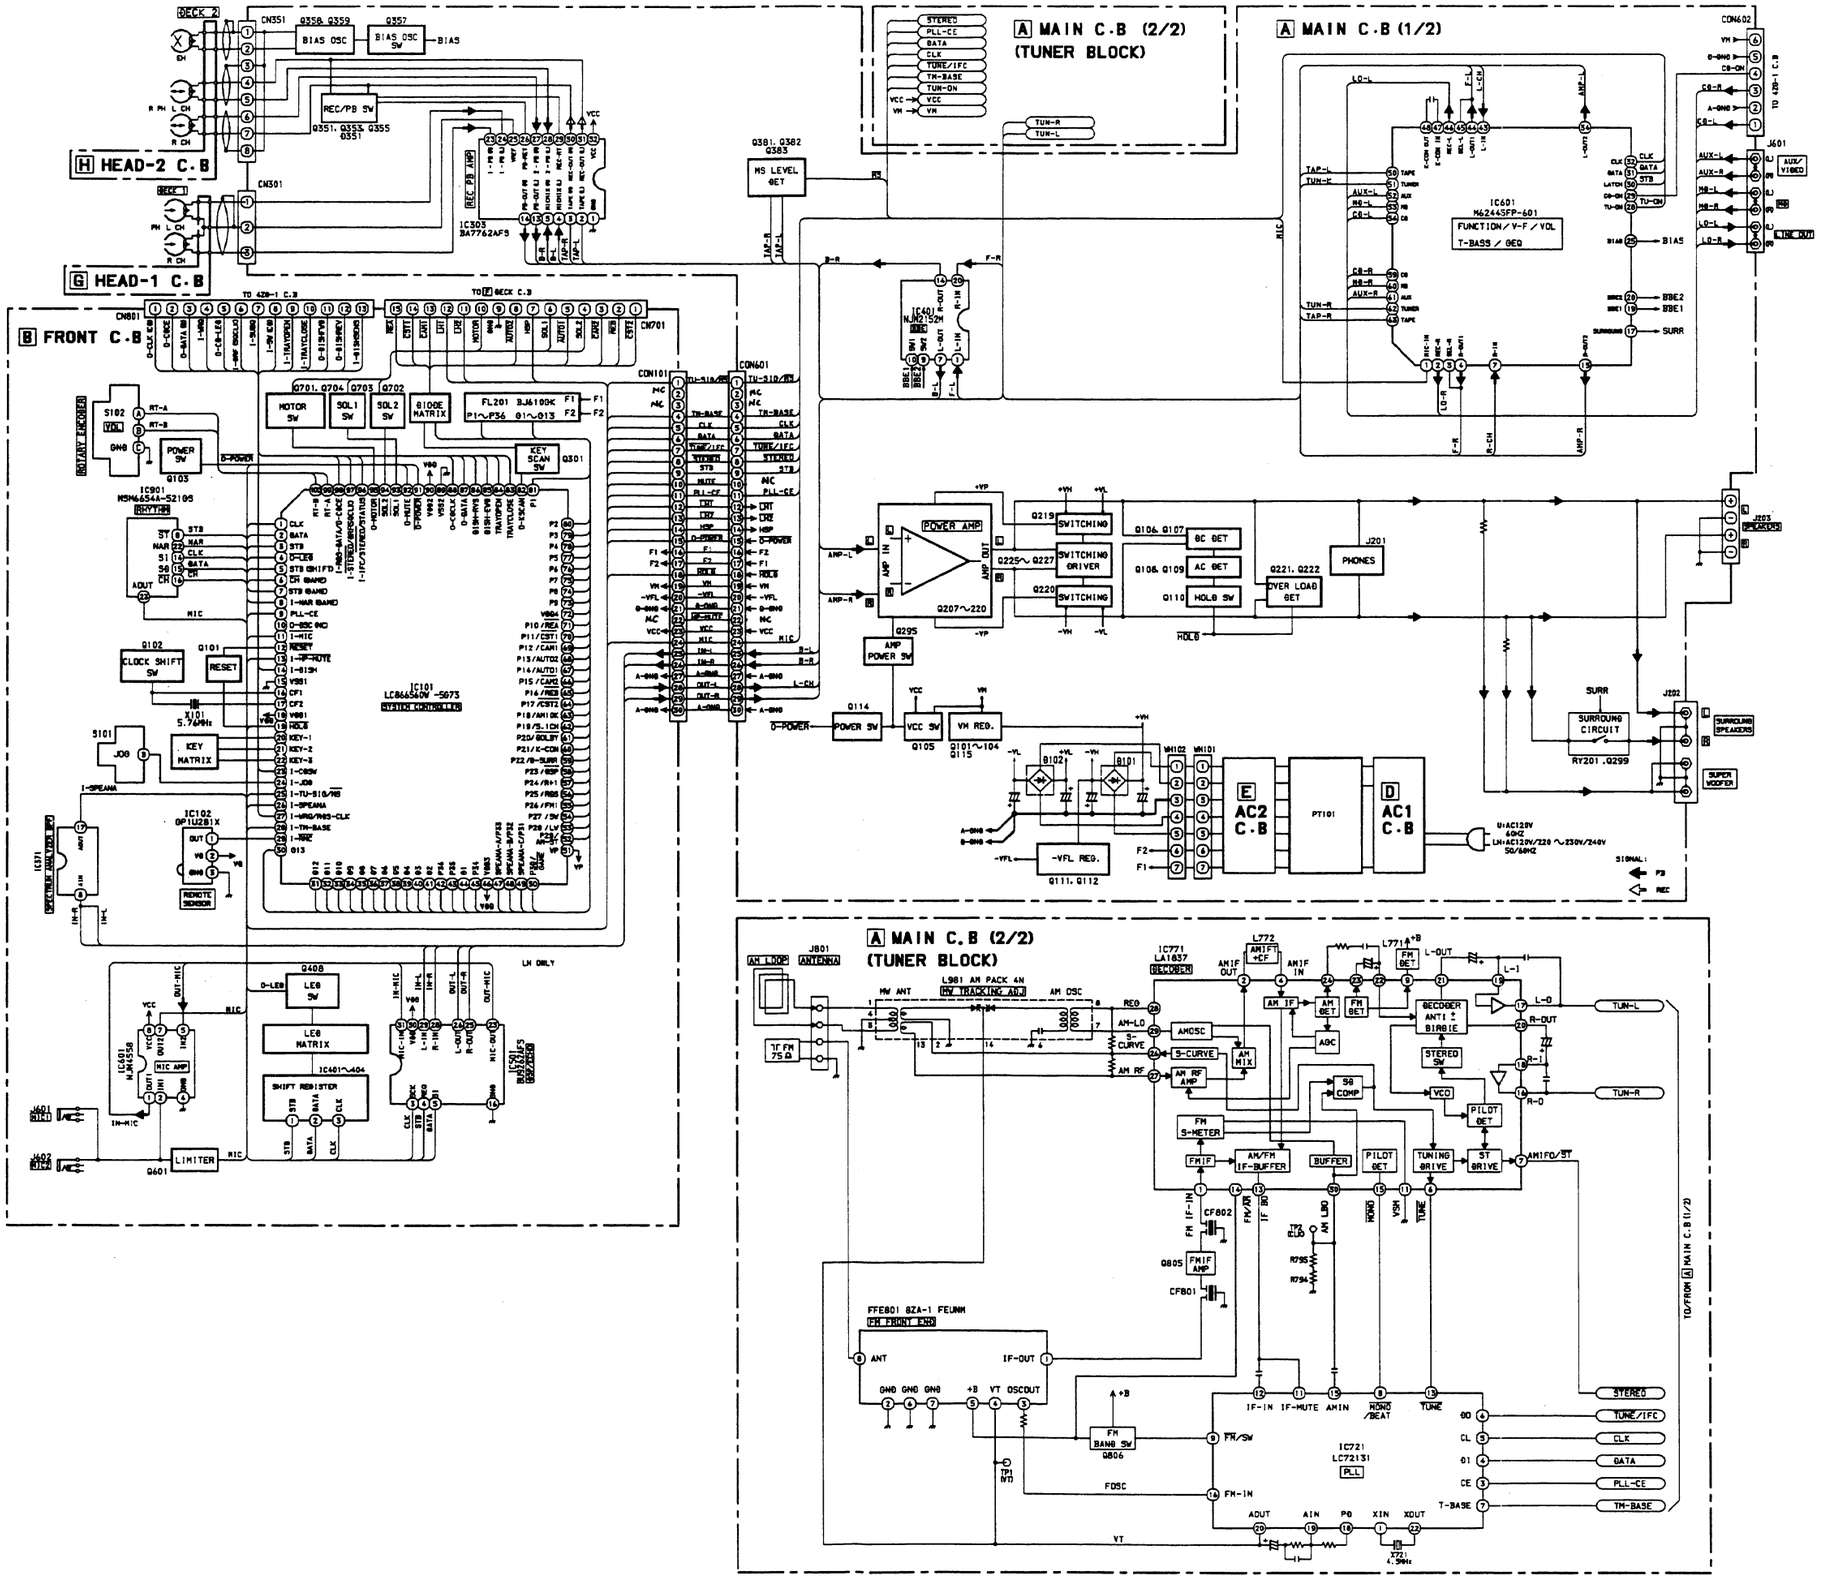

A MAIN C.B

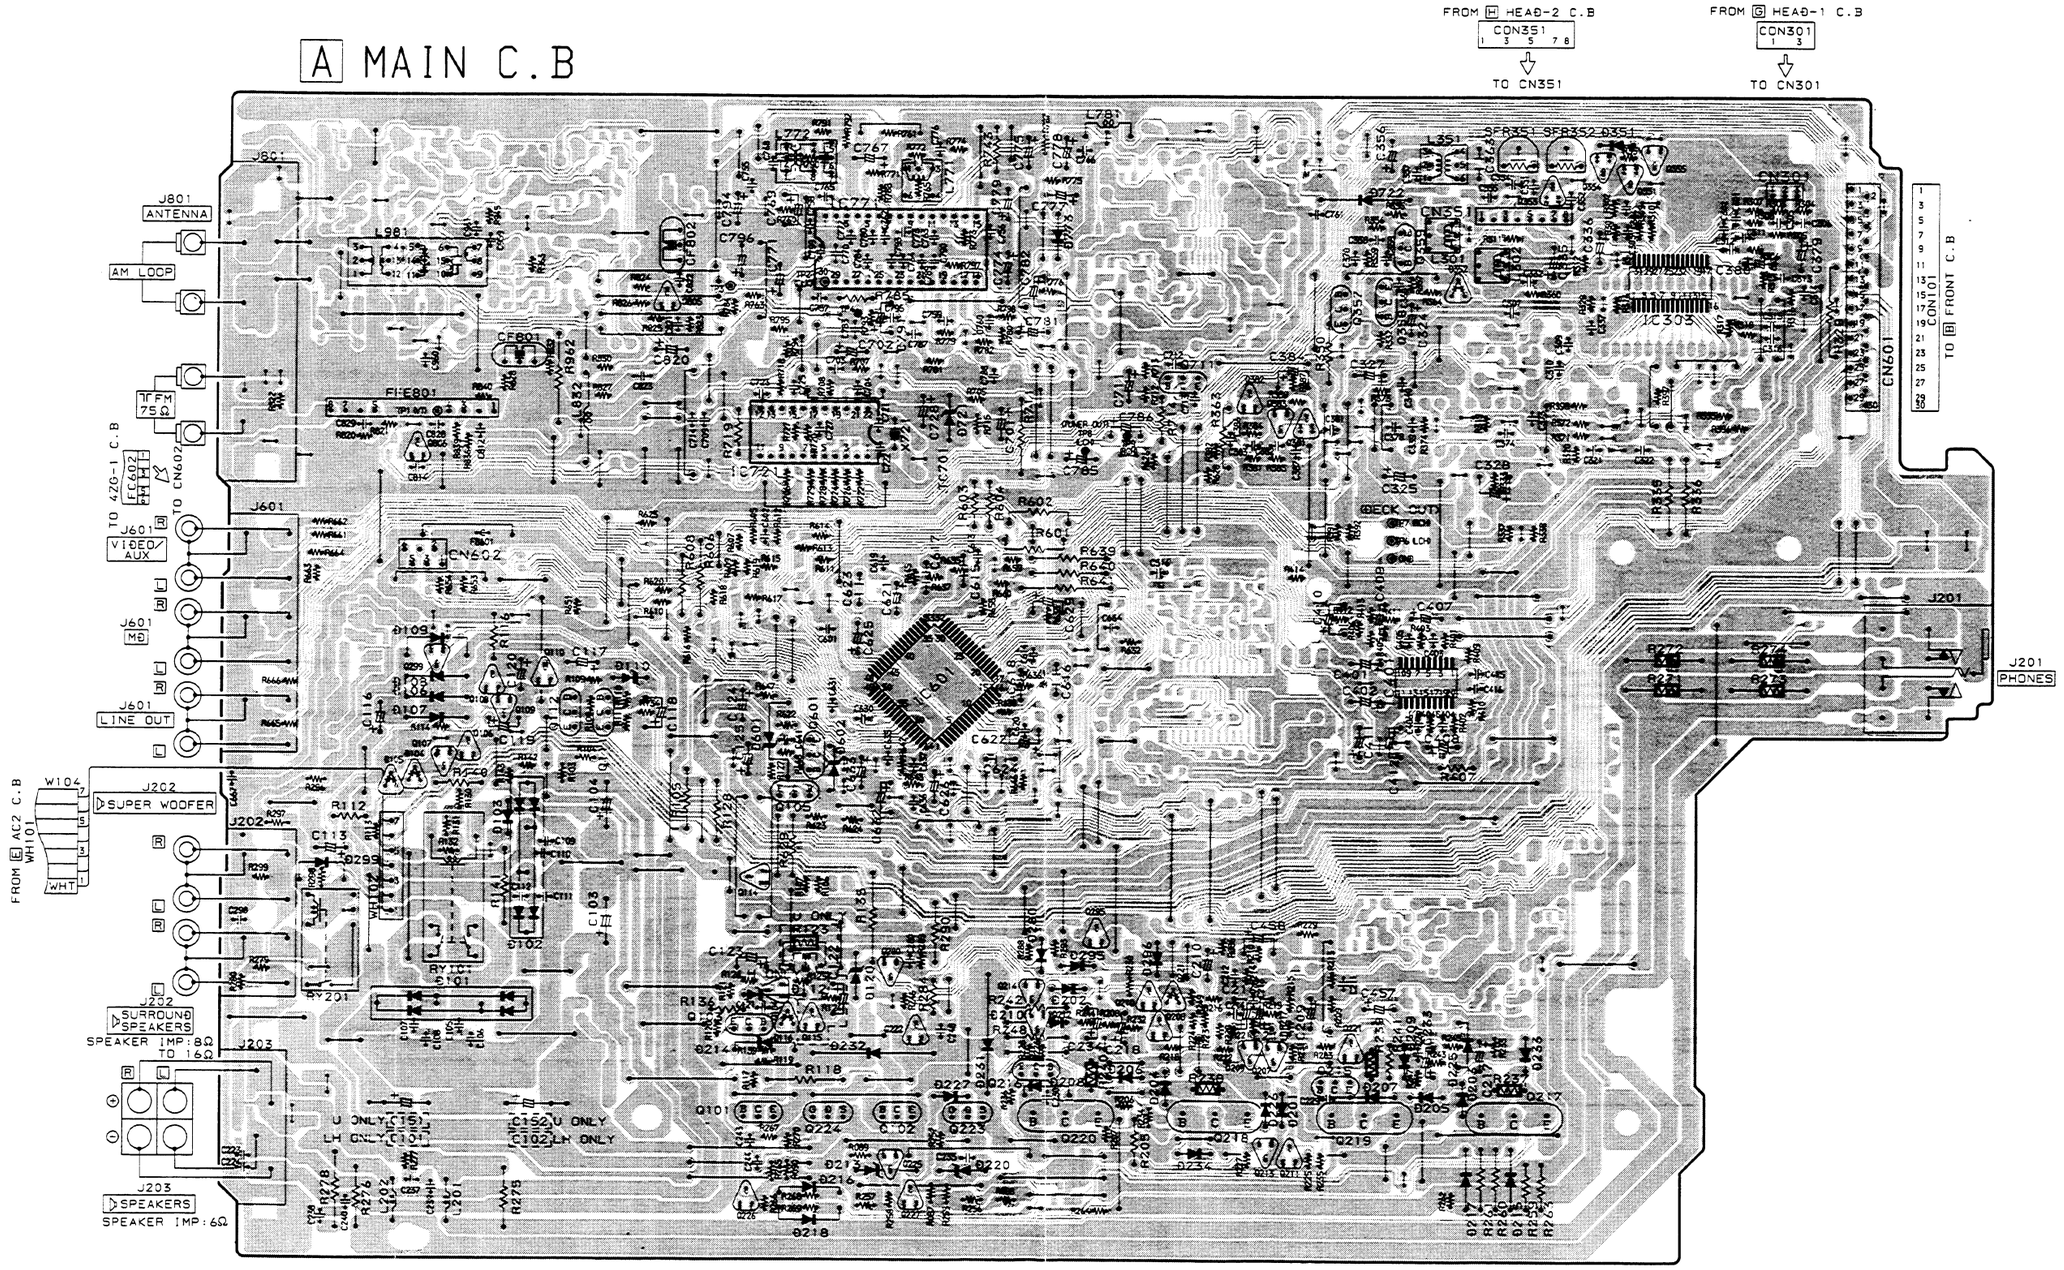
FROM H HEAD-2 C.B
CON351
TO CN351
FROM G HEAD-1 C.B
CON301
TO CN301
TO F FRONT C.B
CON101
CN601
J801
ANTENNA
AM LOOP
FM 75Ω
J601
VIDEO AUX
J601
MD
J601
LINE OUT
J202
SUPER WOOFER
J202
SURROUND SPEAKERS
SPEAKER IMP: 8Ω TO 16Ω
J203
SPEAKERS
SPEAKER IMP: 6Ω
FROM E AC2 C.B
WH101
WHT
TO 420-1 C.B
FC602
TO CN602
J201
PHONES
IC303
IC701
IC601
CN602
CN351
SFR351
SFR352
D351
L351
L981
CF801
CF802
FI:E801
IC771
IC772
IC773
IC774
IC775
IC776
IC777
IC778
IC779
IC780
IC781
IC782
IC783
IC784
IC785
IC786
IC787
IC788
IC789
IC790
IC791
IC792
IC793
IC794
IC795
IC796
IC797
IC798
IC799
IC7A0
IC7A1
IC7A2
IC7A3
IC7A4
IC7A5
IC7A6
IC7A7
IC7A8
IC7A9
IC7B0
IC7B1
IC7B2
IC7B3
IC7B4
IC7B5
IC7B6
IC7B7
IC7B8
IC7B9
IC7C0
IC7C1
IC7C2
IC7C3
IC7C4
IC7C5
IC7C6
IC7C7
IC7C8
IC7C9
IC7D0
IC7D1
IC7D2
IC7D3
IC7D4
IC7D5
IC7D6
IC7D7
IC7D8
IC7D9
IC7E0
IC7E1
IC7E2
IC7E3
IC7E4
IC7E5
IC7E6
IC7E7
IC7E8
IC7E9
IC7F0
IC7F1
IC7F2
IC7F3
IC7F4
IC7F5
IC7F6
IC7F7
IC7F8
IC7F9
IC7G0
IC7G1
IC7G2
IC7G3
IC7G4
IC7G5
IC7G6
IC7G7
IC7G8
IC7G9
IC7H0
IC7H1
IC7H2
IC7H3
IC7H4
IC7H5
IC7H6
IC7H7
IC7H8
IC7H9
IC7I0
IC7I1
IC7I2
IC7I3
IC7I4
IC7I5
IC7I6
IC7I7
IC7I8
IC7I9
IC7J0
IC7J1
IC7J2
IC7J3
IC7J4
IC7J5
IC7J6
IC7J7
IC7J8
IC7J9
IC7K0
IC7K1
IC7K2
IC7K3
IC7K4
IC7K5
IC7K6
IC7K7
IC7K8
IC7K9
IC7L0
IC7L1
IC7L2
IC7L3
IC7L4
IC7L5
IC7L6
IC7L7
IC7L8
IC7L9
IC7M0
IC7M1
IC7M2
IC7M3
IC7M4
IC7M5
IC7M6
IC7M7
IC7M8
IC7M9
IC7N0
IC7N1
IC7N2
IC7N3
IC7N4
IC7N5
IC7N6
IC7N7
IC7N8
IC7N9
IC7O0
IC7O1
IC7O2
IC7O3
IC7O4
IC7O5
IC7O6
IC7O7
IC7O8
IC7O9
IC7P0
IC7P1
IC7P2
IC7P3
IC7P4
IC7P5
IC7P6
IC7P7
IC7P8
IC7P9
IC7Q0
IC7Q1
IC7Q2
IC7Q3
IC7Q4
IC7Q5
IC7Q6
IC7Q7
IC7Q8
IC7Q9
IC7R0
IC7R1
IC7R2
IC7R3
IC7R4
IC7R5
IC7R6
IC7R7
IC7R8
IC7R9
IC7S0
IC7S1
IC7S2
IC7S3
IC7S4
IC7S5
IC7S6
IC7S7
IC7S8
IC7S9
IC7T0
IC7T1
IC7T2
IC7T3
IC7T4
IC7T5
IC7T6
IC7T7
IC7T8
IC7T9
IC7U0
IC7U1
IC7U2
IC7U3
IC7U4
IC7U5
IC7U6
IC7U7
IC7U8
IC7U9
IC7V0
IC7V1
IC7V2
IC7V3
IC7V4
IC7V5
IC7V6
IC7V7
IC7V8
IC7V9
IC7W0
IC7W1
IC7W2
IC7W3
IC7W4
IC7W5
IC7W6
IC7W7
IC7W8
IC7W9
IC7X0
IC7X1
IC7X2
IC7X3
IC7X4
IC7X5
IC7X6
IC7X7
IC7X8
IC7X9
IC7Y0
IC7Y1
IC7Y2
IC7Y3
IC7Y4
IC7Y5
IC7Y6
IC7Y7
IC7Y8
IC7Y9
IC7Z0
IC7Z1
IC7Z2
IC7Z3
IC7Z4
IC7Z5
IC7Z6
IC7Z7
IC7Z8
IC7Z9

SCHEMATIC DIAGRAM – 1 (MAIN 1 / 2)

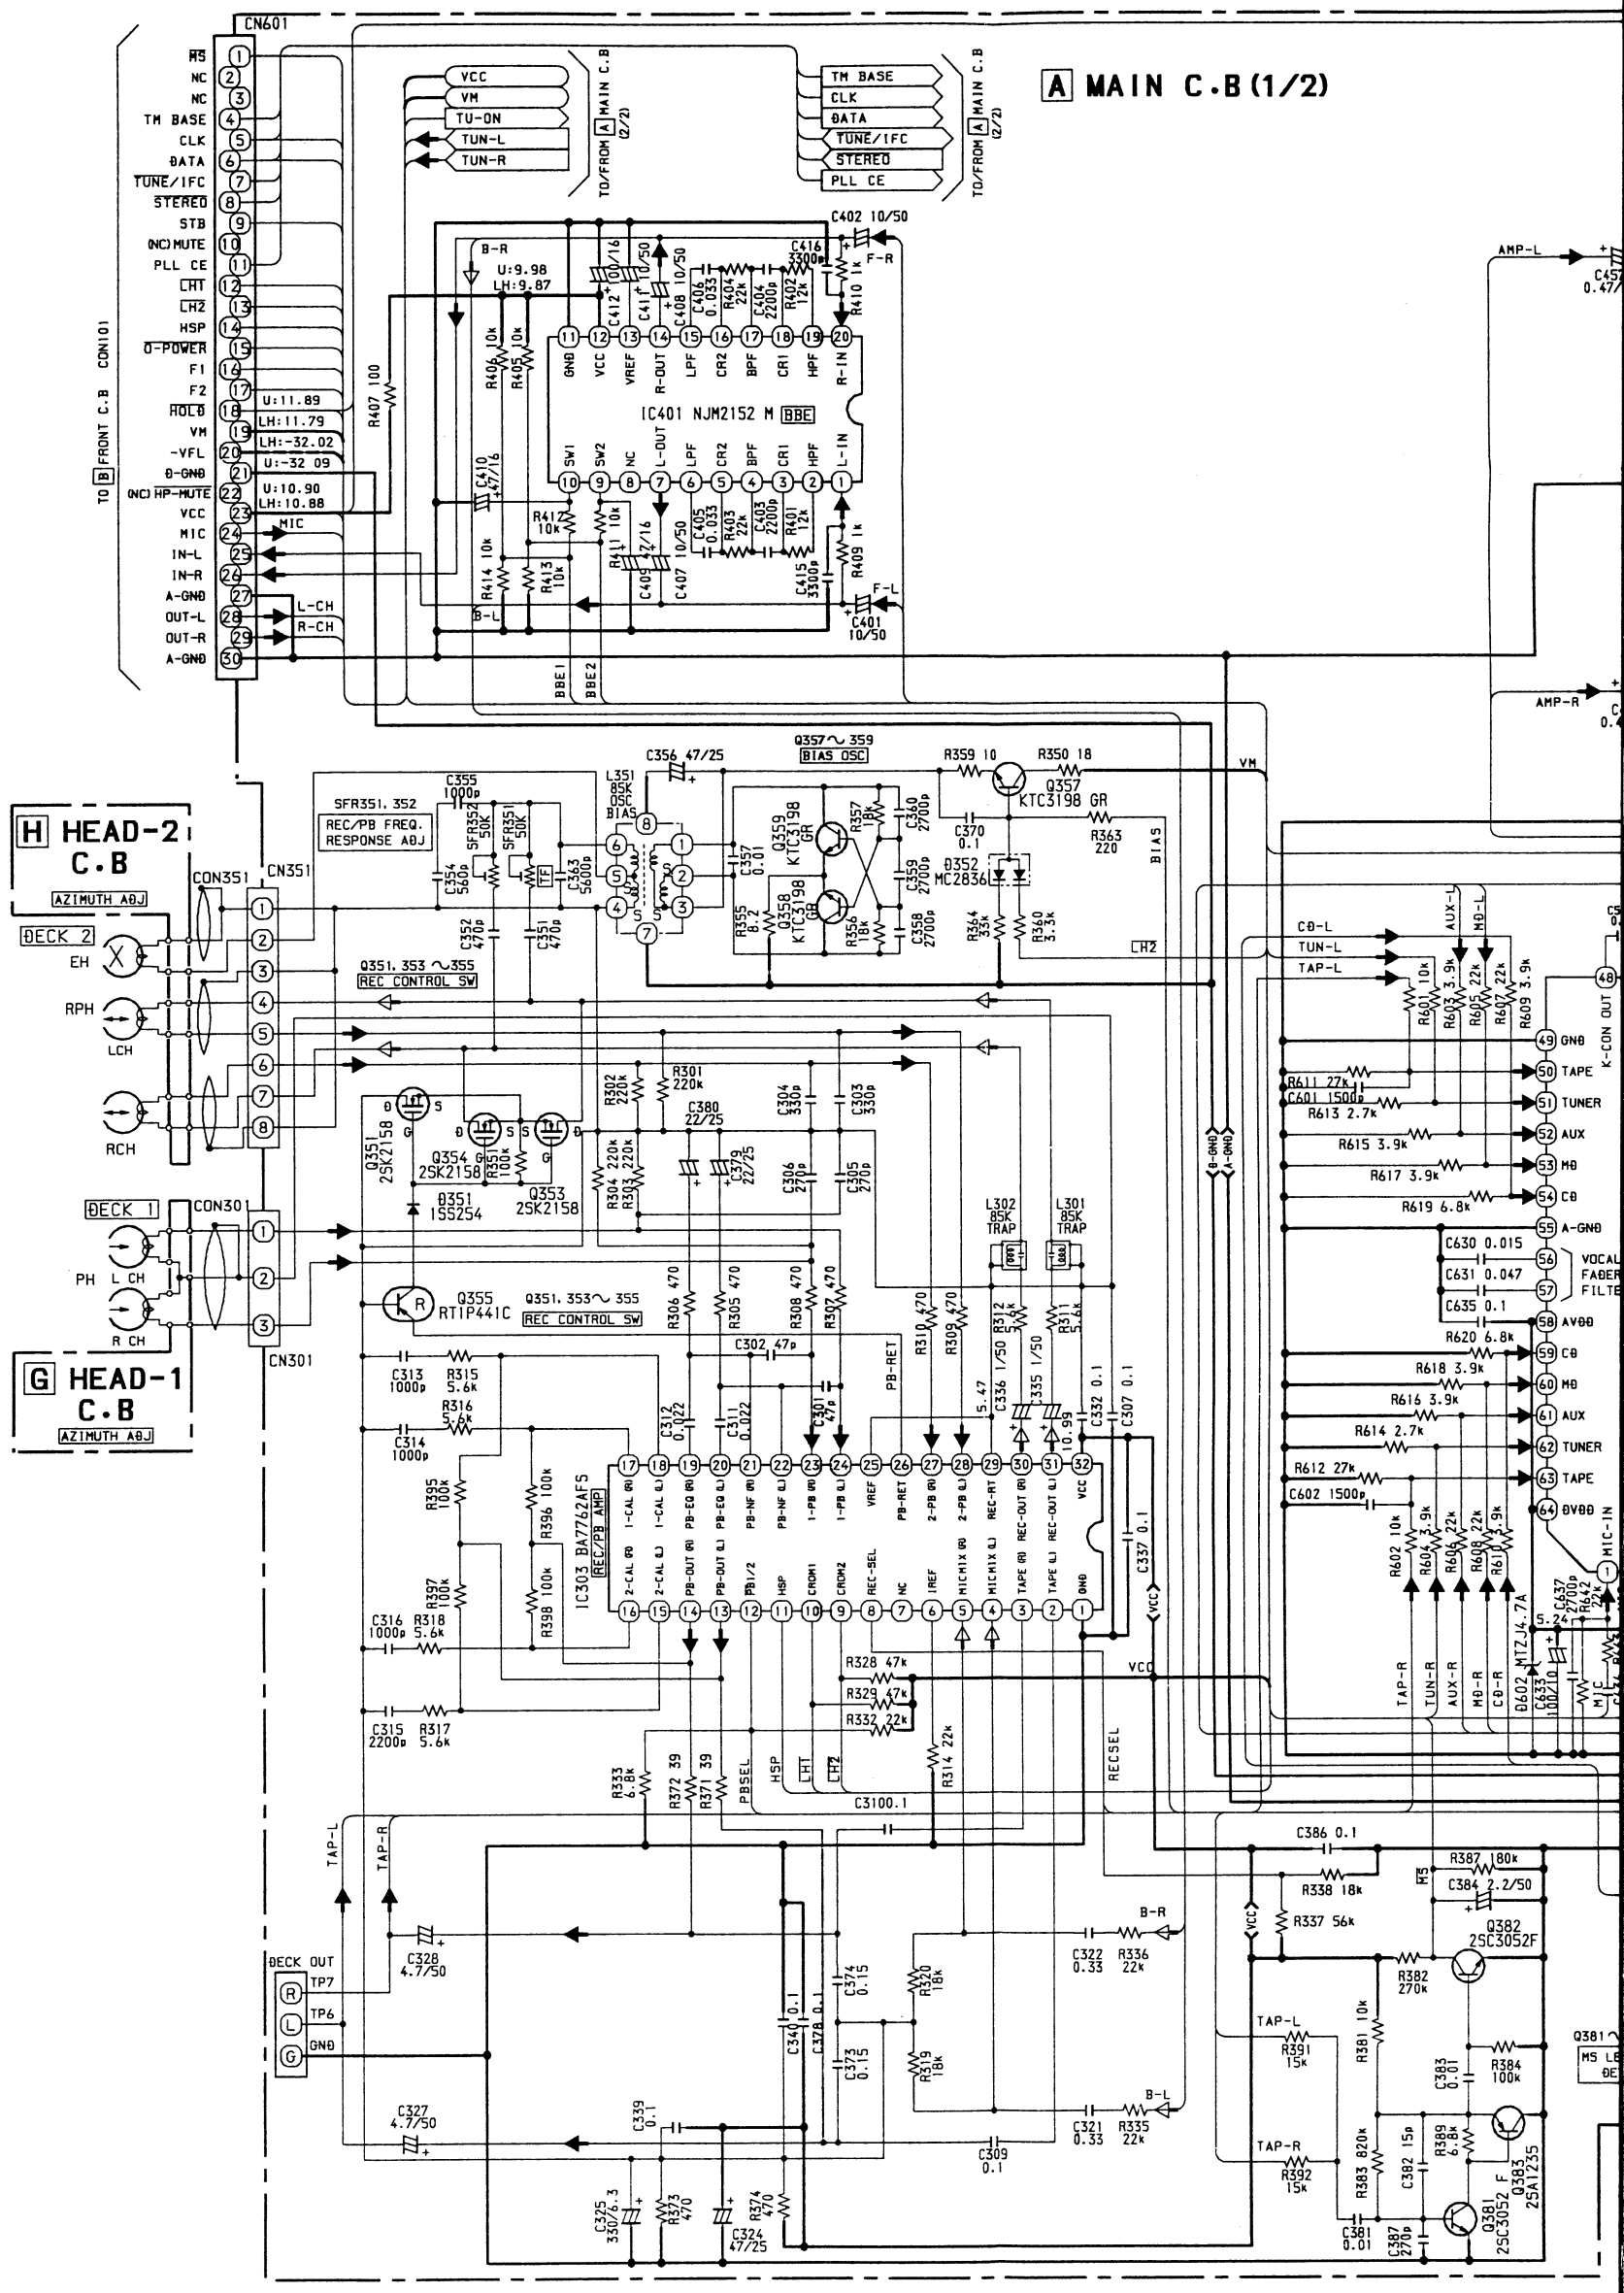

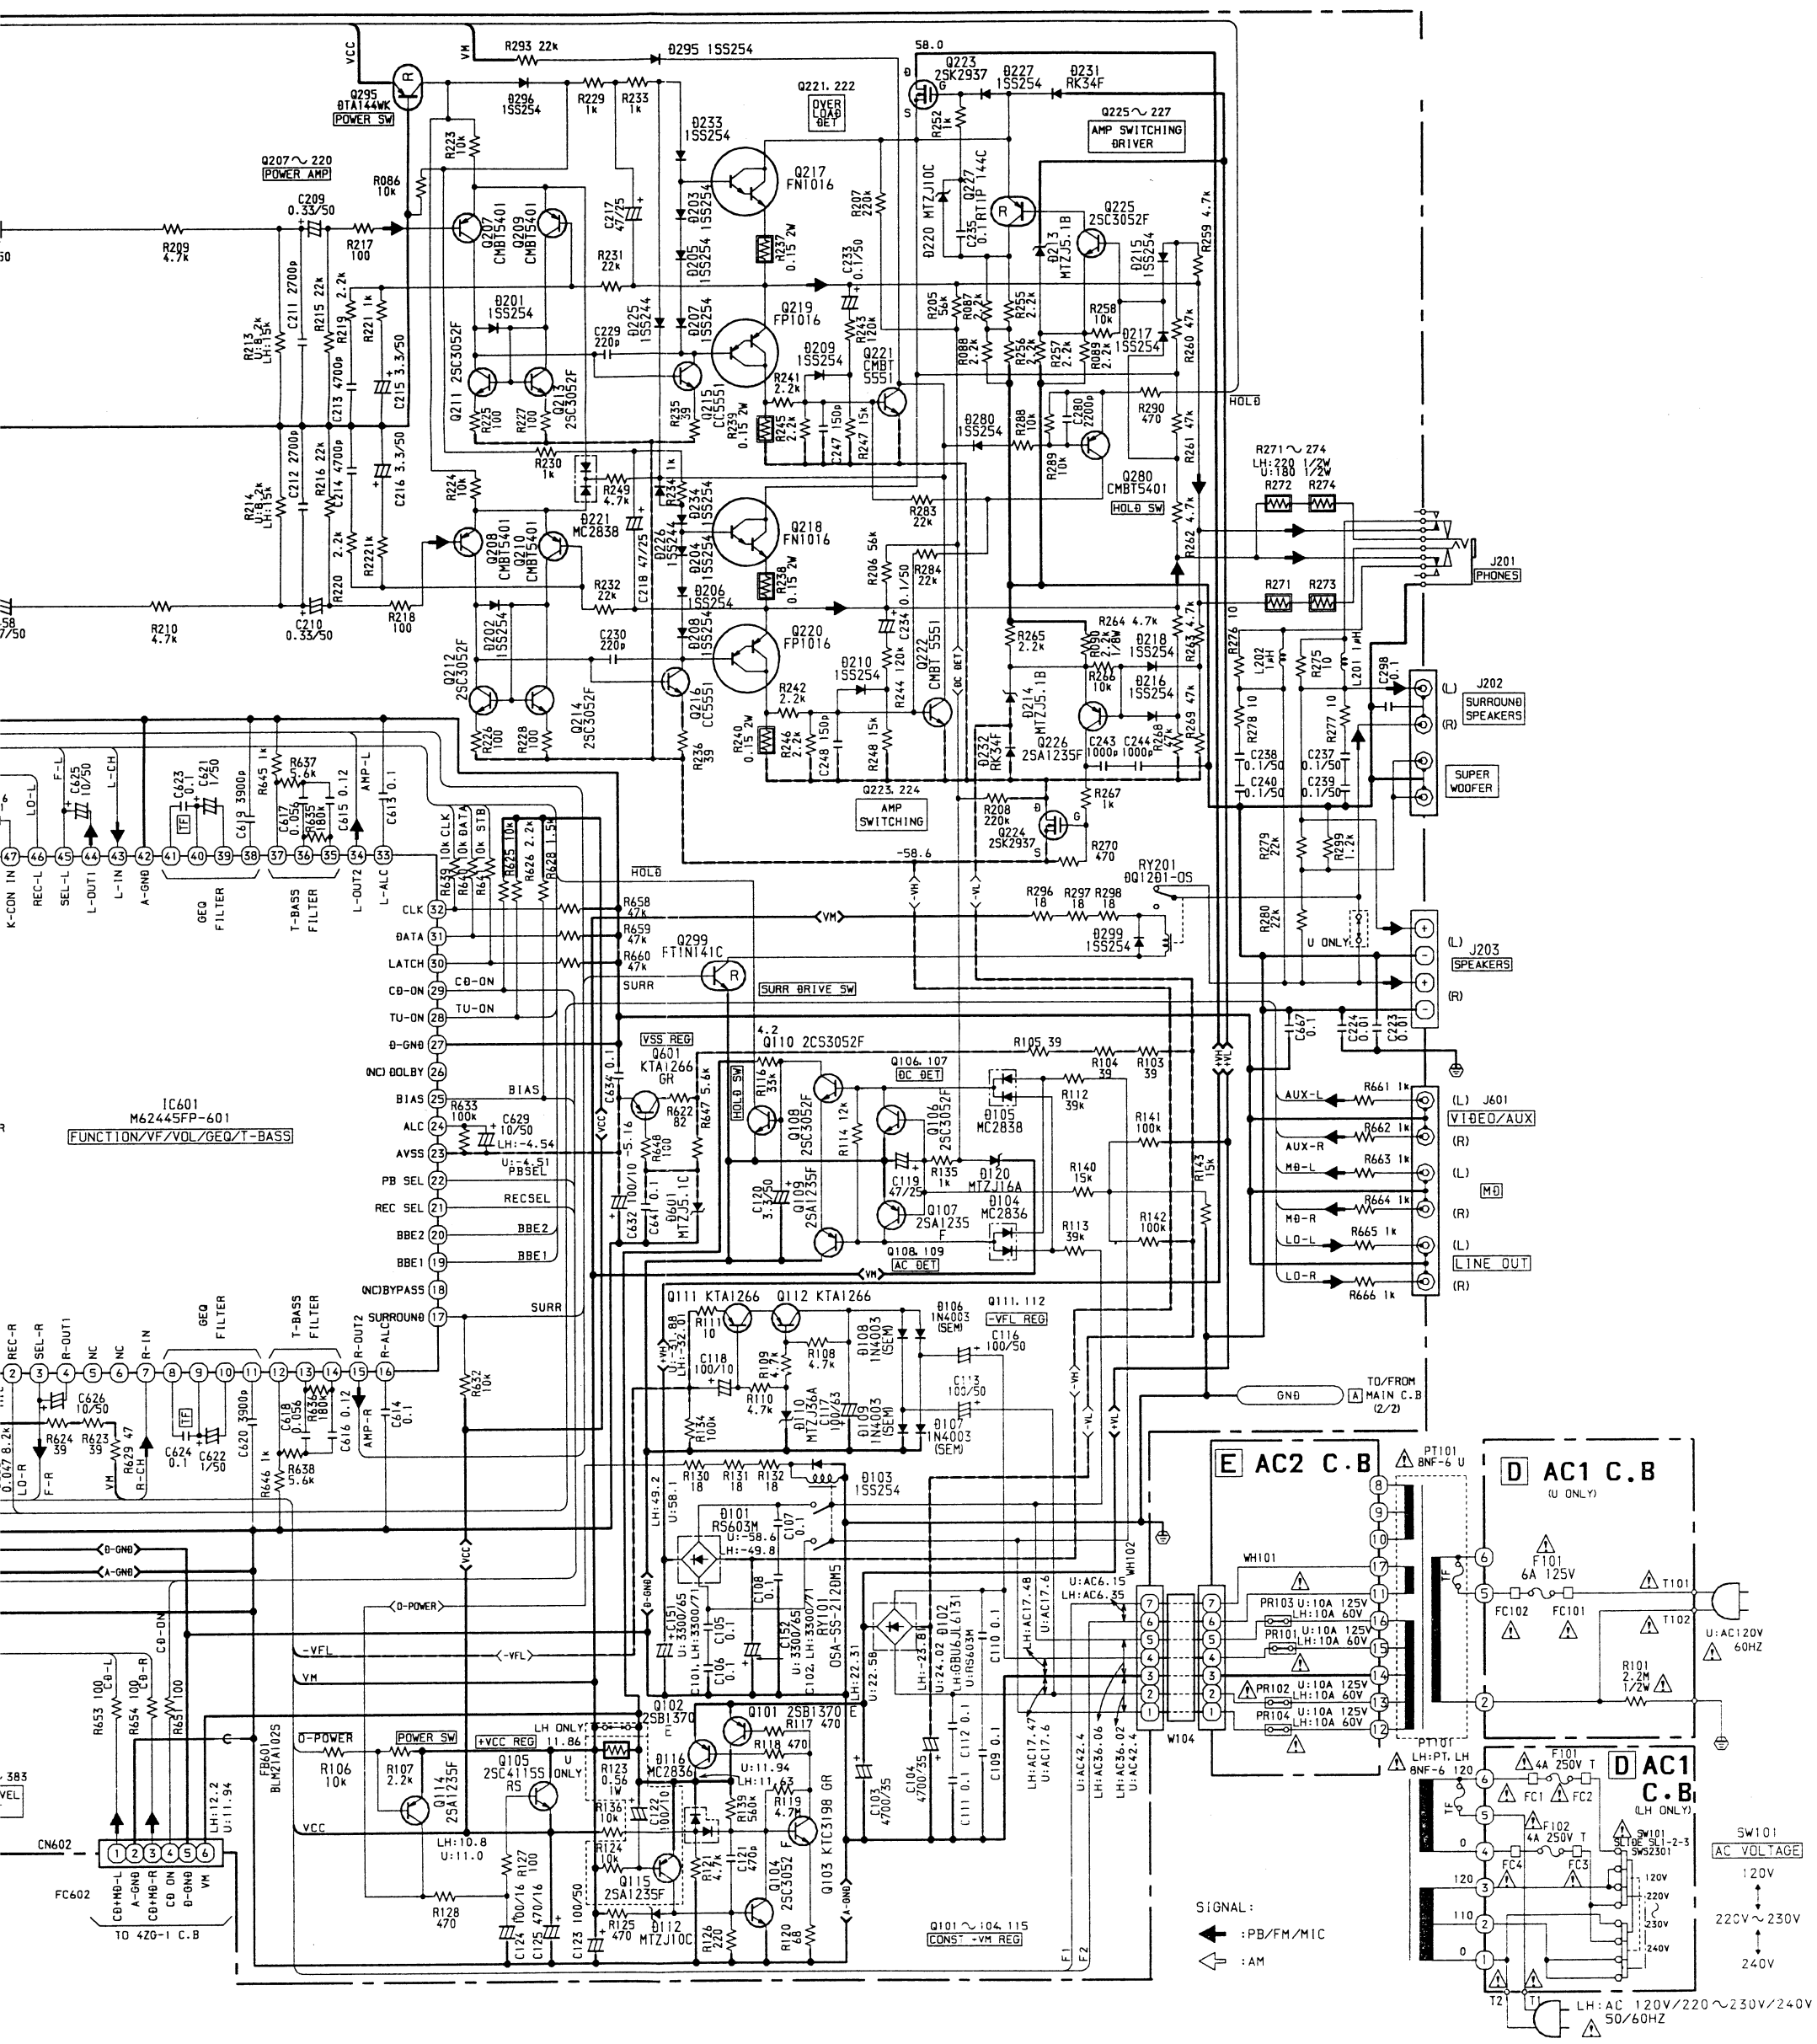
IC601
M62445FP-601
FUNCTION/VF/VOL/GEQ/T-BASS
POWER AMP
POWER SW
OVER LOAD DET
AMP SWITCHING DRIVER
AMP SWITCHING
HOLD SW
SURR DRIVE SW
DC DET
AC DET
-VFL REG
CONST -VM REG
VSS REG
HOLD
SURR
PHONES
SURROUND SPEAKERS
SUPER WOOFER
SPEAKERS
VIDEO/AUX
MD
LINE OUT
U ONLY
TO/FROM MAIN C.B (2/2)
TO 4ZG-1 C.B
AC VOLTAGE
120V
220V~230V
240V
LH: AC 120V/220~230V/240V 50/60HZ
SIGNAL:
:PB/FM/MIC
:AM

SCHEMATIC DIAGRAM – 2 (FRONT)

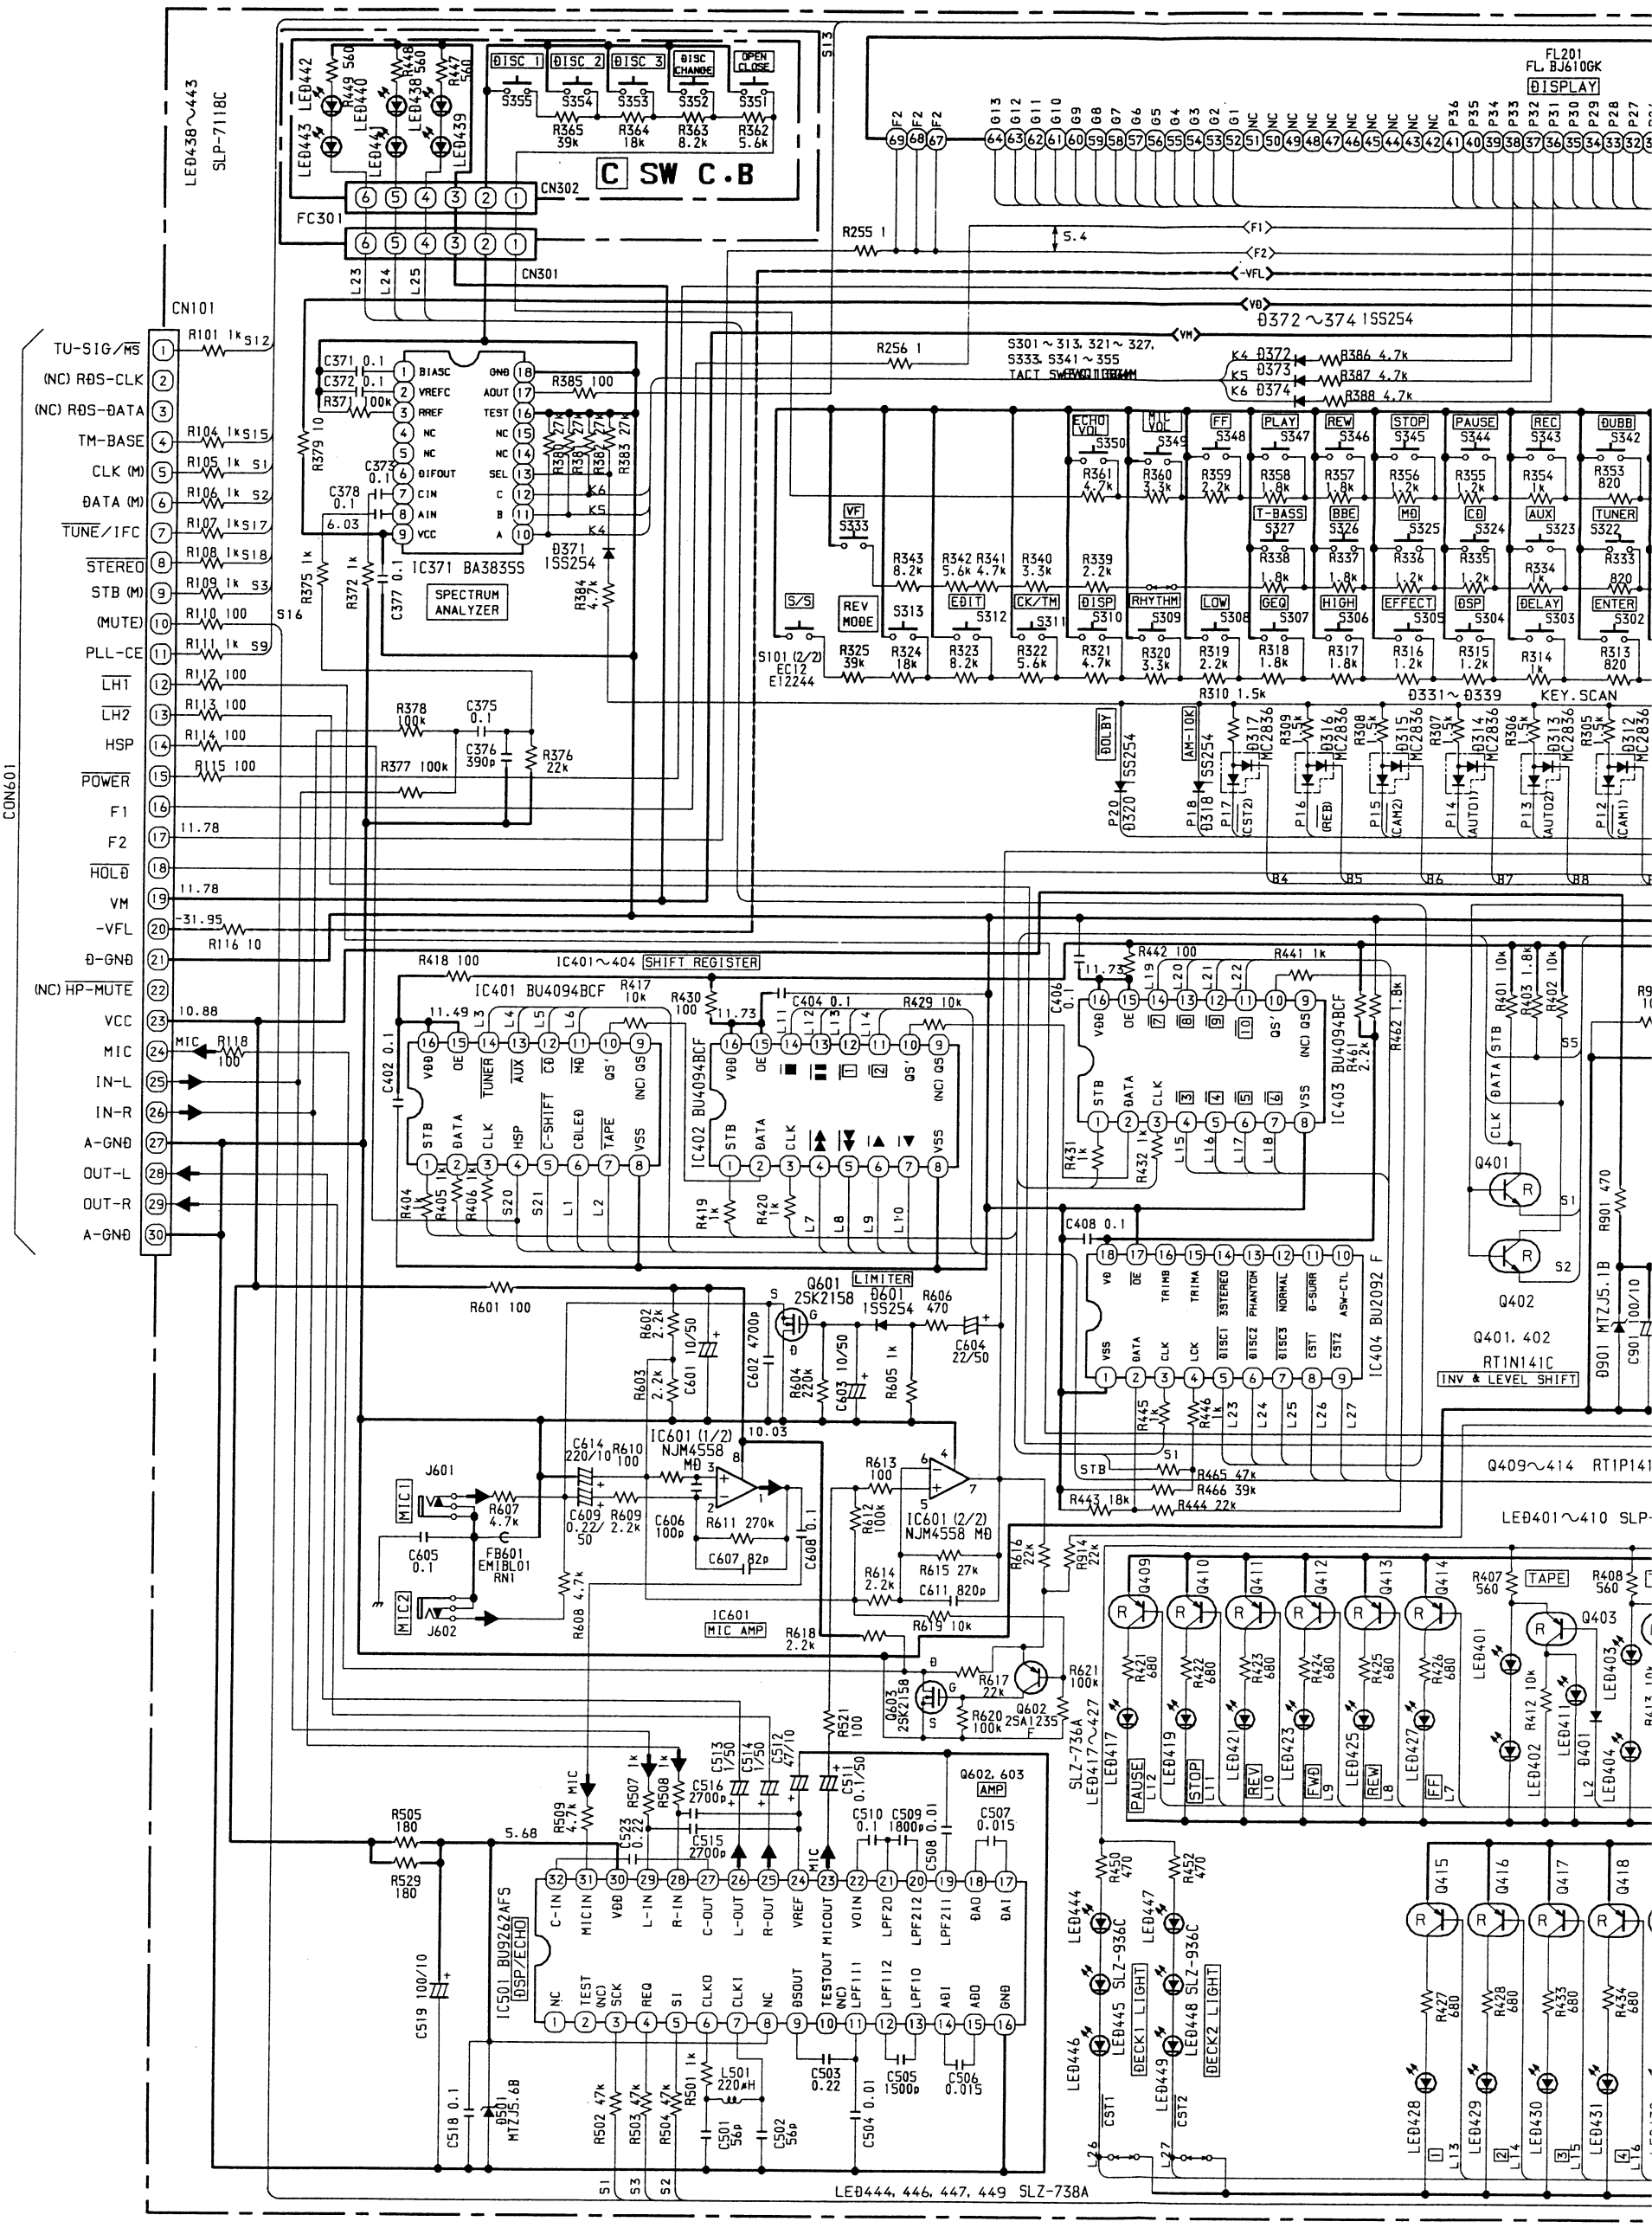

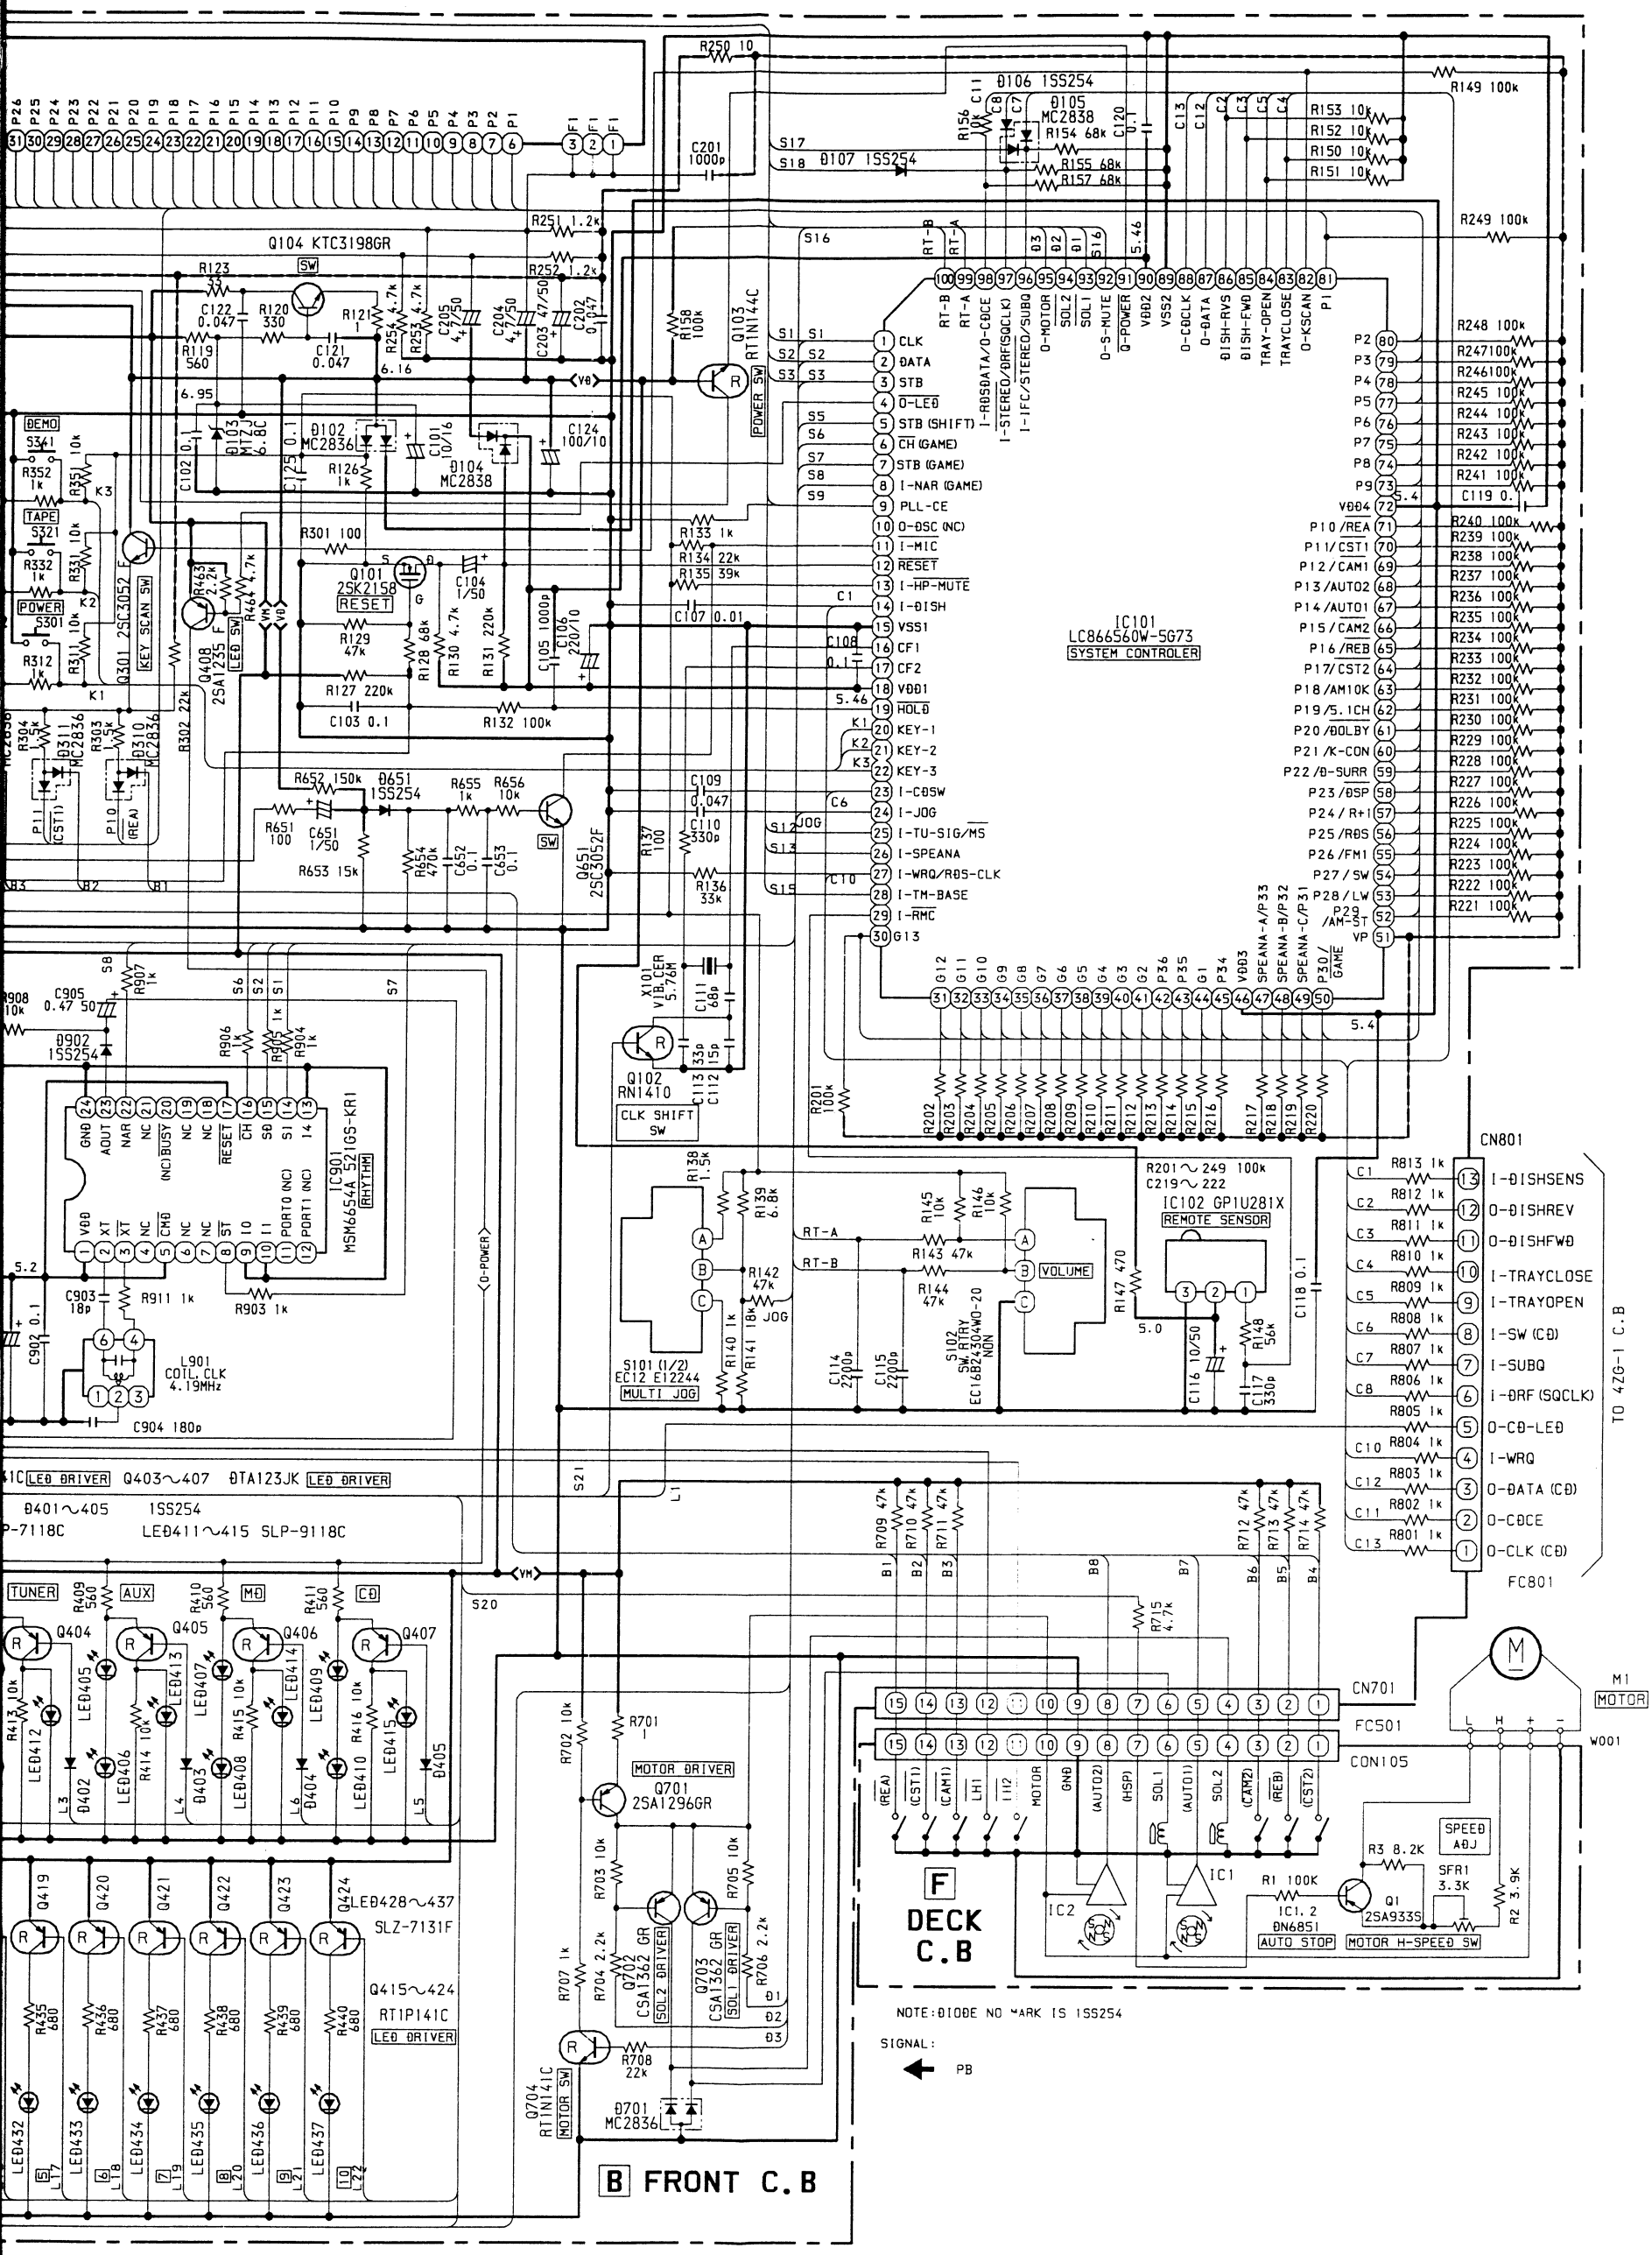
IC101
LC866560W-5G73
SYSTEM CONTROLER
IC102 GP1U281X
REMOTE SENSOR
CN801
TO 47G-1 C.B
CN701
FC501
CON105
FC801
M1
MOTOR
W001
F
DECK
C.B
B FRONT C.B
Q104 KTC3198GR
Q101 2SK2158
RESET
Q102 RN1410
CLK SHIFT SW
Q103 RT1N144C
POWER SW
Q651 2SC3052F
Q701 2SA1296GR
MOTOR DRIVER
Q704 RT1N141C
MOTOR SW
IC901 MSM6654A 521GS-KR1
RHYTHM
X101 VIB.CER 5.76M
L901 COIL CLK 4.19MHz
S101 (1/2) EC12 E12244
MULTI JOG
S102 SW.RTRY EC16B24304W0-20 NON
VOLUME
JOG
KEY SCAN SW
LED SW
LED DRIVER
Q403～407 DTA123JK
D401～405 1SS254
LED411～415 SLP-9118C
Q415～424 RT1P141C
LED428～437 SLZ-7131F
TUNER
AUX
MD
CD
IC1
IC2
AUTO STOP
MOTOR H-SPEED SW
SPEED ADJ
NOTE:DIODE NO MARK IS 1SS254
SIGNAL:
PB

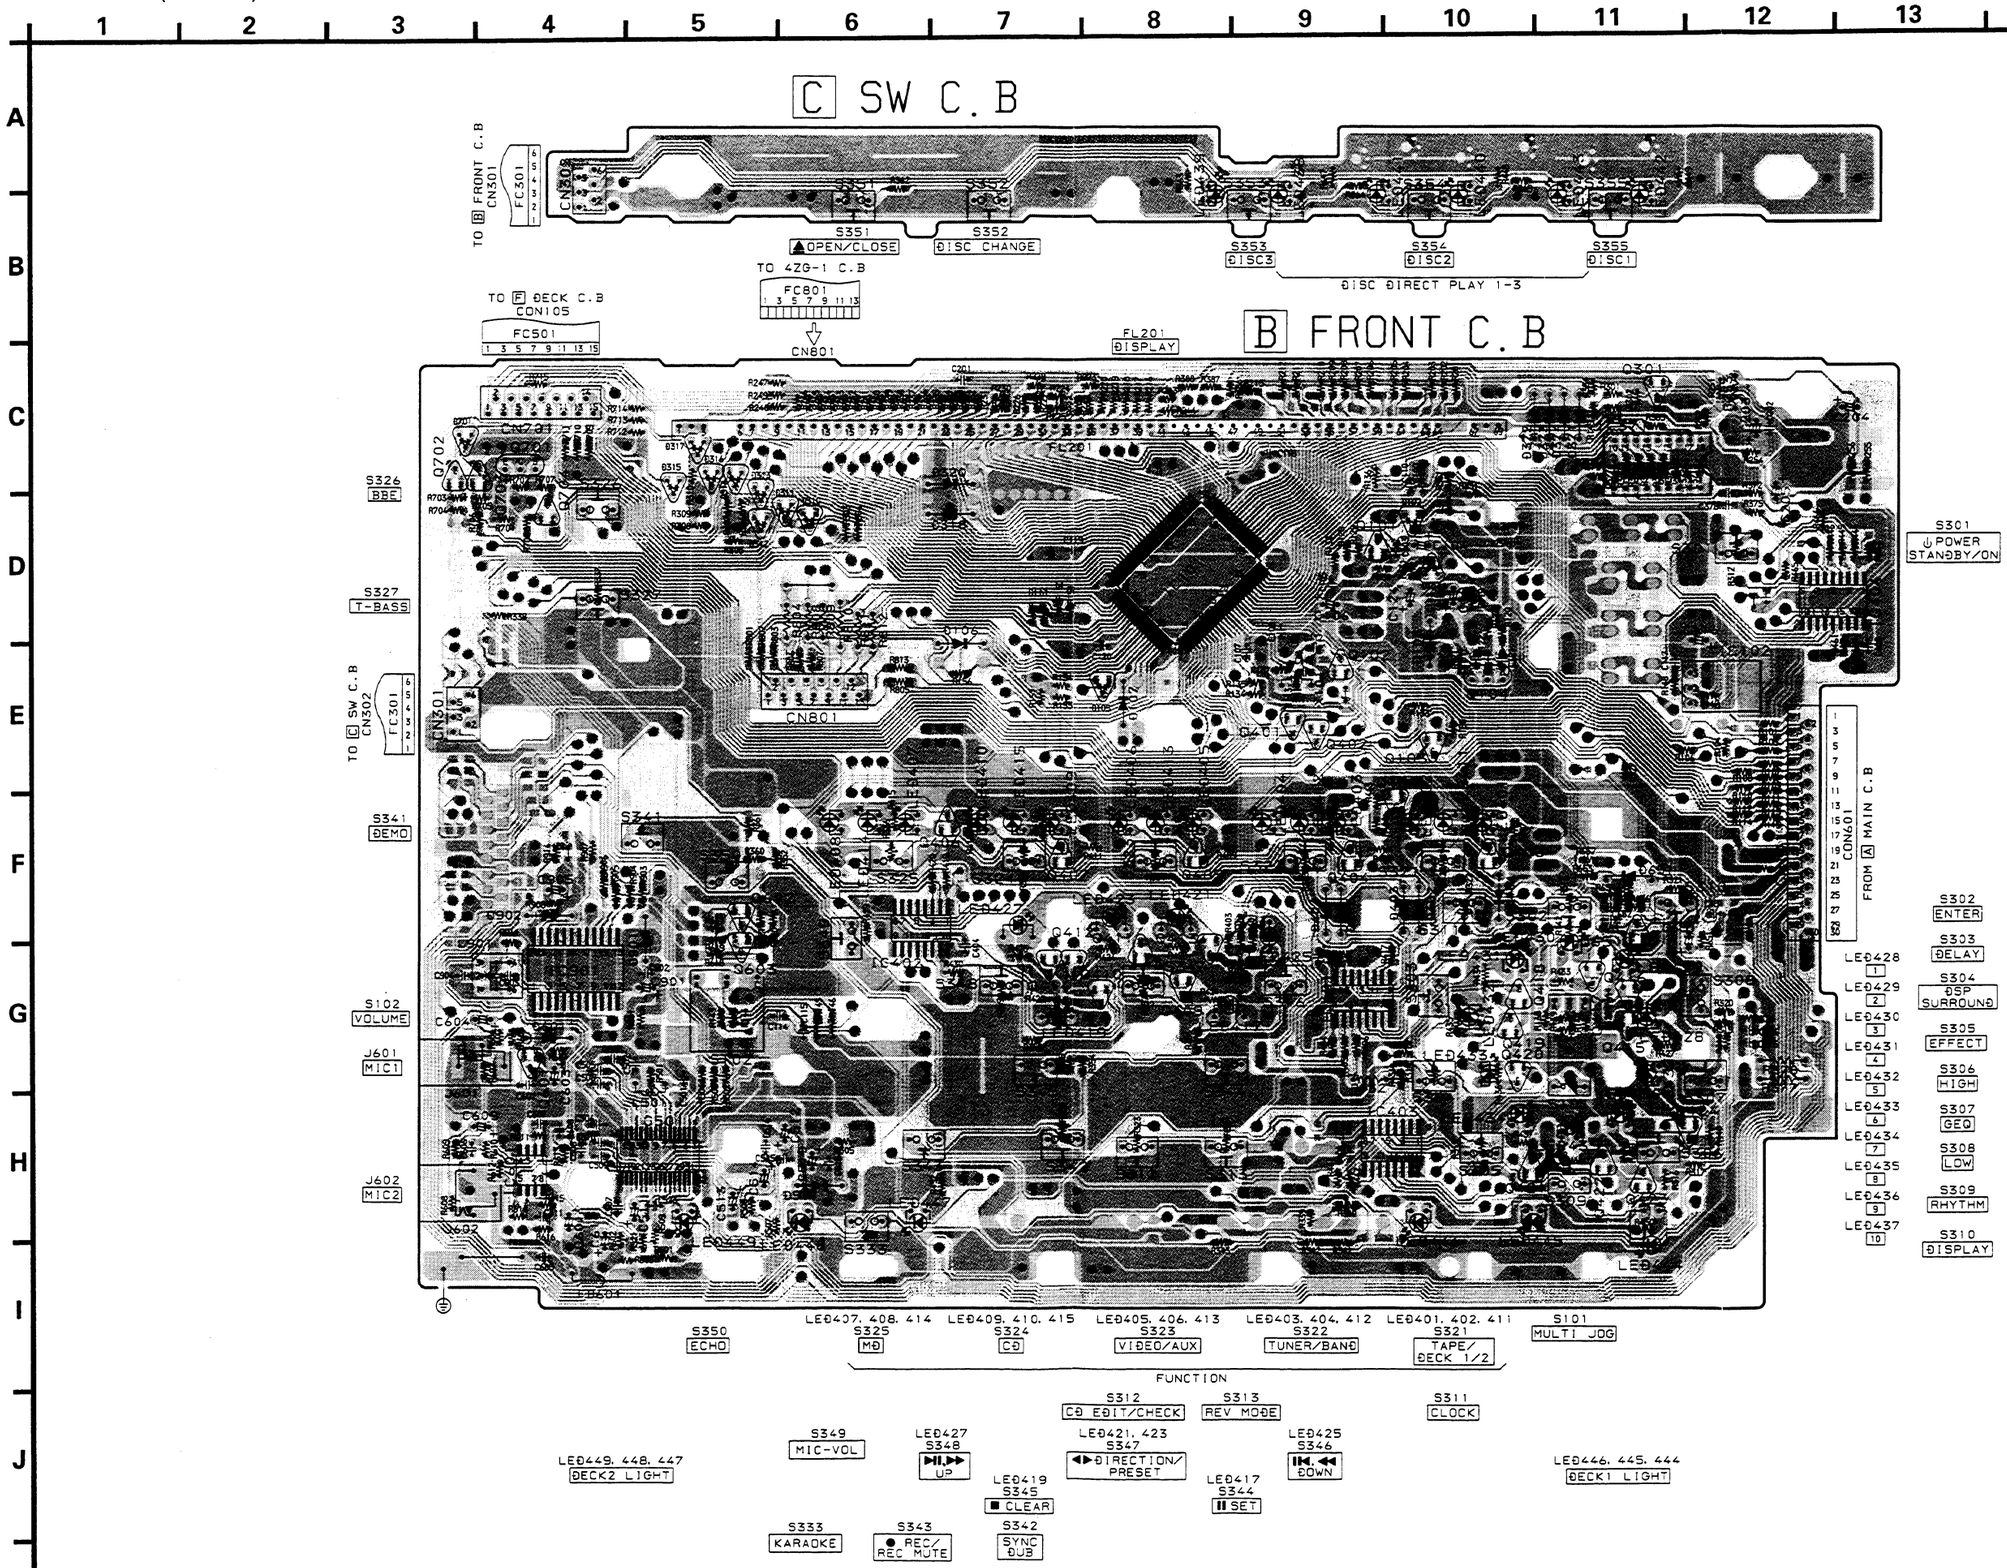
C SW C.B
TO B FRONT C.B CN501
FC501
CN302
S351 OPEN/CLOSE
S352 DISC CHANGE
S353 DISC3
S354 DISC2
S355 DISC1
DISC DIRECT PLAY 1-3
TO 4ZG-1 C.B
FC801
CN801
TO F DECK C.B CON105
FC501
B FRONT C.B
FL201 DISPLAY
Q301
Q702
S326 BBE
S327 T-BASS
S301 POWER STANDBY/ON
TO C SW C.B CN302
FC301
CN301
S341 DEMO
S102 VOLUME
J601 MIC1
J602 MIC2
CN601 FROM A MAIN C.B
S302 ENTER
S303 DELAY
S304 DSP SURROUND
S305 EFFECT
S306 HIGH
S307 GEQ
S308 LOW
S309 RHYTHM
S310 DISPLAY
LED428
LED429
LED430
LED431
LED432
LED433
LED434
LED435
LED436
LED437
S350 ECHO
S325 MD
S324 CD
S323 VIDEO/AUX
S322 TUNER/BAND
S321 TAPE/DECK 1/2
FUNCTION
S101 MULTI JOG
S312 CD EDIT/CHECK
S313 REV MODE
S311 CLOCK
S349 MIC-VOL
S348 UP
S347 DIRECTION/PRESET
S346 DOWN
S345 CLEAR
S344 SET
S333 KARAOKE
S343 REC/REC MUTE
S342 SYNC DUB
LED449. 448. 447 DECK2 LIGHT
LED446. 445. 444 DECK1 LIGHT

WIRING – 3 (AC1 / AC2)

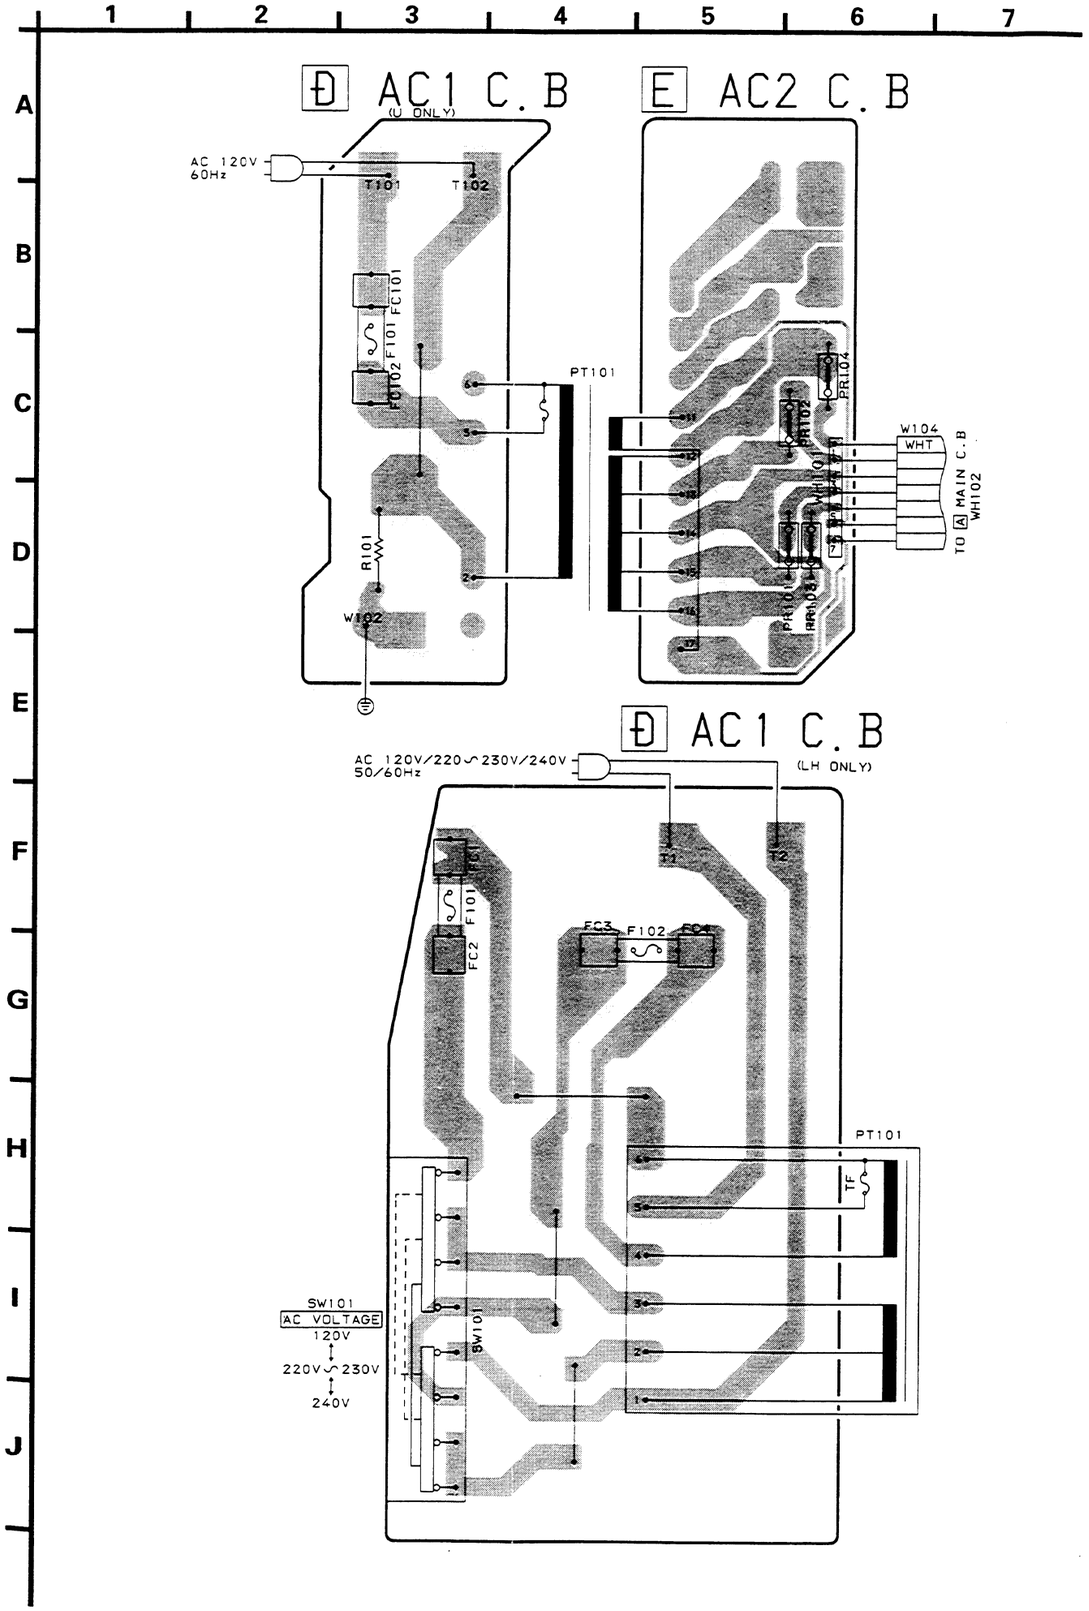

SCHEMATIC DIAGRAM – 3 (TUNER FRONT END)

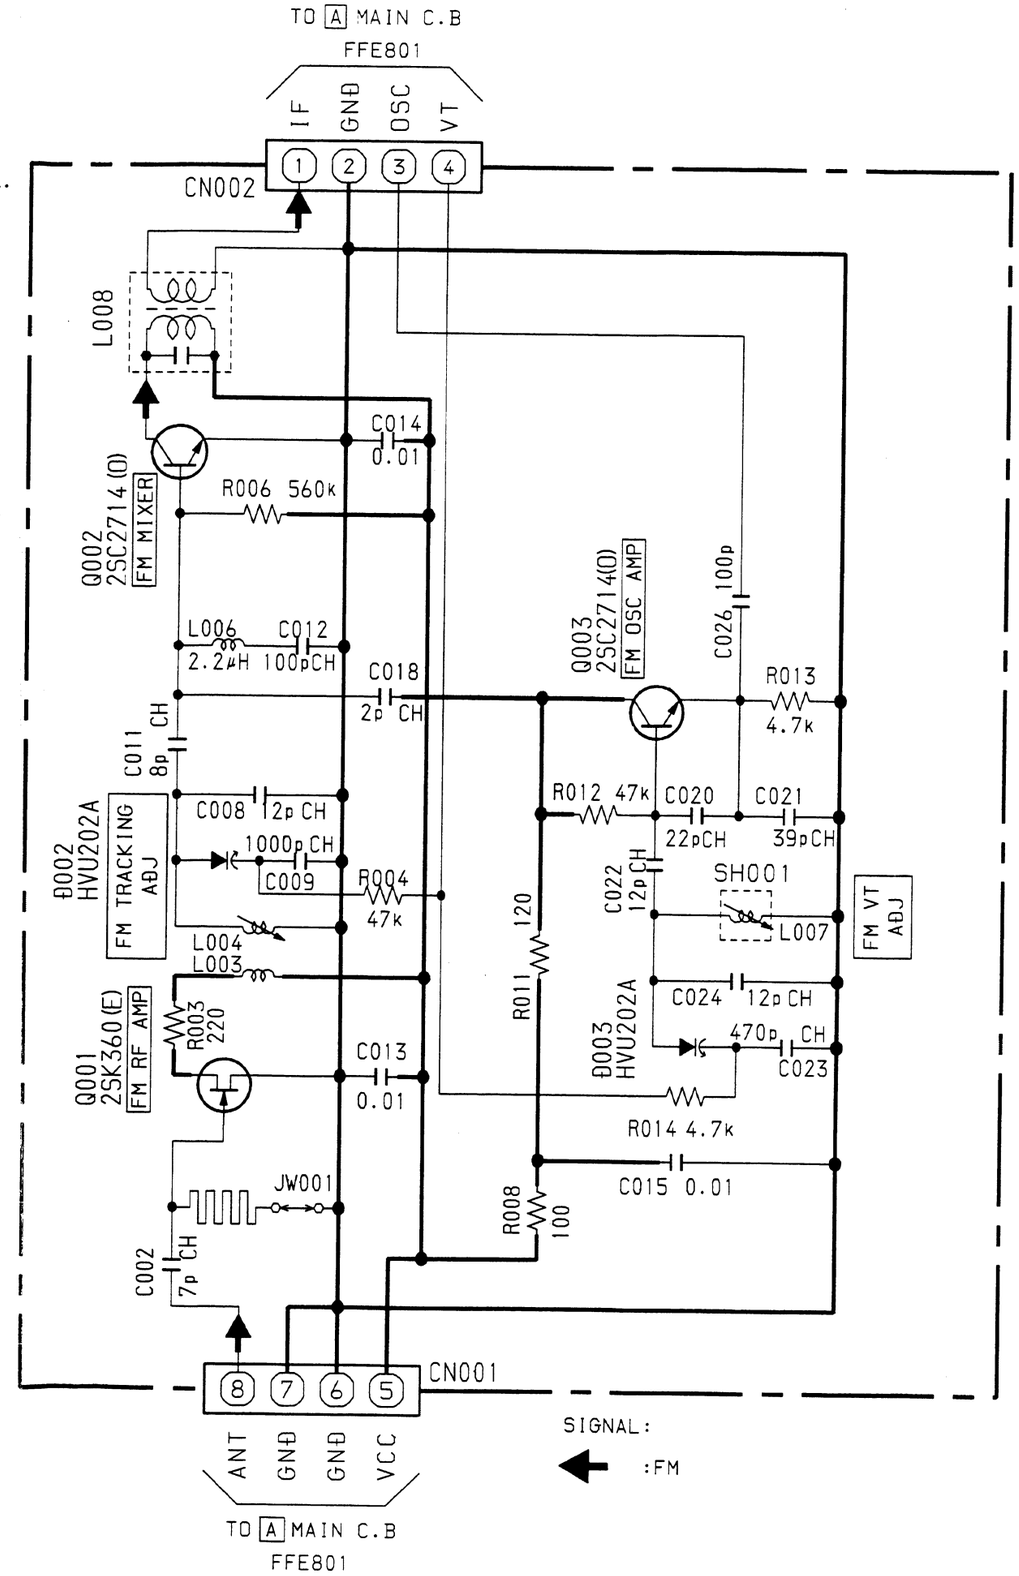

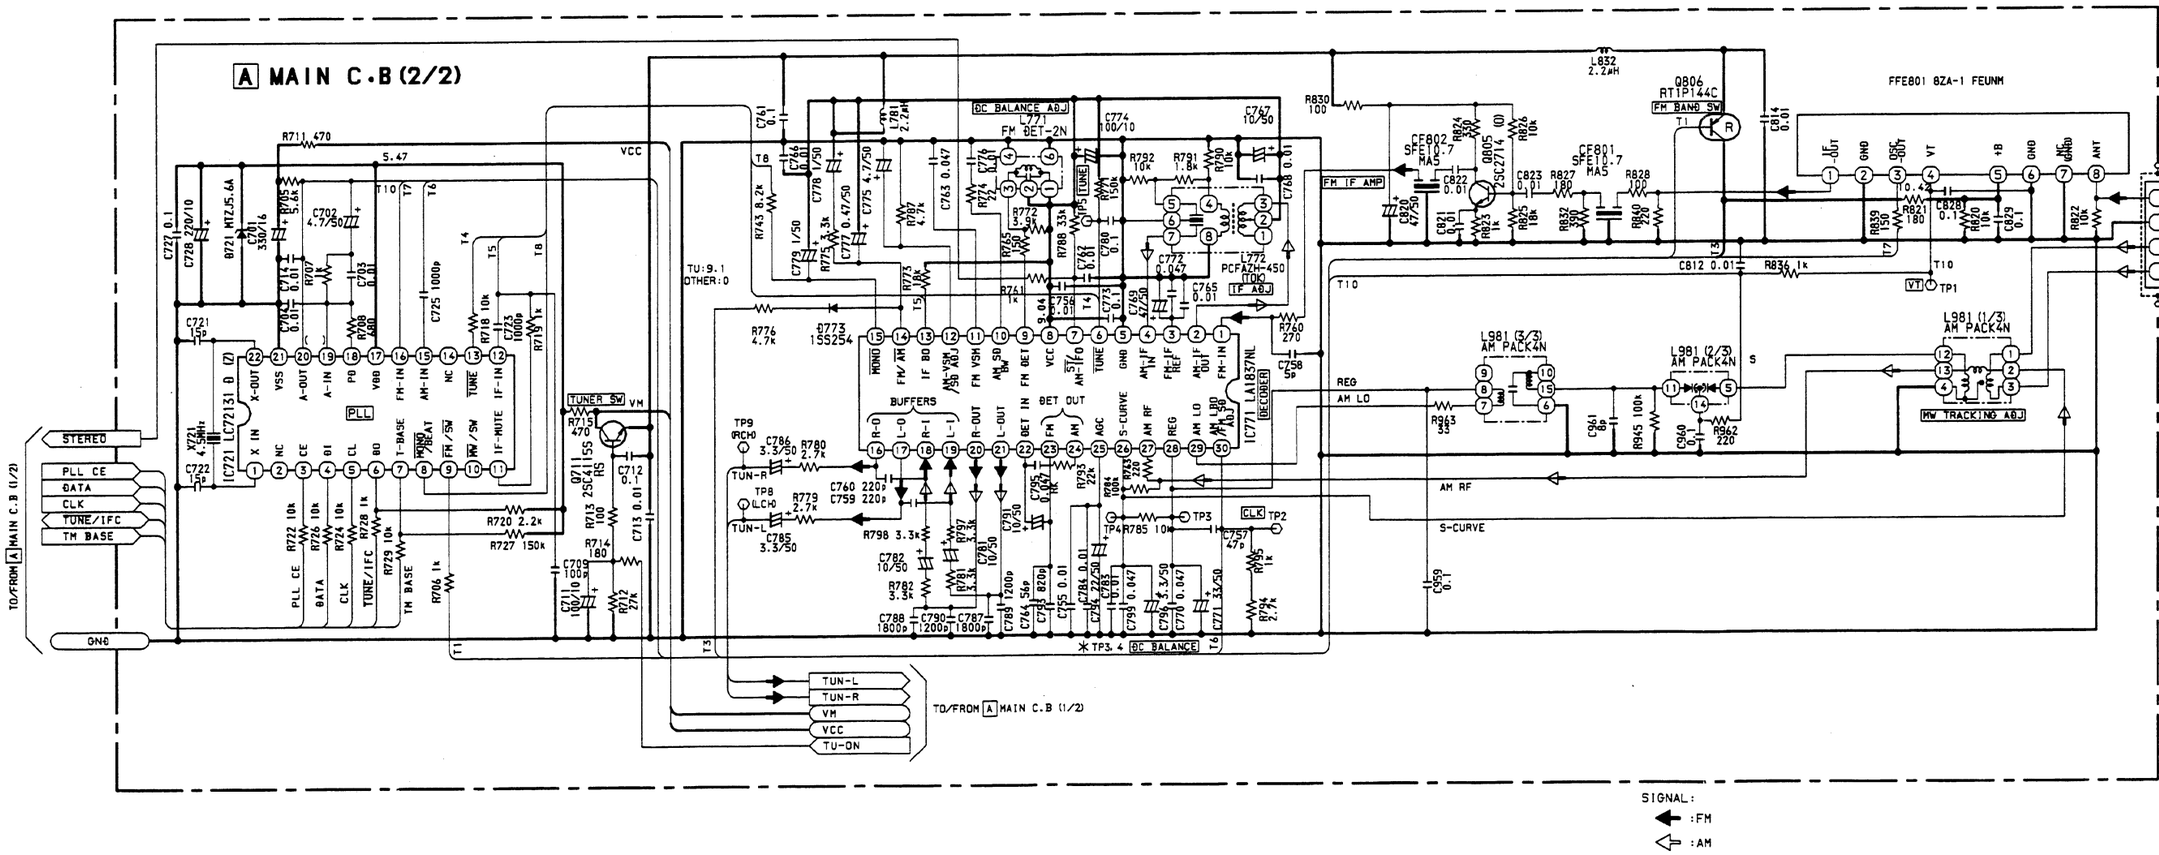
A MAIN C.B (2/2)
TO/FROM A MAIN C.B (1/2)
STEREO
PLL CE
DATA
CLK
TUNE/IFC
TM BASE
GND
PLL
TUNER SW
VM
VCC
TU-ON
TUN-L
TUN-R
TO/FROM A MAIN C.B (1/2)
DC BALANCE ADJ
FM DET-2N
TU:9.1
OTHER:0
BUFFERS
DET OUT
IC771 LA1837NL
DECODER
PCFA2H-450
IF ADJ
FM IF AMP
FM BAND SW
FFE801 8ZA-1 FEUNM
ANTENNA
75Ω
AM LOOP
L981 (3/3) AM PACK4N
L981 (2/3) AM PACK4N
L981 (1/3) AM PACK4N
HW TRACKING ADJ
REG
AM LO
AM RF
S-CURVE
CLK
TP1
TP2
TP3
TP4
TP9
TP8
* TP3, 4 DC BALANCE
SIGNAL:
:FM
:AM

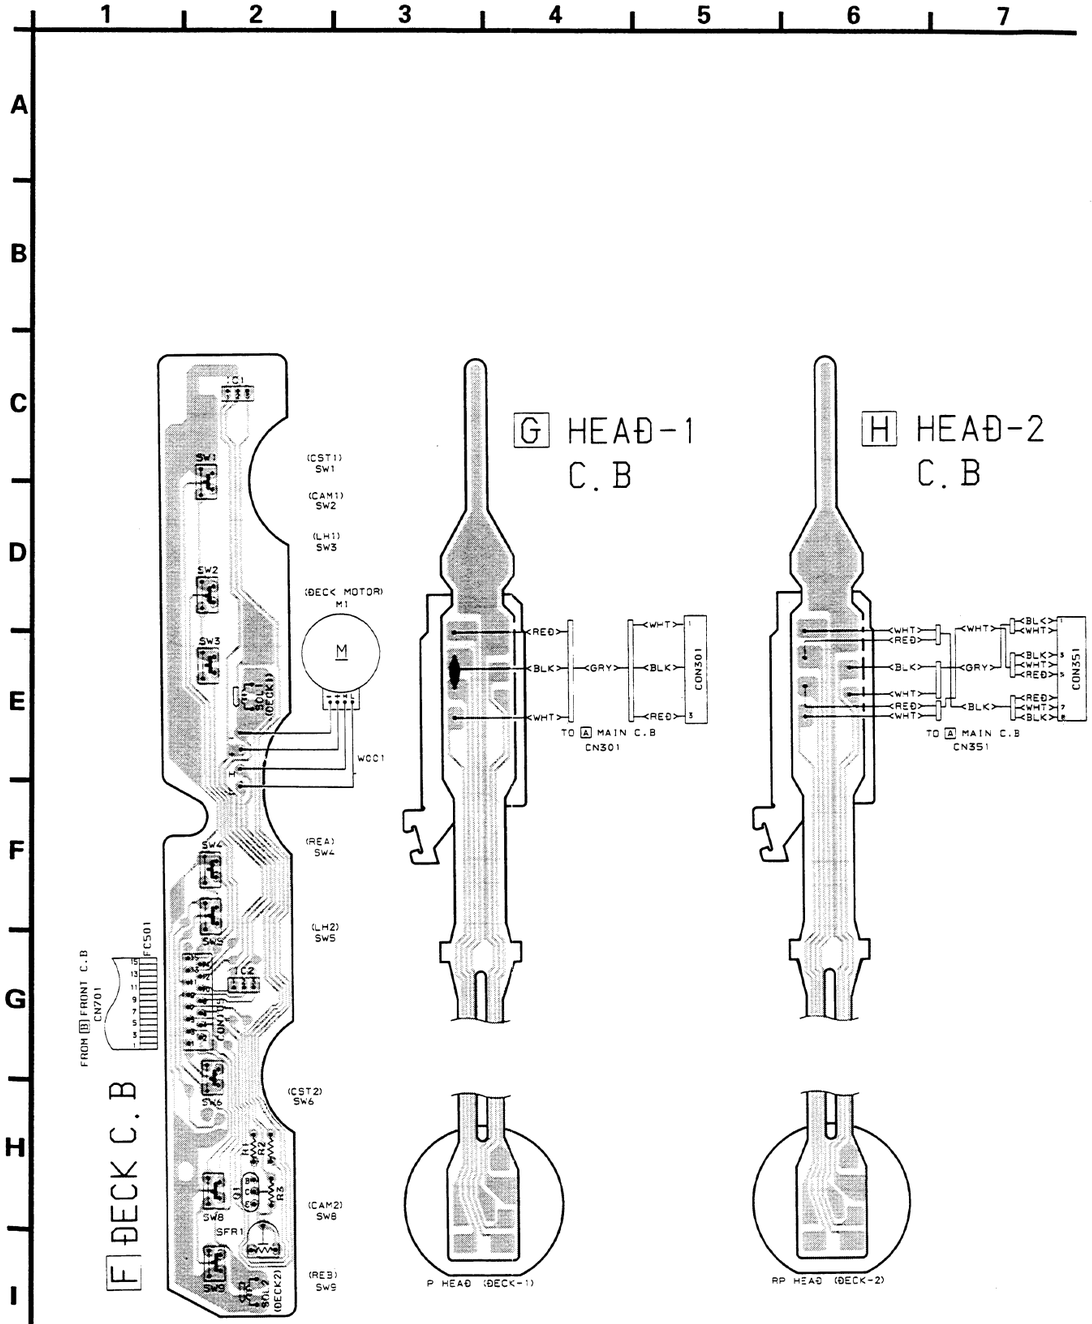

FL GRID ASSIGNMENT & ANODE CONNECTION

FL, BJ610GK

GRID ASSIGNMENT

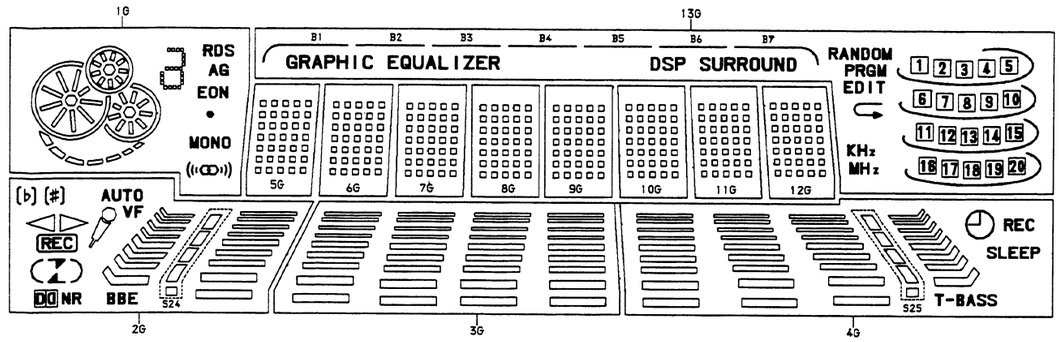

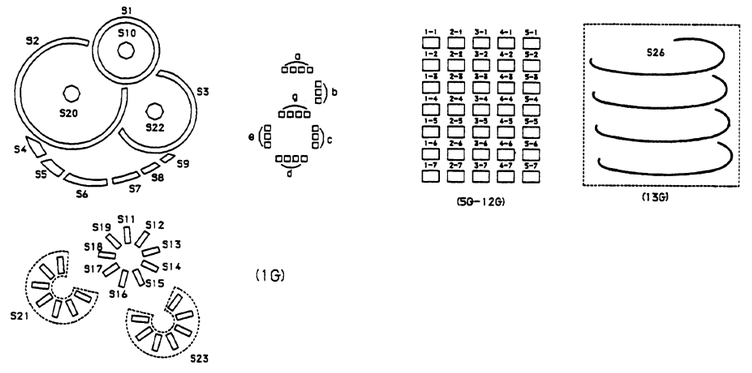

GRID ASSIGNMENT

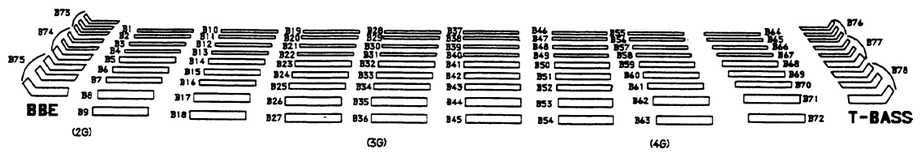

ANODE CONNECTION

	1G	2G	3G	4G	5G-12G	13G
P1	EON	B9	B45	REC	1-1	DSP SURROUND
P2	AG	DOLBY NR	B36	B72	2-1	GRAPHIC EQUALIZER
P3	○	BBE	B27	B63	3-1	B7
P4	MONO	S24	B18	B54	4-1	B6
P5	((●))	B8	B44	◴	5-1	B5
P6	RDS	☾	B35	B71	1-2	B4
P7	b	⇄	B26	B62	2-2	B3
P8	c	☽	B17	B53	3-2	B2
P9	a, d, g	B7	B43	SLEEP	4-2	B1
P10	e	REC	B34	B70	5-2	RANDOM
P11	S1	◁	B25	B61	1-3	PRGM
P12	S11	▷	B16	B52	2-3	EDIT
P13	S12	B6	B42	T-BASS	3-3	⊂
P14	S19	♭ ♯	B33	B69	4-3	KHz
P15	S13	(♭)	B24	B60	5-3	MHz
P16	S10	(♯)	B15	B51	1-4	S26
P17	S18	B5	B41	B78	2-4	16
P18	S14	B75	B32	B68	3-4	11

	1G	2G	3G	4G	5G-12G	13G
P19	S17	B74	B23	B59	4-4	6
P20	S15	B73	B14	B50	5-4	1
P21	S16	B4	B40	B77	1-5	17
P22	S3	VF	B31	B67	2-5	12
P23	S23	AUTO	B22	B58	3-5	7
P24	S22	—	B13	B49	4-5	2
P25	S9	B3	B39	B76	5-5	18
P26	S8	—	B30	B66	1-6	13
P27	S7	—	B21	B57	2-6	8
P28	S6	—	B12	B48	3-6	3
P29	S5	B2	B38	S25	4-6	19
P30	S4	—	B29	B65	5-6	14
P31	S2	—	B20	B56	1-7	9
P32	S21	—	B11	B47	2-7	4
P33	S20	B1	B37	—	3-7	20
P34	—	—	B28	B64	4-7	15
P35	—	—	B19	B55	5-7	10
P36	—	—	B10	B46	—	5

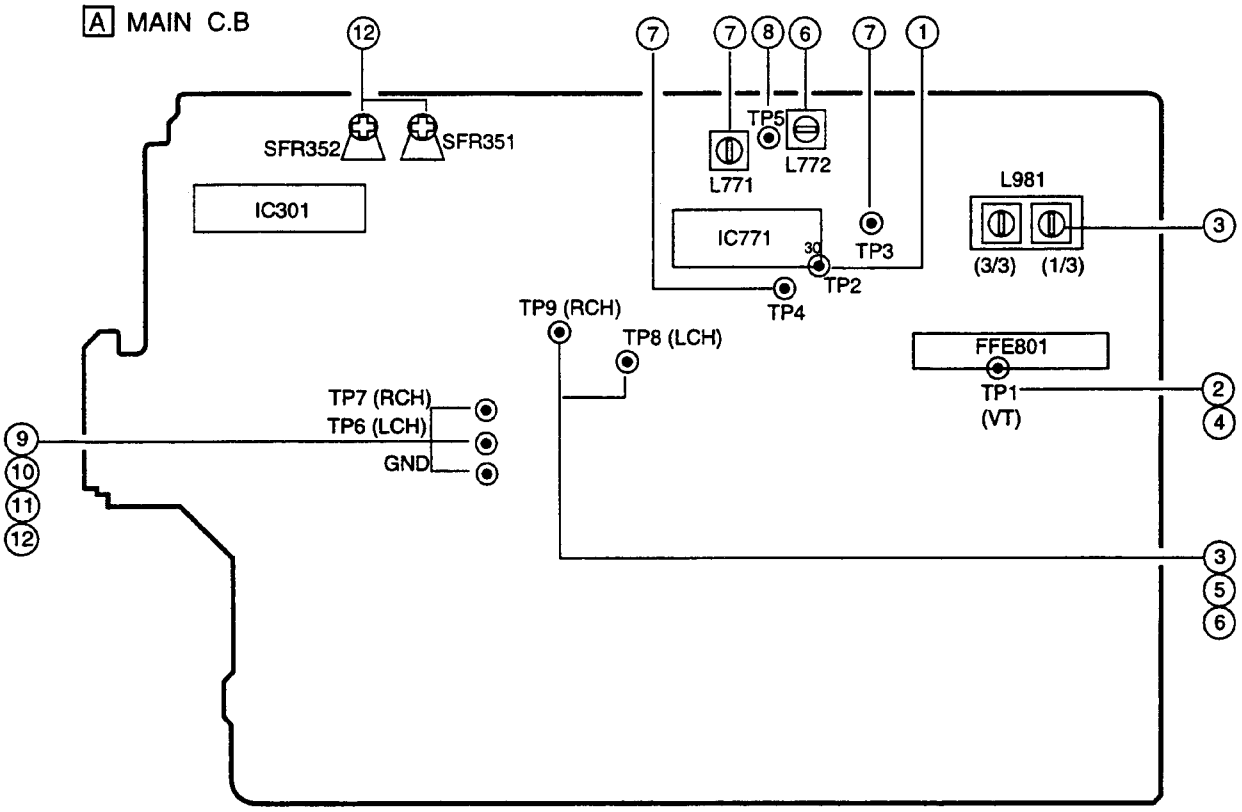

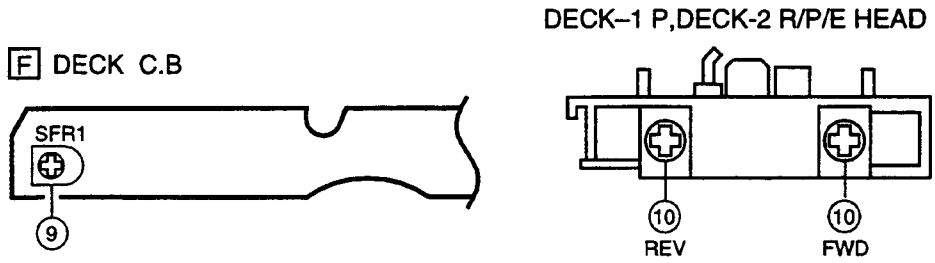

< TUNER SECTION >

1. Clock Frequency Check
   Settings : • Test point : TP2
   Method : Set to AM 1710kHz and check that the test point is 2160kHz ± 45Hz.

2. AM VT Check
   Settings : • Test point : TP1
   Method : Set to AM 1710kHz and AM 530kHz and check that the test point is less than 8.5V(1710kHz) and more than 0.6V(530kHz).

3. AM Tracking Adjustment
   Settings : • Test point : TP8(Lch), TP9(Rch)
   • Adjustment location :
   L981(1/3) 1000kHz
   Method : Set to AM 1000kHz and adjust L981(1/3) to MAX.

4. FM VT Check
   Settings : • Test point : TP1
   Method : Set to FM 108.0MHz and check that the test point is less than 8.0V.
   Set to FM 87.5MHz and check that the test point is more than 0.5V.

5. FM Tracking Check
   Settings : • Test point : TP8(Lch), TP9(Rch)
   Method : Set to FM 98.0MHz and check that the test point is less than 9.0dB.

6. AM IF Adjustment
   Settings : • Test point : TP8(Lch), TP9(Rch)
   • Adjustment location :
   L772 ..... 450kHz

7. DC Balance / Mono Distortion Adjustment
   Settings : • Test point : TP3, TP4
   • Adjustment location : L771
   • Input level : 54dB
   Method : Set to FM 98.0MHz and adjust L771 so that the voltage between TP3 and TP4 becomes 0V ± 0.04V. Next, check that the distortion is less than 1.3%

8. Auto Stop Level Check
   AM
   Settings : • Input level : 52dB
   • Test point : TP5
   Method : Set to AM 1000kHz and check that the auto stop is at 52dB +10dB / -15dB.

   FM
   Settings : • Input level : 25dB
   • Test point : TP5
   Method : Set to FM 98.0MHz and check that the auto stop is at 25dB ± 10dB.

< DECK SECTION >

9. Tape Speed Adjustment (DECK 1, DECK 2)
   Settings : • Test tape : TTA-100
   • Test point : TP6(Lch), TP7(Rch)
   • Adjustment location : SFR1
   Method : Play back the test tape and adjust SFR1 so that the frequency counter reads 3000Hz ± 5Hz.

10. Head Azimuth Adjustment (DECK 1, DECK 2)
    Settings : • Test tape : TTA-300
    • Test point : TP6(Lch), TP7(Rch)
    • Adjustment location : Head azimuth adjustment screw
    Method : Play back (FWD) the 10kHz signal of the test tape and adjust screw so that the output becomes maximum.
    Next, perform on REV PLAY mode.

11. PB Frequency Response Check (DECK 1, DECK 2)
    Settings : • Test tape : TTA-300
    • Test point :TP6(Lch), TP7(Rch)
    Method : Play back the 315Hz and 10kHz signals of the test tape and check that the output ratio of the 10kHz signal with respect to that of the 315Hz signal is within 5dB.

12. REC/PB Frequency Response Adjustment
    Settings : • Test tape : TTA-602
    • Test point : TP6(Lch), TP7(Rch)
    • Input signal : 1kHz / 10kHz (LINE IN)
    • Adjustment location : SFR351 (Lch)
    SFR352 (Rch)
    Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP6, TP7 becomes -28dBV. Record and play back the 1kHz and 10kHz signals and adjust SFRs so that the output of the 10kHz signals becomes 0dB ± 0.5dB with respect to that of the 1kHz signal.

PRACTICAL SERVICE FIGURE

<TUNER SECTION>

<FM SECTION>

IHF Sensitivity :	Less than 10 / 9 / 9dB
(THD 3%)	[at 87.5 / 98.0 / 108.0MHz]
S/N 50dB Quieting sensitivity :	
	Less than 35dB
	[at 98.0MHz]
Signal to noise ratio :	Mono : More than 72dB
	Stereo : More than 66dB
	[at 98.0MHz]
Distortion :	Mono : Less than 1.2%
	Stereo : Less than 2.0%
	[at 98.0MHz]
Auto stop level :	25dB ± 10dB [at 98.0MHz]
Stereo separation :	More than 30dB [at 98.0MHz]
Intermediate frequency :	10.7MHz

<MW SECTION>

Sensitivity :	Less than 60dB
(S/N 20 dB)	[at 600kHz]
	Less than 58dB
	[at 1000kHz]
	Less than 58dB
	[at 1400kHz]
Signal to noise ratio :	More than 36dB
	[at 1000kHz]
Distortion :	Less than 1.5%
	[at 1000kHz]
Auto stop level :	52dB +10/-15dB
	[at 1000kHz]
Intermediate frequency :	450kHz

<DECK SECTION>

Tape speed :	3000Hz ± 45Hz
Wow & flutter :	Less than 0.21%
	(W.R.M.S)
Take-up torque :	30 ~ 55g-cm
	(FWD, REV)
F.F torque :	75 ~ 160g-cm
REW torque :	75 ~ 160g-cm
Back tension :	2 ~ 7g-cm
	(FWD, REV)
PB output level :	300mV± 3dB
	(SP OUT 2V, TTA-200)
REC/PB output level :	0dB ± 3dB
	(SP OUT 2V, NORM)
Distortion (REC/PB) :	Less than 2.0%
	(NORM)
Noise level (PB) :	Less than 2.0mV
	(NORM, SP OUT 2V)
Noise level (REC/PB) :	Less than 3.0mV
	(NORM, SP OUT 2V)
Erasing ratio :	More than 60dB
	(at 125Hz, +10VU)
Test tape :	TTA-200
	TTA-602 (NORMAL)

IC DESCRIPTION

IC, LC866560W-5G73

Pin No.	Pin Name	I/O	Description
1	CLK	O	CLOCK output for MAIN,FRONT PWB.
2	DATA	O	DATA output for MAIN, FRONT PWB.
3	STB	O	Latch strobe output for MAIN PWB.
4	$\overline{\text{O-LED}}$	O	LED $\overline{\text{ON}}$/OFF output.
5	STB (SHIFT)	O	Latch strobe output for FRONT shift register.
6	$\overline{\text{RESET}}$ (GAME)	I	Reset input for Sound IC.
7	STB (GAME)	O	Latch strobe output for Sound IC.
8	I-NAR (GAME)	I	Sound IC NAR input.
9	PLL-CE	O	PLL IC chip enable output.
10	O-DSC	O	Serial data output for PROLOGIC PWB. (Not connected)
11	$\overline{\text{I-MIC}}$	I	Microphone input for AUTO VF display.
12	$\overline{\text{RESET}}$	I	Reset input.
13	I-$\overline{\text{HP-MUTE}}$	I	Headphone input for MUTE by PROLOGIC.
14	I-DISH	I	CD turntable photo sensor A/D converter input.
15	VSS 1	–	GND.
16	CF 1	–	5.76MHz oscillator circuit.
17	CF 2	–	
18	VDD 1	–	Power supply input.
19	$\overline{\text{HOLD}}$	I	Power failure detection input. "H" normal operation, "L" main power cannot be turned on.
20	KEY-1	I	KEY input.(A/D)
21	KEY-2	I	
22	KEY-3	I	
23	I-CD SW	I	CD mechanical switch A/D converter input.
24	I-JOG	I	JOG dial A/D level input.
25	I-TU-SIG/$\overline{\text{MS}}$	I	Tuner signal and deck music sensor signal input.
26	I-SPEANA	I	A/D input for spectrum analyzer display.
27	I-WRQ/RDS-CLK	I	CD WRQ input. TUNER RDS CLOCK input.
28	I-TM-BASE	I	REFERENCE CLOCK input for timer watch.
29	I-$\overline{\text{RMC}}$	I	System remote control signal input.
30~41	G13~G2	O	FL GRID output G2~G13.
42, 43	P36, P35	O	FL SEGMENT output P35, P36.
44	G1	O	FL GRID output G1.
45	P34	O	FL SEGMENT output P34.
46	VDD3	–	Power supply input.
47	SPEANA-A/P33	O	Spectrum analyzer band switching output /FL segment P33 output.
48	SPEANA-B/P32	O	Spectrum analyzer band switching output /FL segment P32 output.
49	SPEANA-C/P31	O	Spectrum analyzer band switching output /FL segment P31 output.
50	P30/$\overline{\text{GAME}}$	I/O	FL segment P30 output / GAME input to diode.
51	VP	–	Power supply input for FL display.
52	P29/AM-ST	I /O	FL segment P29 output / AM-ST input to diode.
53	P28/LW	I/O	FL segment P28 output / LW input to diode.
54	P27/SW	I/O	FL segment P27 output / SW input to diode.

Pin No.	Pin Name	I/O	Description
55	P26/FM 1	I/O	FL segment P26 output / FM1 (OIRT) input to diode.
56	P25/RDS	I/O	FL segment P25 output / RDS input to diode.
57	P24/R+1	I/O	FL segment P24 output / RVS+1 way input to diode.
58	P23/$\overline{\text{DSP}}$	I/O	FL segment P23 output / $\overline{\text{DSP}}$ input to diode.
59	P22/D-SURR	I/O	FL segment P22 output / SURR input to diode.
60	P21/K-CON	I/O	FL segment P21 output / K-CON input to diode.
61	P20/$\overline{\text{DOLBY}}$	I/O	FL segment P20 output / DOLBY input to diode.
62	P19/5.1CH	I/O	FL segment P19 output / 5.1CH input to diode.
63	P18/AM10K	I/O	FL segment P18 output / AM 10kHz input to diode.
64	P17/$\overline{\text{CST 2}}$	I/O	FL segment P17 output / DECK2 cassette detect switch data input.
65	P16/$\overline{\text{REB}}$	I/O	FL segment P16 output / DECK2 side-B record OK switch data input.
66	P15/$\overline{\text{CAM 2}}$	I/O	FL segment P15 output / DECK2 CAM switch data input.
67	P14/AUTO 1	I/O	FL segment P14 output / DECK1 AUTO stop signal input.
68	P13/AUTO 2	I/O	FL segment P13 output / DECK2 AUTO stop signal input.
69	P12/$\overline{\text{CAM 1}}$	I/O	FL segment P12 output / DECK1 CAM switch data input.
70	P11/$\overline{\text{CST 1}}$	I/O	FL segment P11 output / DECK1 cassette detect switch data input.
71	P10/$\overline{\text{REA}}$	I/O	FL segment P10 output / DECK2 side A record OK switch data input.
72	VDD 4	–	Power supply input.
73 ~ 81	P9 ~ P1	O	FL segment P1 ~ P9 output.
82	O-KSCAN	O	Switch SCAN timing output.
83	$\overline{\text{TRAY-CLS}}$	O	CD TRAY CLOSE data output.
84	$\overline{\text{TRAY-OPEN}}$	O	CD TRAY OPEN data output.
85	DISH-FWD	O	CD turntable forward rotation output.
86	DISH-RVS	O	CD turntable reverse rotation output.
87	O-DATA	O	CD data output.
88	O-CDCLK	O	CD clock output.
89	VSS2	-	GND.
90	VDD2	-	Power supply input.
91	$\overline{\text{O-POWER}}$	O	System power supply $\overline{\text{ON}}$/OFF output.
92	O-MUTE	O	System mute ON/$\overline{\text{OFF}}$ output.
93	$\overline{\text{SOL 1}}$	O	DECK 1 solenoid output.
94	$\overline{\text{SOL 2}}$	O	DECK 2 solenoid output.
95	O-MOTOR	O	DECK MOTOR ON/$\overline{\text{OFF}}$ output.
96	I-IFC/$\overline{\text{STEREO}}$/SUBQ	I	Tune IF count serial data input /CD SUBQ data input.
97	I-$\overline{\text{STEREO}}$/ DRF(SQCLK)	I/O	Tuner stereo detected input / CD SQ CLOCK output.
98	I-RDS-DATA/ O-CDCE	I/O	RDS data input / CD chip enable output.
99	RT-A	I	Rotary encoder A input.
100	RT-B	I	Rotary encoder B input.

IC BLOCK DIAGRAM

IC, M62445FP-601

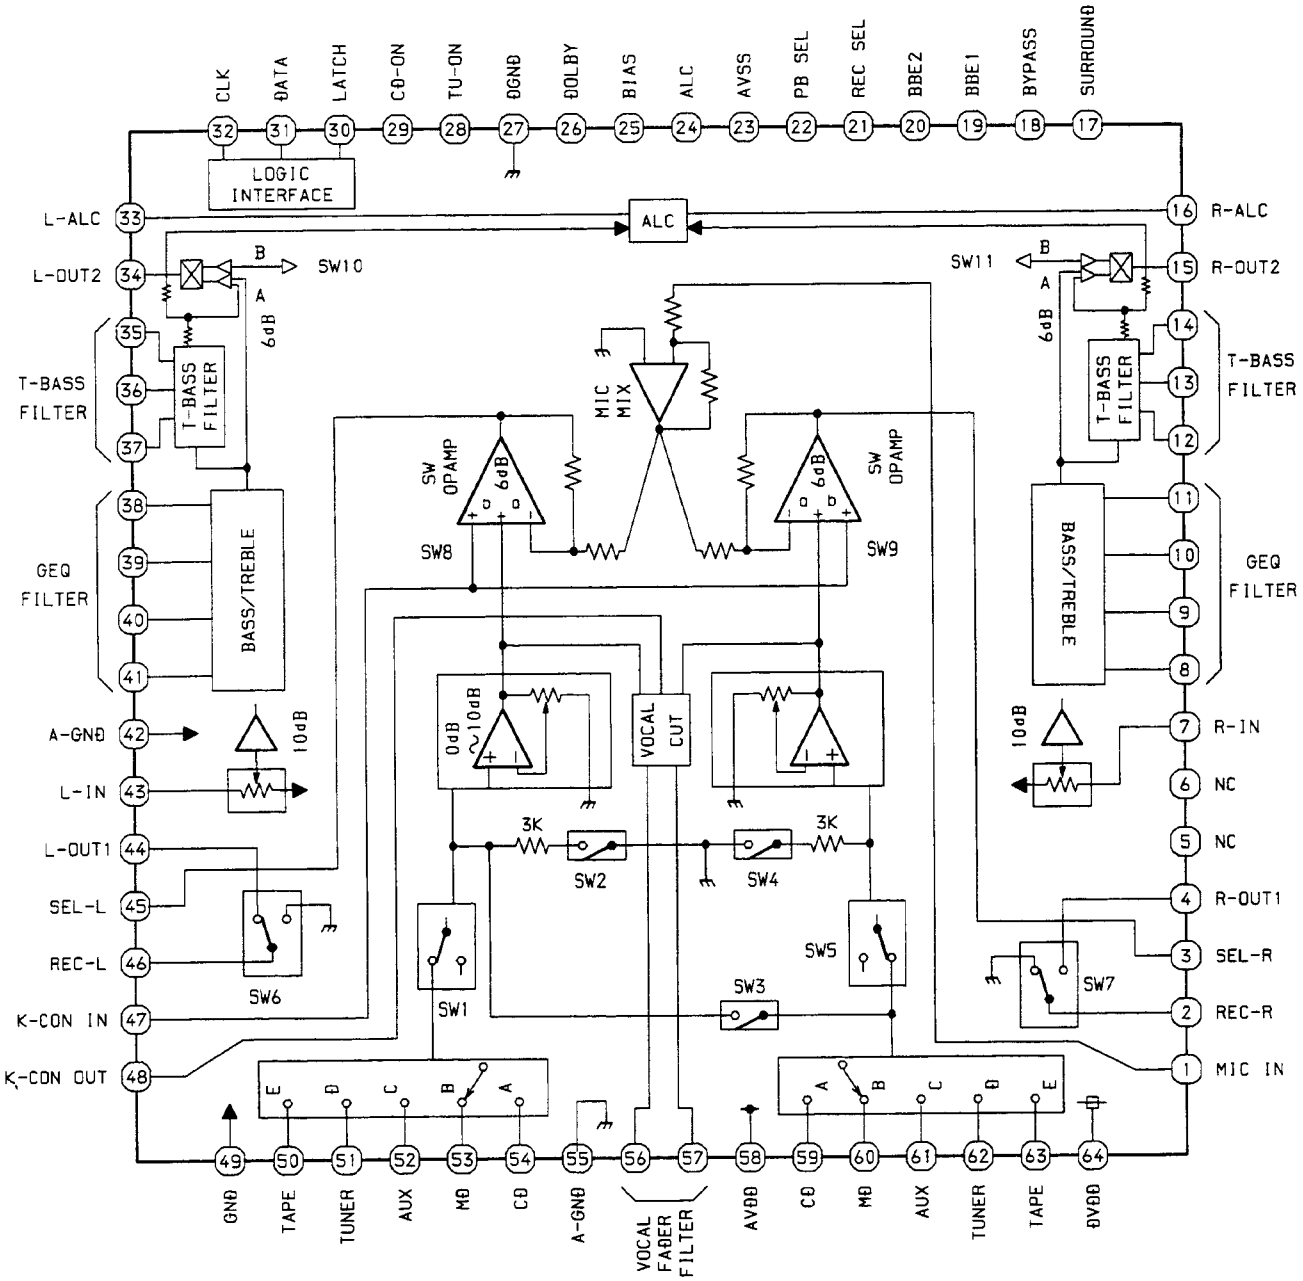

IC, BU2092F

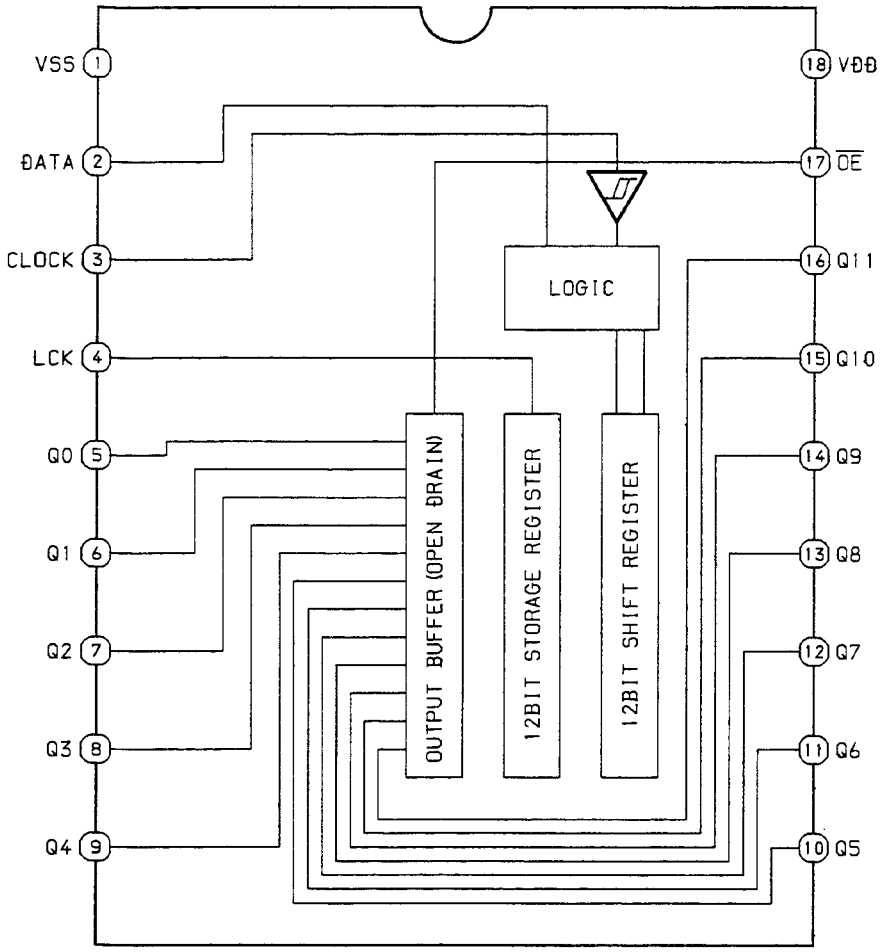

IC, LC72131D

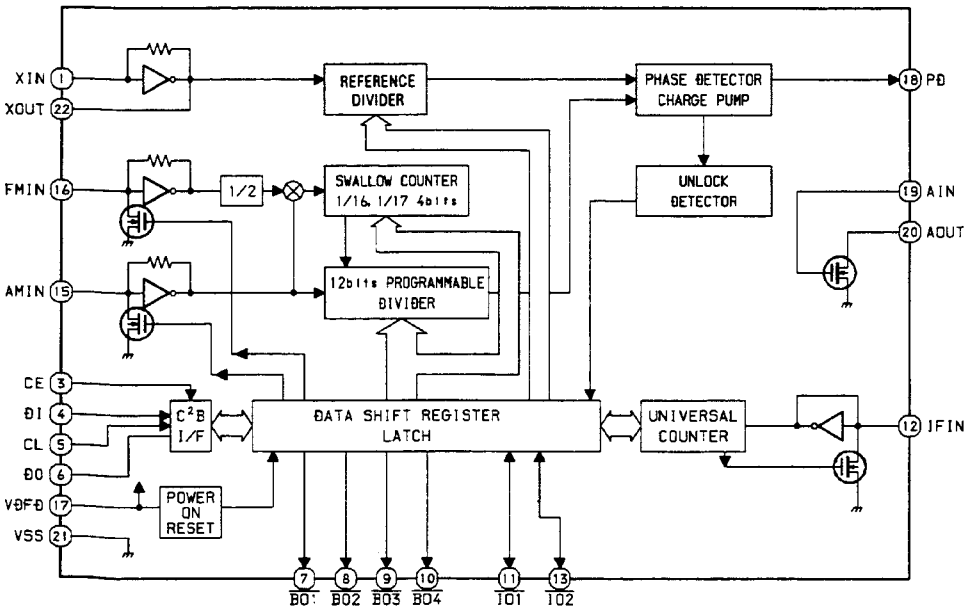

IC, BU9262AFS

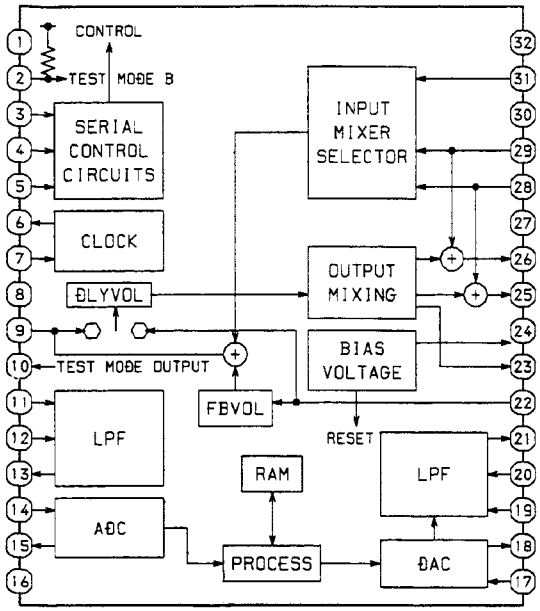

IC, BU4094BCF

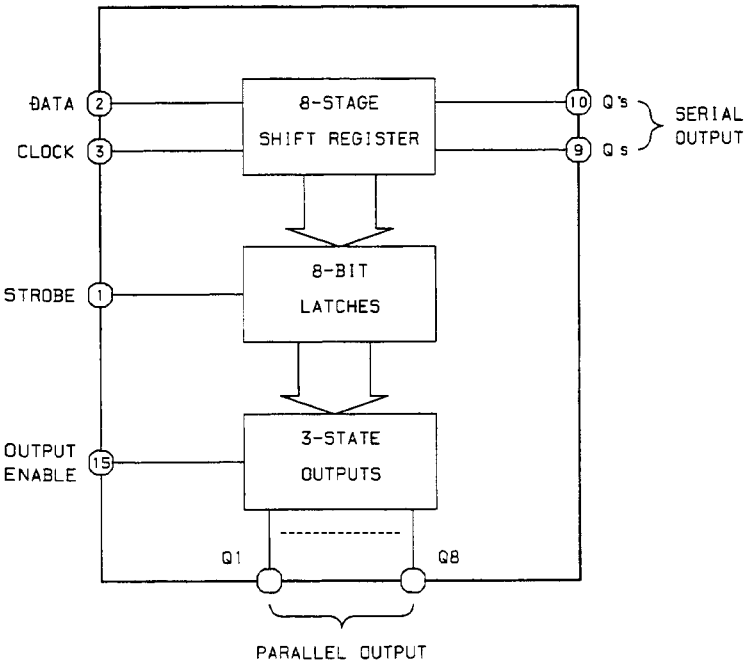

TRUTH TABLE

CLOCK	OUTPUT ENABLE	STROBE	DATA	PARALLEL OUTPUTS		SERIAL OUTPUTS	
				Q1	Qn	Qs	Q's
↑	L	X	X	Z	Z	Q7	NO Chg.
↓	L	X	X	Z	Z	No Chg.	Qs
↑	H	L	X	No Chg.	No Chg.	Q7	No Chg.
↑	H	H	L	L	Qn-1	Q7	No Chg.
↑	H	H	H	H	Qn-1	Q7	No Chg.
↓	H	X	X	No Chg.	No Chg.	No Chg.	Qs

Z=High Impedance

X=Don't Care

IC, NJM2152M

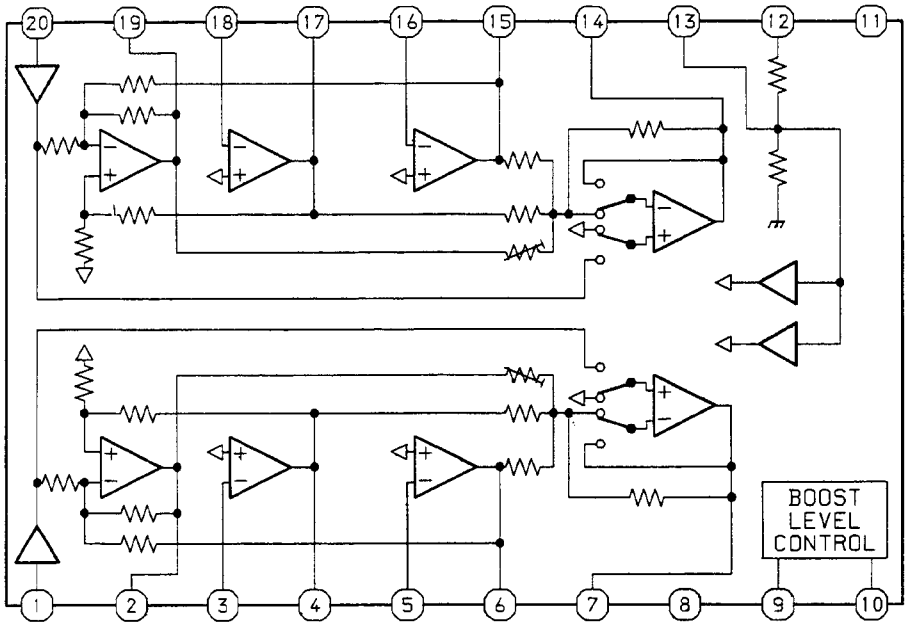

IC, BA3835S

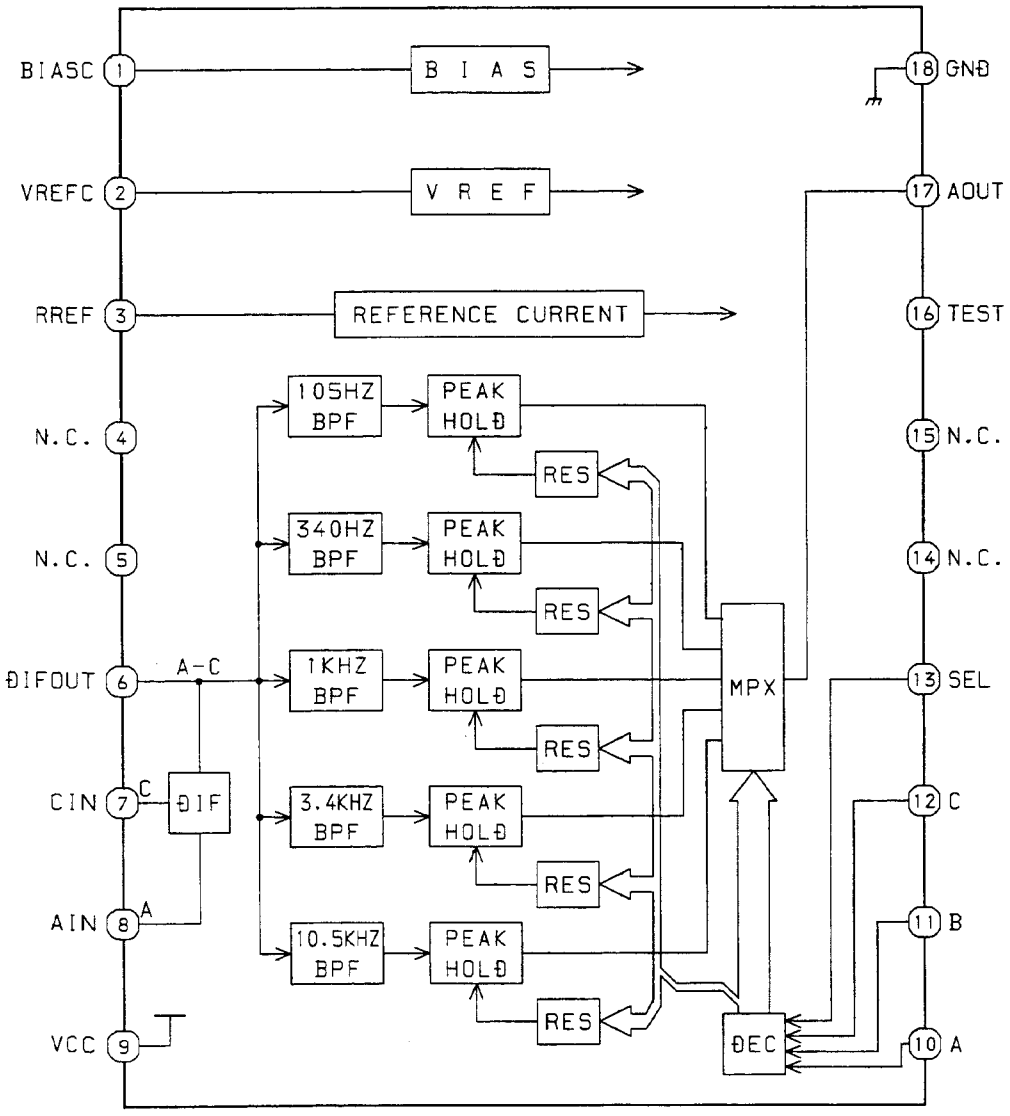

IC, MSM6654A-521GS-KR1

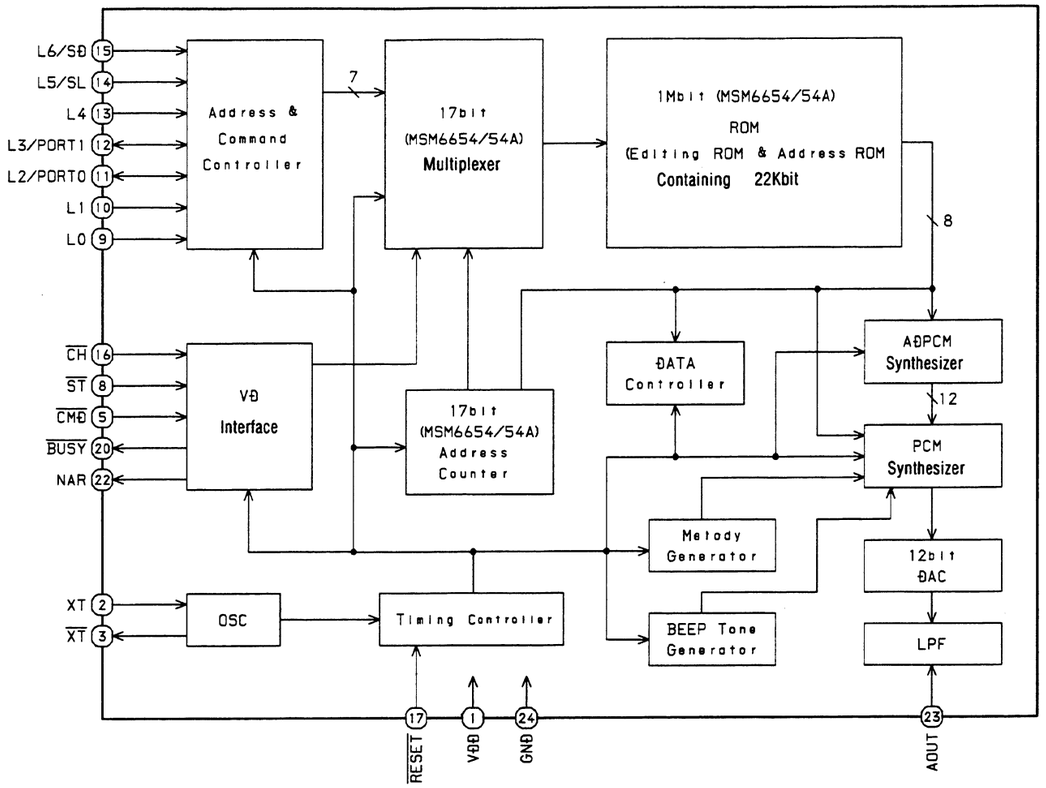

IC, LA1837

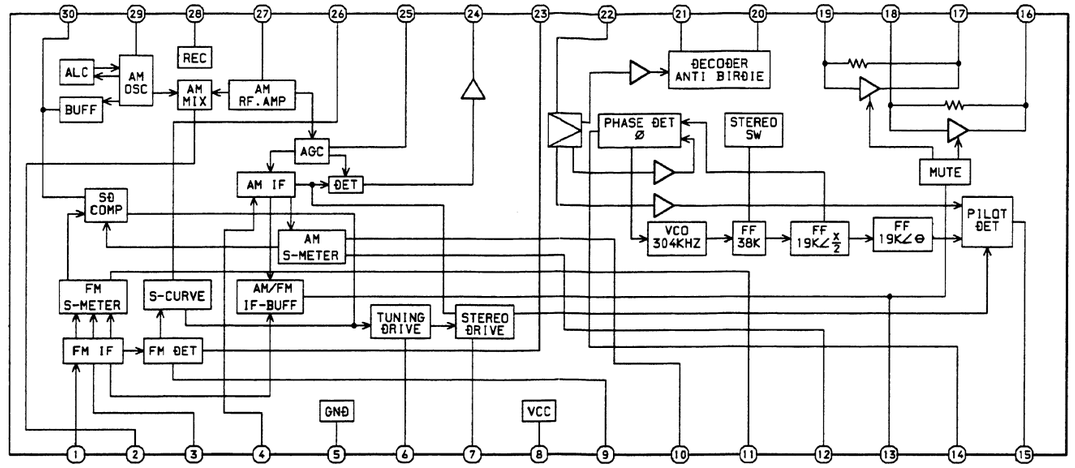

IC, BA7762AFS

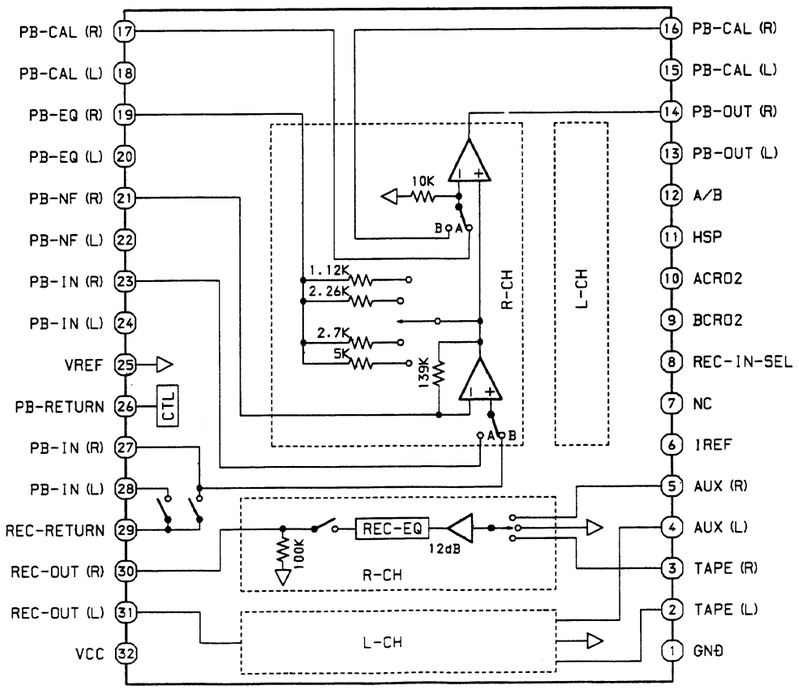

MECHANICAL EXPLODED VIEW 1 / 1

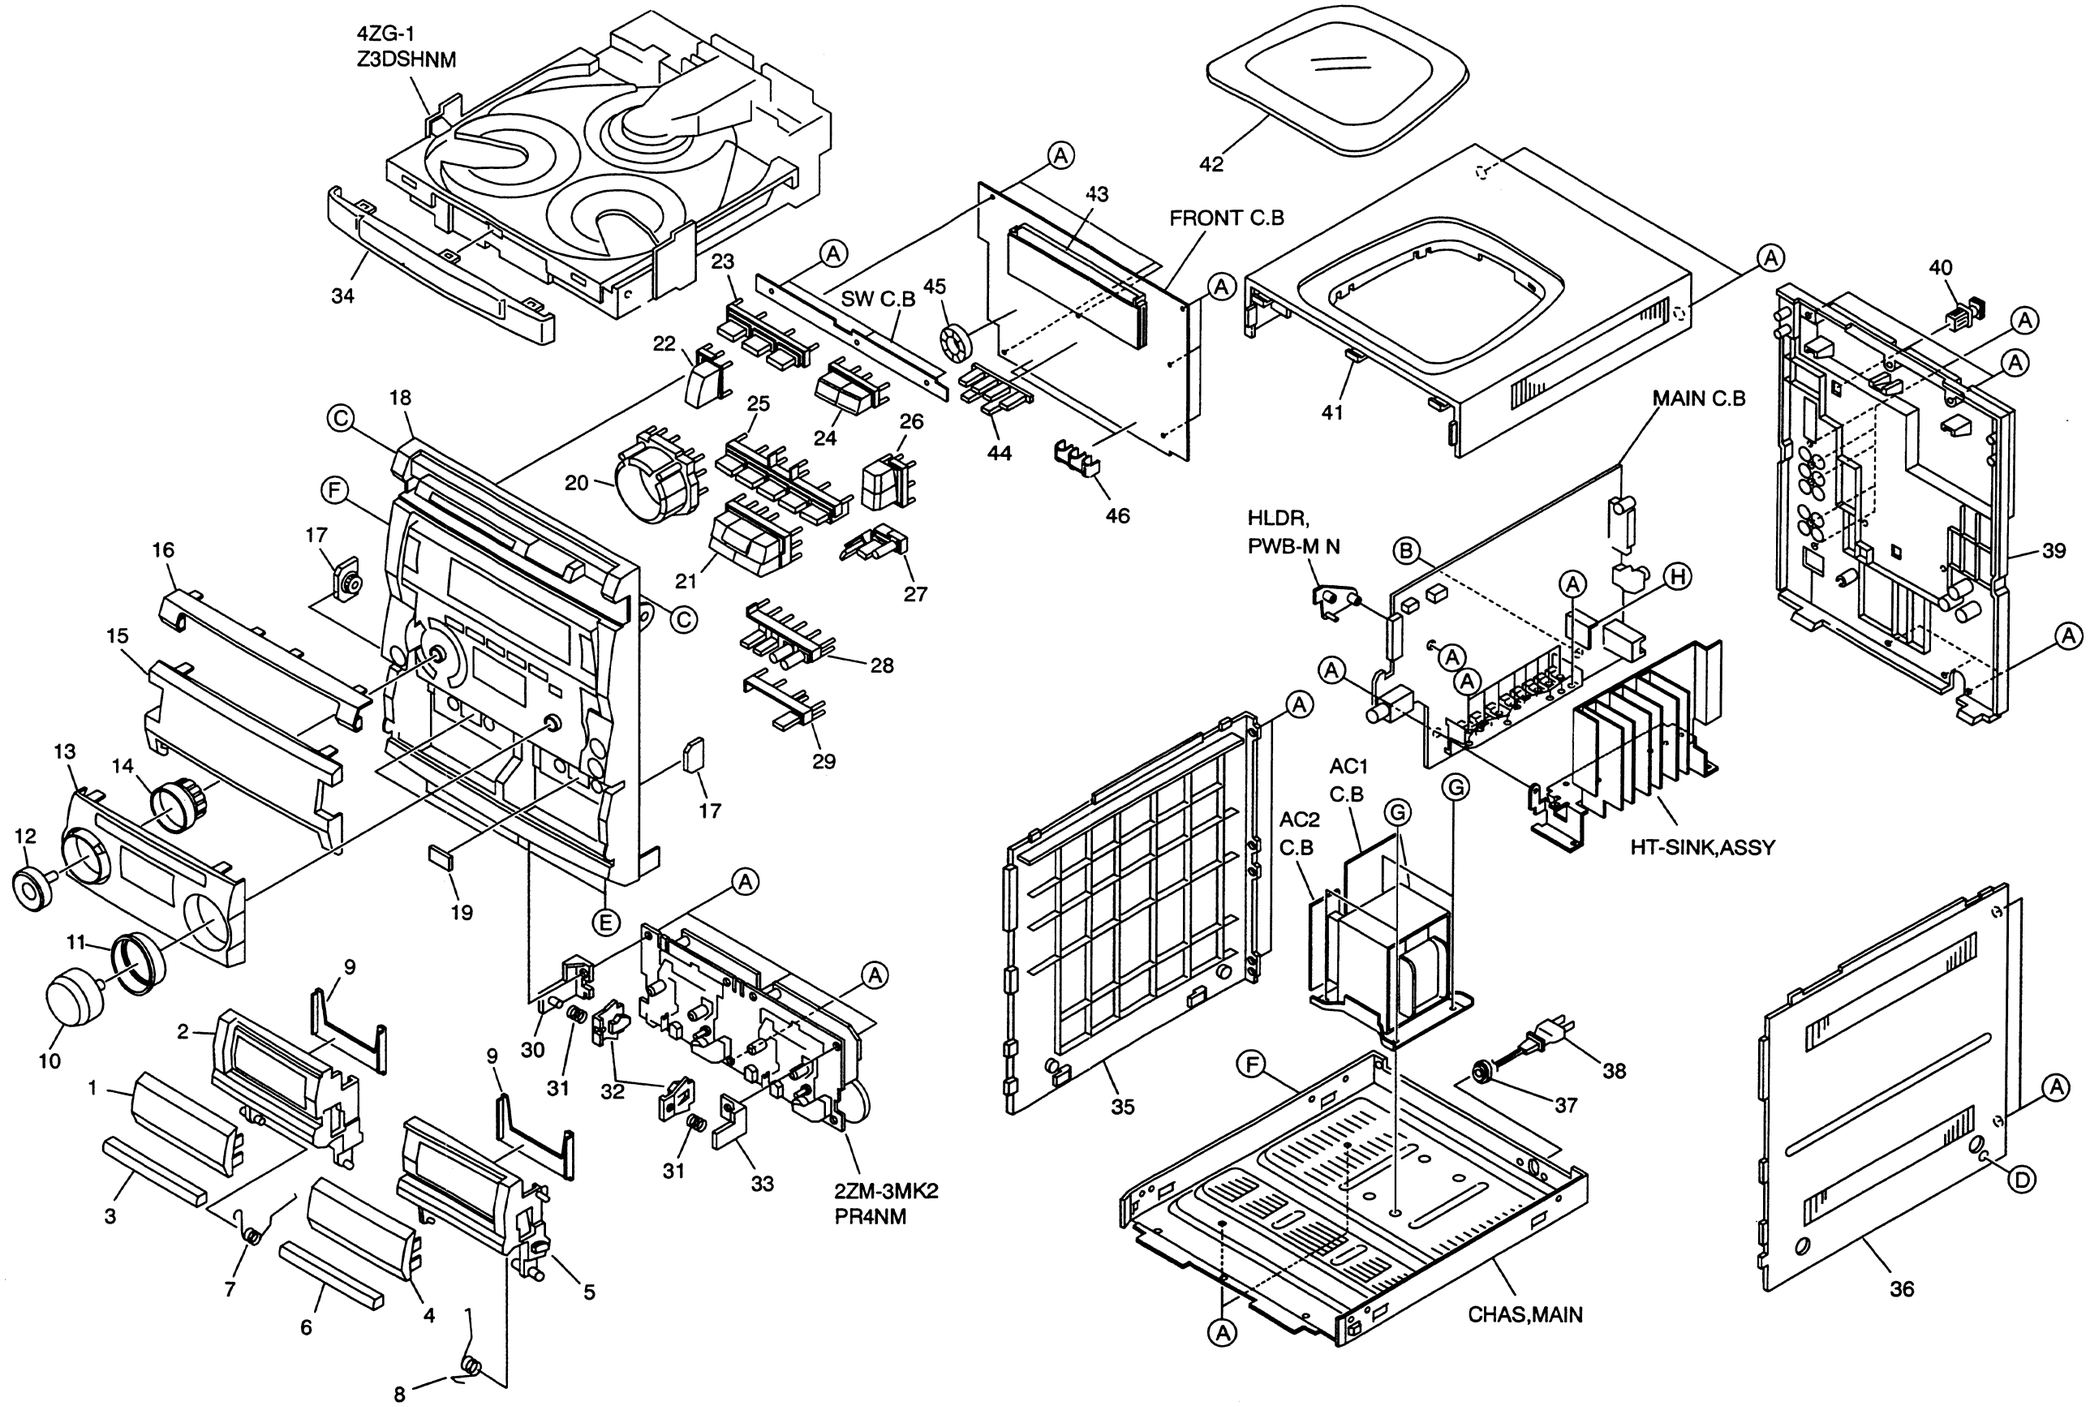

MECHANICAL PARTS LIST 1 / 1

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	88-NF6-013-010		WINDOW,CASS 1
2	88-NF6-003-010		BOX,CASS 1
3	88-NF6-008-010		PLATE,CASS 1
4	88-NF6-014-010		WINDOW,CASS 2
5	88-NF6-004-010		BOX,CASS 2
6	88-NF6-009-010		PLATE,CASS 2
7	82-NF5-218-010		SPR-T,EJECT 1 (SIN)
8	82-NF5-219-010		SPR-T,EJECT 2 (SIN)
9	86-NF6-061-010		REFLECTOR,CASS
10	88-NF6-015-010		KNOB,RTRY VOL
11	88-NF6-017-010		RING,VOL
12	88-NF6-016-010		KNOB,RTRY JOG
13	88-NF6-005-010		PANEL,FR
14	88-NF6-050-010		REFLECTOR,JOG
15	88-NF6-012-010		WINDOW,DISPLAY<U>
15	88-NF6-073-010		WINDOW,DSPLY H 707<LH>
16	88-NF6-007-010		PANEL,CD
17	87-NF8-220-010		DMPR,150
18	88-NF6-018-010		CABI,FR H<LH>
18	88-NF6-001-010		CABI,FR U<U>
19	81-532-080-010		LABEL, CASS. COMPT
20	88-NF6-029-010		KEY,JOG
21	88-NF6-041-010		KEY,ASSY OPE
22	88-NF6-026-010		KEY,POWER
23	88-NF6-021-010		KEY,ASSY DISC
24	88-NF6-025-010		KEY,OPEN
25	88-NF6-030-010		KEY,ASSY FUN
26	88-NF6-027-010		KEY,BBE
27	88-NF6-036-010		KEY,MIC
28	88-NF6-037-010		KEY,REC
29	88-NF6-038-010		KEY,KARAOKE
30	87-NF4-216-010		HLDR,LOCK 1
31	86-NF9-224-010		SPR-C,LOCK
32	82-NF5-229-010		PLATE,LOCK
33	87-NF4-217-010		HLDR,LOCK 2
34	88-NF6-006-010		PANEL,TRAY
35	87-NB8-005-010		PANEL,LEFT<LH>
35	87-NB8-051-010		PANEL,LEFT U<U>
36	88-NF8-047-010		PANEL,RIGHT 2<LH>
36	88-NF8-048-010		PANEL,RIGHT 2 U<U>
37	87-085-185-010		BUSHING, AC CORD (E)<LH>
37	87-085-189-010		BUSHING, CORD (U)<U>
⚠ 38	87-050-053-010		AC CORD ASSY,U-2<U>
⚠ 38	87-050-079-010		AC-CORD ASSY,E<LH>
39	88-NF6-058-010		CABI,REAR LHSTNM<LH>
39	88-NF6-002-010		CABI,REAR USTNM<U>
40	84-ZG1-245-210		CAP,OPTICAL
41	87-NF6-021-010		PANEL,TOP
42	86-NF6-101-010		WINDOW TOP UL<U>
42	86-NF6-007-010		WINDOW,TOP<LH>
43	88-NF6-205-010		GUIDE,FL 40-150- 9
44	88-NF6-204-010		GUIDE,LED OPE
45	88-NF6-203-010		GUIDE,LED JOG
46	87-NF5-210-010		GUIDE,LED
A	87-067-703-010		TAPPING SCREW, BVT2+3-10
B	87-NF4-224-010		S-SCREW,IT3B+3-8 CU
C	87-721-097-410		QT2+3-12 GLD
D	87-067-641-010		UTT2+3-8(W/O SLOT)BL
E	87-067-688-010		BVTT+3-6
F	87-721-096-410		QT2+3-10 GLD
G	87-078-019-010		S-SCREW,IT+4-6
H	87-067-579-010		TAPPING SCREW, BVT2+3-8

TAPE MECHANISM EXPLODED VIEW 1 / 1

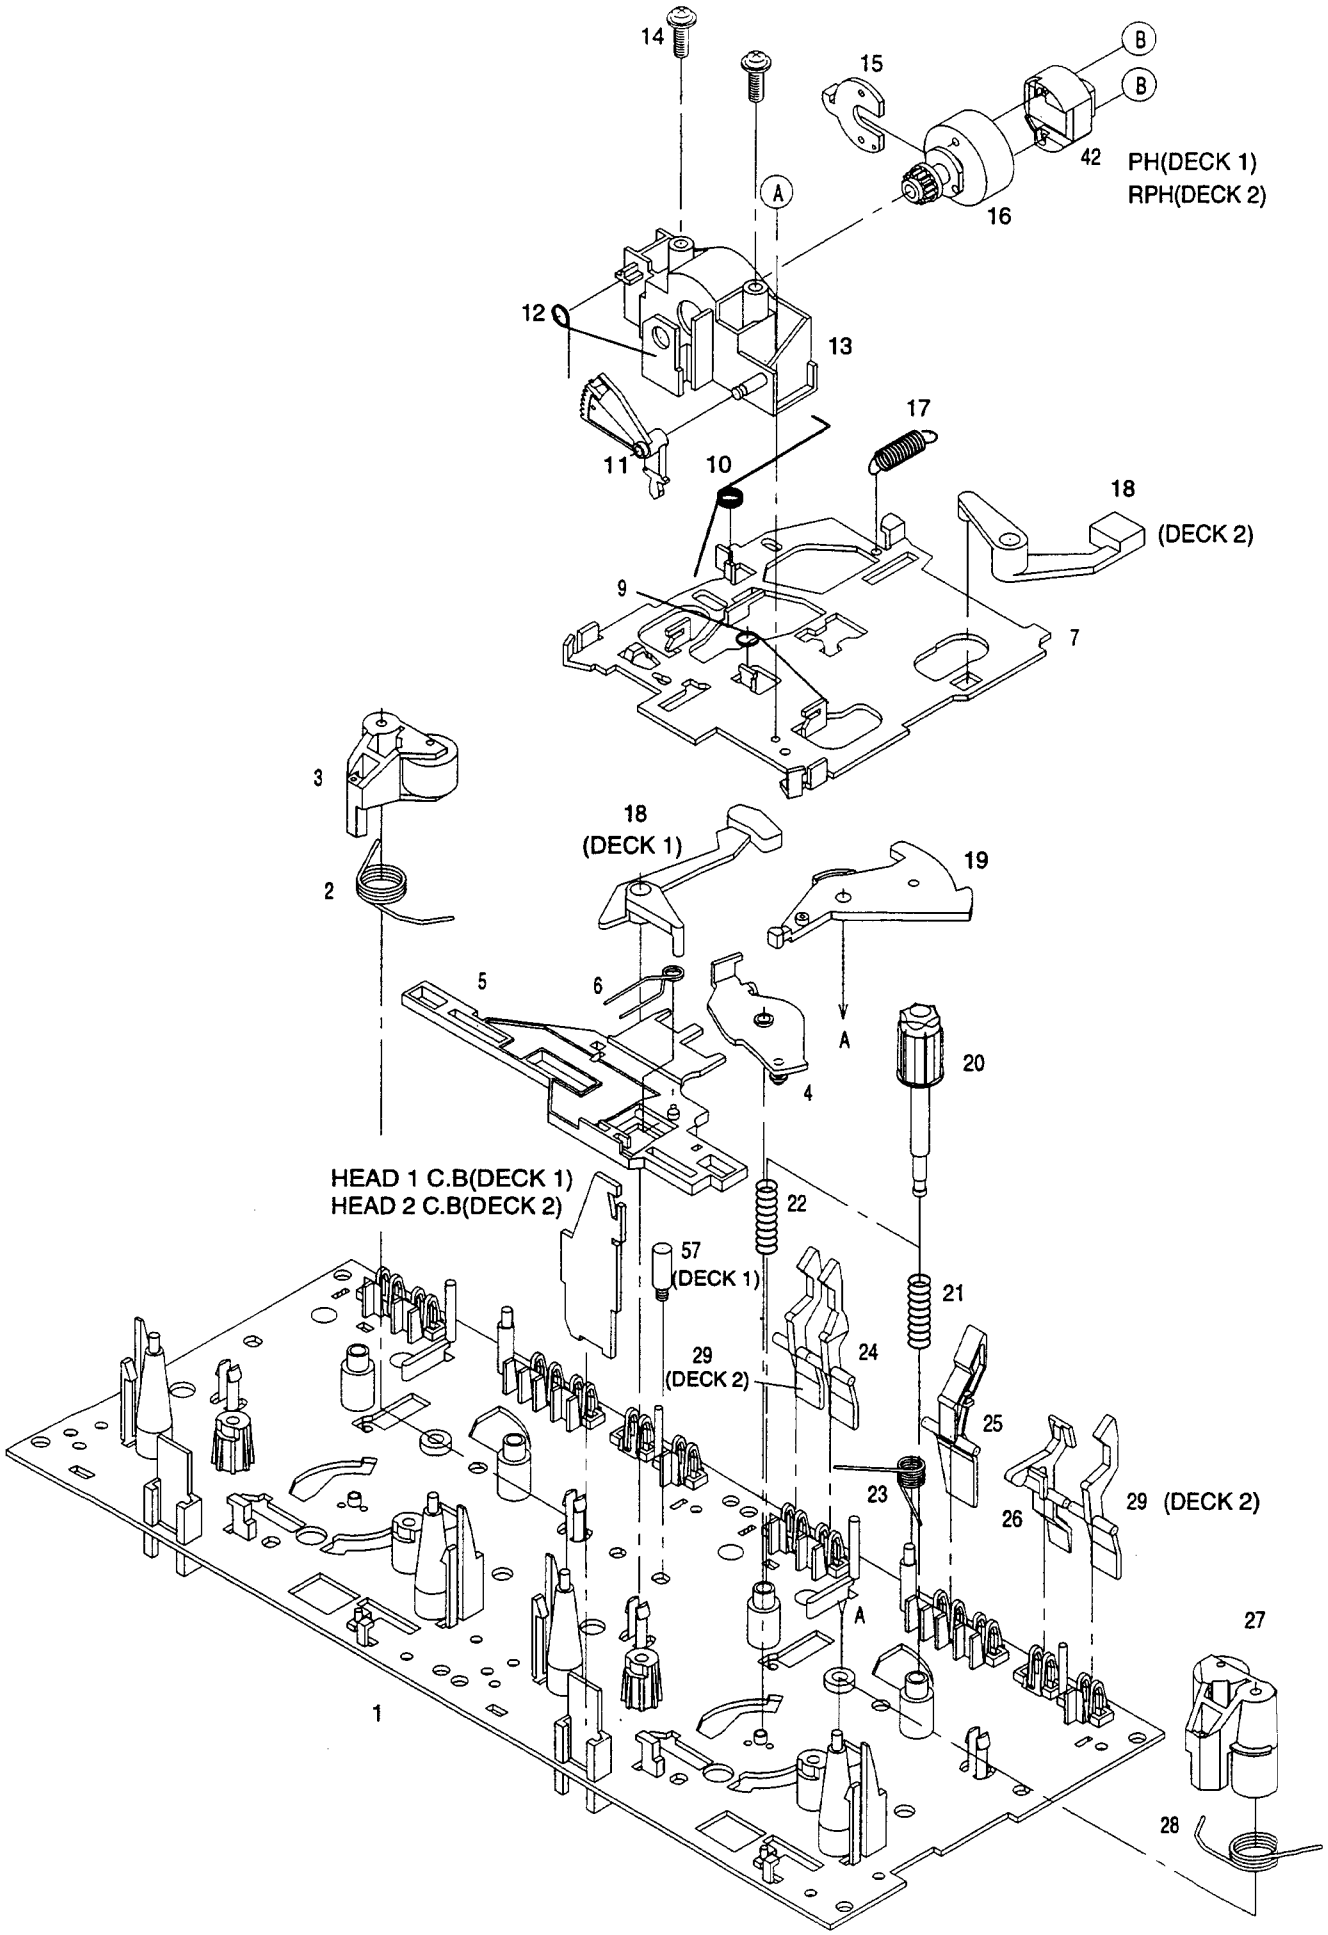

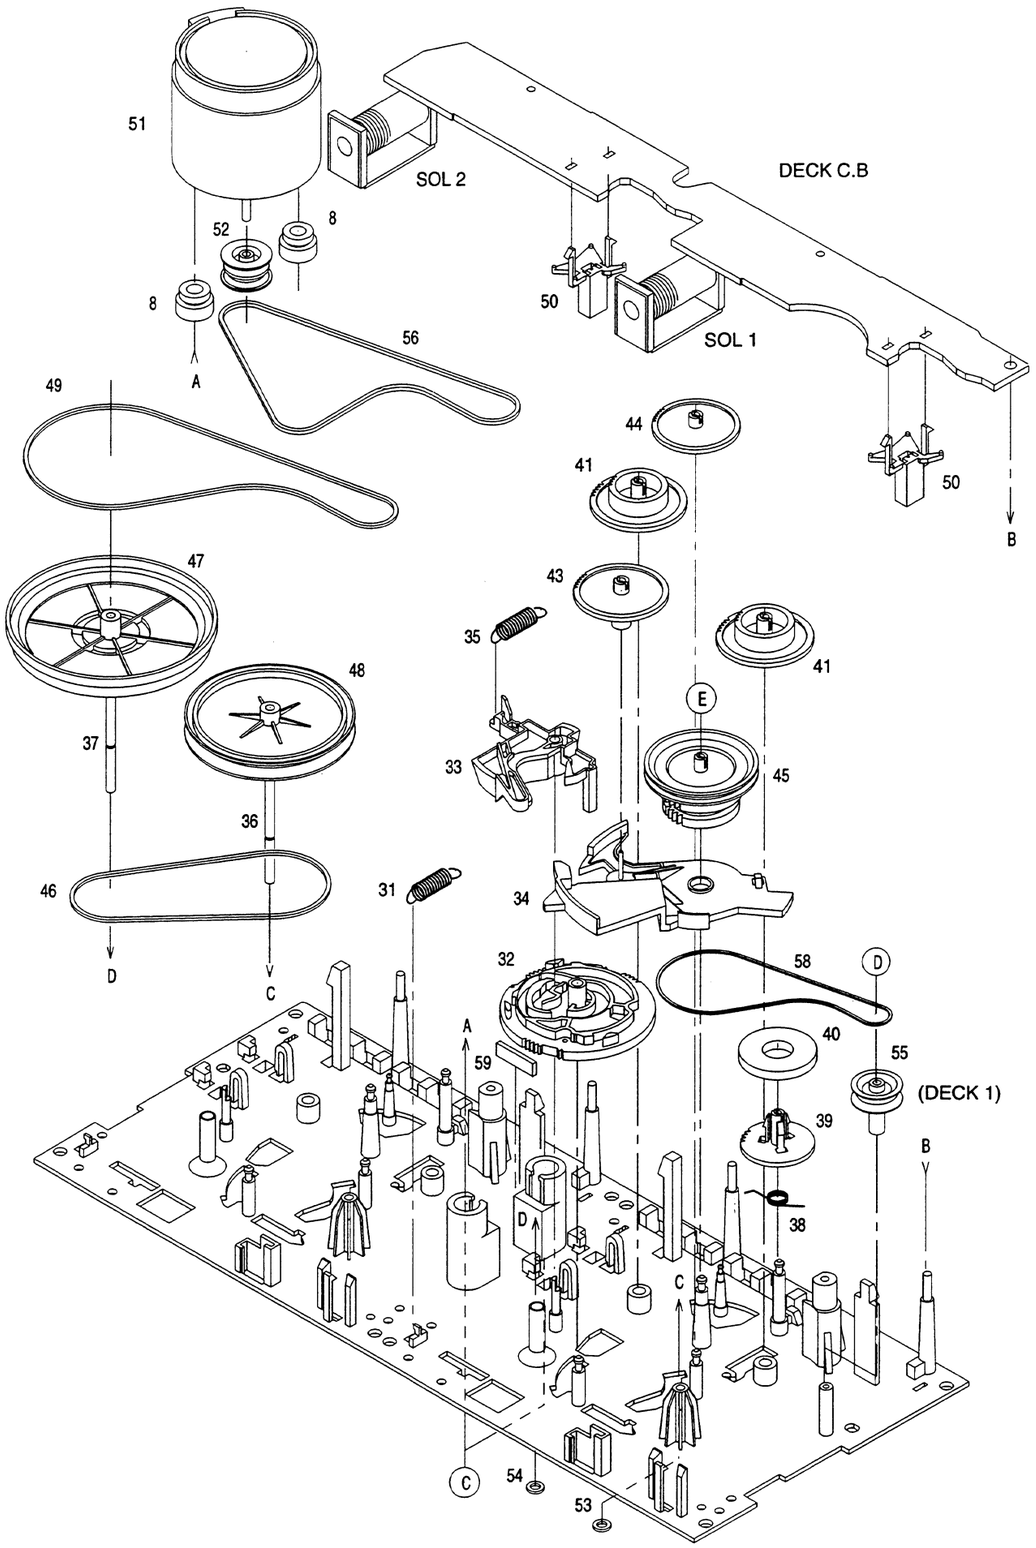

TAPE MECHANISM PARTS LIST 1 / 1

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	82-ZM3-301-519		CHAS ASSY,M2
2	82-ZM1-258-110		SPR-T,PINCH L
3	82-ZM1-341-110		LVR ASSY,PINCH L2
4	82-ZM1-333-010		PLATE,LINK 2
5	82-ZM1-266-11K		LVR,DIR
6	82-ZM1-214-010		SPR-T,DIR
7	82-ZM1-206-81K		CHAS,HEAD
8	82-ZM3-307-019		CUSH-G,DIA3.7-8-3.2
9	82-ZM1-269-219		SPR-T,BRG
10	82-ZM1-219-119		SPR-T,LINK
11	82-ZM1-210-119		GEAR,H T
12	82-ZM1-213-019		SPR-T,HEAD
13	82-ZM1-207-619		GUIDE,TAPE
14	86-ZM4-206-010		S-SCREW,AZIMUTH
15	82-ZM1-314-119		PLATE,HEAD
16	82-ZM1-208-119		HLDR,HEAD
17	82-ZM1-218-019		SPR-E,HB
18	82-ZM1-263-110		LVR,EJECT L (DECK 1)
18	82-ZM1-264-010		LVR,EJECT R (DECK 2)
19	82-ZM1-222-21K		LVR,PLAY
20	82-ZM1-217-319		REEL TABLE
21	82-ZM1-244-510		SPR-C,BT
22	82-ZM1-285-310		SPR-C,BT L
23	82-ZM1-257-019		SPR-T,CAS
24	82-ZM1-241-319		LVR,MC
25	82-ZM1-242-019		LVR,CAS
26	82-ZM1-243-019		LVR,STOP
27	82-ZM1-344-110		LVR ASSY,PINCH R2
28	82-ZM1-259-110		SPR-T,PINCH R
29	82-ZM1-240-11K		LVR,REC (DECK 2)
31	82-ZM1-255-319		SPR-E,LVR DIR
32	82-ZM3-305-01K		GEAR,CAM M2
33	82-ZM1-227-21K		LVR,TRIG
34	82-ZM3-306-11K		LVR,FR M2
35	82-ZM1-265-119		SPR-E,TRIG

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
36	82-ZM1-236-019		CAPSTAN N 2-41.5
37	82-ZM1-239-019		CAPSTAN N 2.2-41.7
38	82-ZM1-322-019		SPR-T,FR60
39	82-ZM1-220-219		GEAR,IDLER
40	82-ZM3-616-019		RING MAGNET 4
41	82-ZM1-216-31K		GEAR,REEL
42	87-A90-319-010		HEAD,PH HADKH2 FPC
42	87-A90-320-010		HEAD,RPH HADKH5 FPC
43	82-ZM1-225-21K		GEAR,FR
44	82-ZM1-226-019		GEAR,REW
45	82-ZM3-333-310		SLIP DISK ASSY 2
46	82-ZM1-338-010		BELT FR4
47	82-ZM1-349-110		FLY-WHL,R W(DECK 2)
47	82-ZM3-338-110		FLY-WHL,R3 W(DECK 1)
48	82-ZM1-348-010		FLY-WHL,L W(DECK 2)
48	82-ZM1-348-010		FLY-WHL,L W(DECK 1)
49	82-ZM3-329-210		BELT,SBU R2
50	82-ZM1-245-210		HLDR,IC
51	87-045-347-019		MOT,SHU2L 70(M1)
52	82-ZM3-221-010		PULLEY,MOT 2M
53	82-ZM1-288-019		SH,1.63-3.2-0.5 SLT
54	80-ZM6-243-019		SH,1.75-3.6-0.5 SLT
55	82-ZM3-335-210		PULLEY,COUPLER M3(DECK 1)
56	82-ZM3-337-010		BELT,SBU MOT 2
57	82-ZM3-339-010		SHAFT,COUPLER N3(DECK 1)
58	86-ZM1-206-010		BELT,MAIN L
59	82-ZM3-340-010		SH,BELT D2
A	85-ZM3-202-010		S-SCREW,TG
B	80-ZM6-207-019		V+1.6-7
C	82-ZM3-318-019		S-SCRW MOTOR M2
D	87-B10-043-010		W-P,0.99-4-0.25 SLT
E	82-ZM3-334-010		PW,2.16-6-0.4

SPRING APPLICATION POSITION

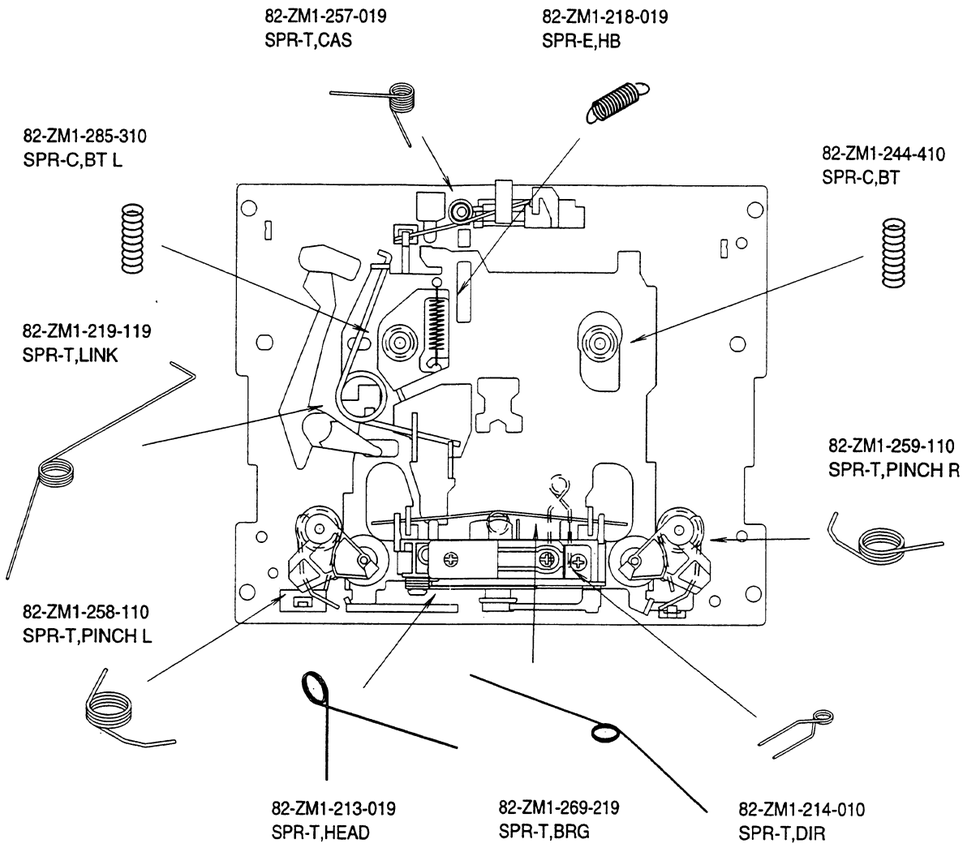

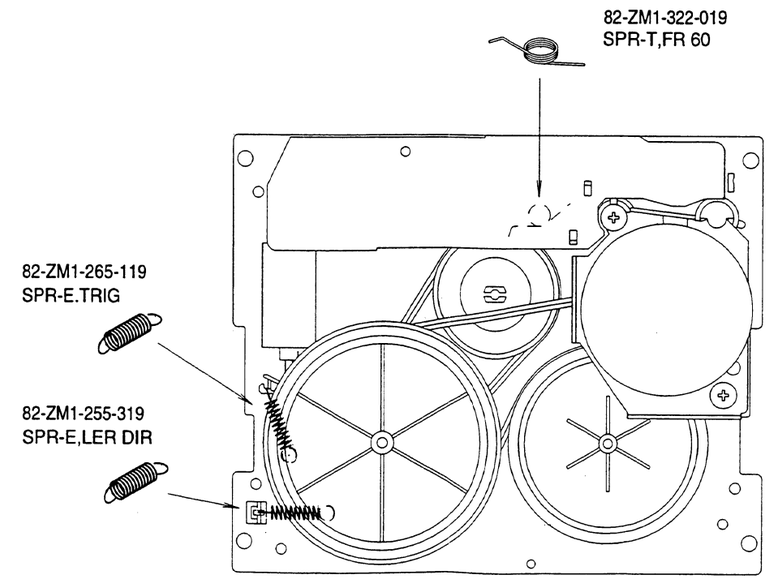

SPEAKER DISASSEMBLY INSTRUCTIONS

Type.1

矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットのビスを取り、スピーカーユニットを外してください。

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

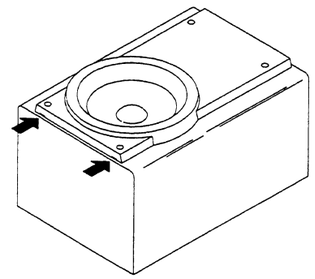

Type.2

グリルフレームを外し、4個のゴムキャプをマイナスドライバーで端の方から持ち上げて外すと中にビスが有りますので、ビスを取り外します。矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットのビスを取り、スピーカーユニットを外してください。

Remove the grill frame and four pieces of rubber caps by pulling out with a flat-bladed screwdriver Remove the screws from hole where installed rubber caps. Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

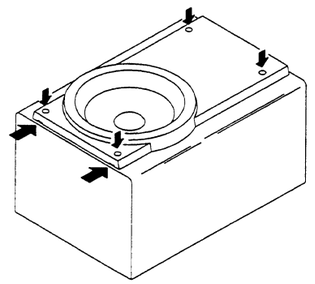

Type.3

矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットの凹にマイナスドライバーを差し込んで、反時計方向に回転させスピーカーユニットを外してください。スピーカーユニット交換後は時計方向にクリック音がするまで、回転させて取り付けます。

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Turn the speaker unit to counter-clockwise direction while inserting a flat-bladed screwdriver into one of the hollows arround speaker unit, and then remove the speaker unit. After replacing the speaker unit, install it turning to clockwise direction until "click" sound comes out.

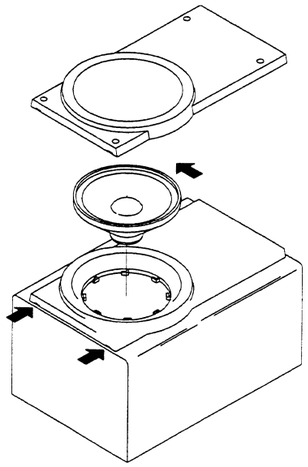

SX-NA702 (YUSTNL) SPEAKER PARTS LIST

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	87-NSE-604-010		SPKR,T 80
2	87-NSF-602-010		SPKR,W 160
3	87-NSF-610-010		SPKR,CORD
4	88-NSG-001-010		PANEL,FR R
5	88-NSG-002-010		PANEL,FR L
6	88-NSG-004-010		GRILLE,FRAME ASSY
7	88-NSG-610-010		SPKR, CERAMIC ASSY

SX-FNS705 (YLSTCC) SPEAKER PARTS LIST

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	87-NSA-001-010		PANEL,FR
2	87-NSA-002-010		PANEL,SP
3	87-NSA-004-010		GRILLE,FRAME ASSY
4	87-NSA-005-010		GRILLE,FRAME
5	87-NSA-010-010		PROTECTOR
6	87-NSA-007-010		HLDR SQ
7	87-NS4-611-010		SPKR,CORD
8	85-NS6-611-010		SPKR,CORD Y/B
9	87-NSA-610-010		SPKR,CERAMIC
10	87-NSA-611-010		SPKR,CAP
11	86-NSA-608-010		SPKR,W 160H
12	86-NSA-610-010		SPKR,T 60H
13	86-NS5-606-010		SPKR,80
14	87-NS5-602-010		SPKR,W 160

SX-ANS707 (YLSTNL) SPEAKER PARTS LIST

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	88-NS6-001-010		PANEL,FR R
2	88-NS6-002-010		PANEL,FR L
3	88-NS6-005-010		PANEL,PLATE L
4	88-NS6-006-010		PANEL,PLATA R
5	88-NS6-007-010		PANEL,TOP
6	88-NS6-008-010		CABI,TOP L
7	88-NS6-009-010		CABI,TOP R
8	88-NS6-010-010		PANEL,SP L
9	88-NS6-011-010		PANEL,SP R
10	88-NS6-012-010		GRILLE,FRAME ASSY
11	88-NS6-015-010		GRILLE,TOP ASSY
12	88-NS6-020-010		PROTECTER,L
13	87-NS4-611-010		SPKR,CORD
14	87-NS4-610-010		SPKR,CORD Y1B
15	86-NSA-608-010		SPKR,W 160H
16	87-NS4-605-010		SPKR,T 50
17	88-NS6-610-010		SPKR, CERAMIC
18	88-NS6-606-010		SPKR, S 60
19	88-NS6-604-010		SPKR, T 80

REFERENCE NAME LIST

ELECTRICAL SECTION

DESCRIPTION	REFERENCE NAME
ANT	ANTENNAS
C-	CHIP
C-CAP	CAP, CHIP
C-CAP TN	CAP, CHIP TANTALUM
C-COIL	COIL, CHIP
C-DI	DIODE, CHIP
C-DIODE	DIODE, CHIP
C-FET	FET, CHIP
C-FOTR	FILTER, CHIP
C-JACK	JACK, CHIP
C-LED	LED, CHIP
C-RES	RES, CHIP
C-SFR	SFR, CHIP
C-SLIDE SW	SLIDE SWITCH, CHIP
C-SW	SWITCH, CHIP
C-TR	TRANSISTOR, CHIP
C-VR	VOLUME, CHIP
C-ZENER	ZENER, CHIP
CAP, CER	CAP, CERA-SOL
CAP, E	CAP, ELECT
CAP, M/F	CAP, FILM
CAP, TC	CAP, CERA-SOL
CAP, TC-U	CAP, CERA-SOL SS
CAP, TN	CAP, TANTALUM
CERA FIL	FILTER, CERAMIC
CF	FILTER, CERAMIC
DL	DELAY LINE
E/CAP	CAP, ELECT
FILT	FILTER
FLTR	FILTER
FUSE RES	RES, FUSE
MOT	MOTOR
P-DIODE	PHOTO DIODE
P-SNSR	PHOTO SENSER
P-TR	PHOTO TRANSISTOR
POLY VARI	VARIABLE CAPACITOR
PPCAP	CAP, PP
PT	POWER TRANSFORMER
PTR, RES	PTR, MELF
RC	REMOTE CONTROLLER
RES NF	RES, NON-FLAMMABLE
RESO	RESONATOR
SHLD	SHIELD
SOL	SOLENOID
SPKR	SPEAKER
SW, LVR	SWITCH, LEVER
SW, RTRY	SWITCH, ROTARY
SW, SL	SWITCH, SLIDE
TC CAP	CAP, CERA-SOL
THMS	THERMISTOR
TR	TRANSISTOR
TRIMER	CAP, TRIMMER
TUN-CAP	VARIABLE CAPACITOR
VIB, CER	RESONATOR, CERAMIC
VIB, XTAL	RESONATOR, CRYSTAL
VR	VOLUME
ZENER	DIODE, ZENER

MECHANICAL SECTION

DESCRIPTION	REFERENCE NAME
ADHESHIVE	SHEET ADHESHIVE
AZ	AZIMUTH
BAR-ANT	BAR-ANTENNA
BAT	BATTERY
BATT	BATTERY
BRG	BEARING
BTN	BUTTON
CAB	CABINET
CASS	CASSETTE
CHAS	CHASSIS
CLR	COLLAR
CONT	CONTROL
CRSR	CURSOR
CU	CUSHION
CUSH	CUSHION
DIR	DIRECTION
DUBB	DUBBING
FL	FRONT LOADING
FLY-WHL	FLYWHEEL
FR	FRONT
FUN	FUNCTION
G-CU	G-CUSHION
HDL	HANDOL
HIMERON	CLOTH
HINGE, BAT	HINGE, BATTERY
HLDR	HOLDER
HT-SINK	HEAT SINK
IB	INSTRUCTION BOOKLET
IDLE	IDLER
IND, L-R	INDICATOR, L-R
KEY, CONT	KEY, CONTROL
KEY, PRGM	KEY, PROGRAM
KNOB, SL	KNOB, SLIDE
LBL	LABEL
LID, BATT	LID, BATTERY
LID, CASS	LID, CASSETTE
LVR	LEVER
P-SP	P-SPRING
PANEL, CONT	PANEL, CONTROL
PANEL, FR	PANEL, FRONT
PRGM	PROGRAM
PULLY, LOAD MO	PULLY, LOAD MOTOR
RBN	RIBBON
S-	SPECIAL
SEG	SEGMENT
SH	SHEET
SHLD-SH	SHIELD-SHEET
SL	SLIDE
SP	SPRING
SP-SCREW	SPECIAL-SCREW
SPACER, BAT	SPACER, BATTERY
SPR	SPRING
SPR-P	P-SPRING
SPR-PC-PUSH	P-SPRING, C-PUSH
T-SP	T-SPRING
TERM	TERMINAL
TRIG	TRIGGER
TUN	TUNING
VOL	VOLUME
W	WASHER
WHL	WHEEL
WORM-WHL	WORM-WHEEL

サービス技術ニュース	
番号	連絡内容
G— —	
G— —	
G— —	

アイワ株式会社
AIWA CO.,LTD.

〒110-8710 東京都台東区池之端1-2-11 ☎03 (3827) 3111 (代表)

9301978, 750038

Tokyo Japan

Printed in Singapore

aiwa

aiwa SERVICE

4ZG-1

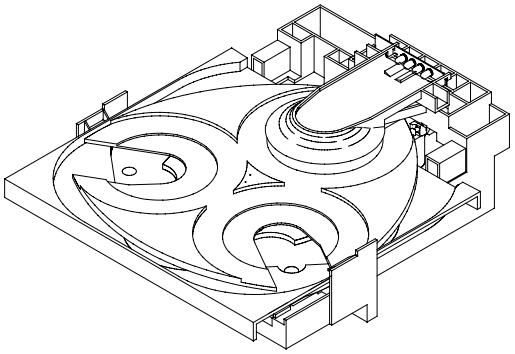

CD MECHANISM

• BASIC CD MECHANISM:3ZG-2 E1

• TYPE: English

BASIC NAME	DERIVATION NAME					
4ZG-1	V	O	S1	D	SH	

■ This Service Manual has various derivation.Derivation name is indicated by the Service Manual for each model.

SERVICE MANUAL

S/M Code No 09-985-249-80T

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

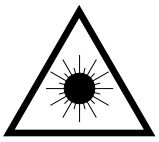

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynling laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyt-täjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

VARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvising, kan användaren utsättas för osynling laserstrålning, som överskrider gränsen för laserklass 1.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION

L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!

Usynlig laserstråling ved åbning, når sikkerhedsafbrydereer ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.
The CLASS 1 LASER PRODUCT label is located on the rear exterior.

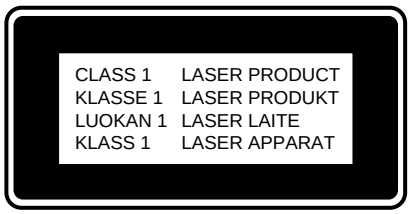

Precaution to replace Optical block (KSS-213F)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

1) After the connection, remove solder shown in the right figure.

PICK-UP Assy P.C.B

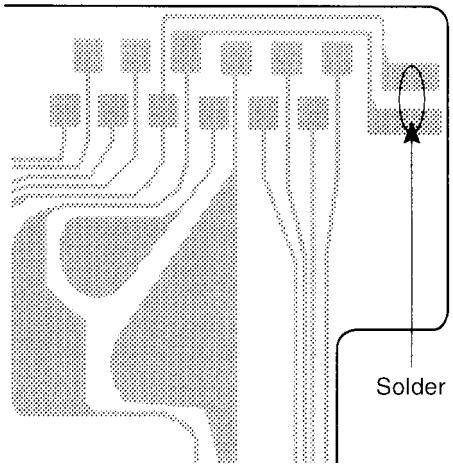

This is the SERVICE MANUAL for the BASIC CD MECHANISM of BASIC NAME: 4ZG-1. This BASIC NAME includes the following models as shown under the SUFFIX name: DERIVATION NAME. Please use this manual with the separate SERVICE MANUAL for DERIVATION NAME.

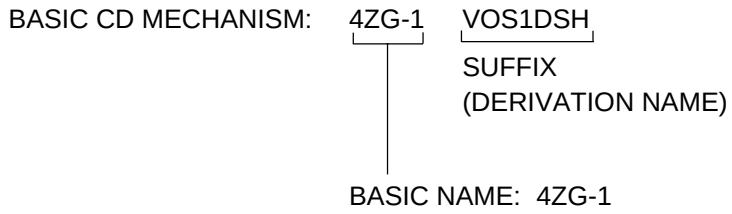

BASIC NAME	DERIVATION NAME							
4ZG-1	V	O	S1	D	SH	—	—	—

DERIVATION NAME

- V: VIDEO OUT
- O: On screen display
- S1: THE 1st SONY IC MODEL
- D: Digital output function
- SH: Pick up equipped with shutter

How to Adjust the Rotating Phase of the Gear, Main Cam

1) Push down the hooking catch of the CHAS. MECH, and remove the TRAY.
2) Align the arrow mark of the Gear, Main Cam with the black round mark of the CHAS, MECHA as shown below.
3) Confirm that the Slide, Mech Cam is located in the right position, then insert the TRAY gently.

Caution: If the rotating phase of the Gear, Main Cam is incorrectly adjusted, the chucking operation and tray movement will have malfunction.

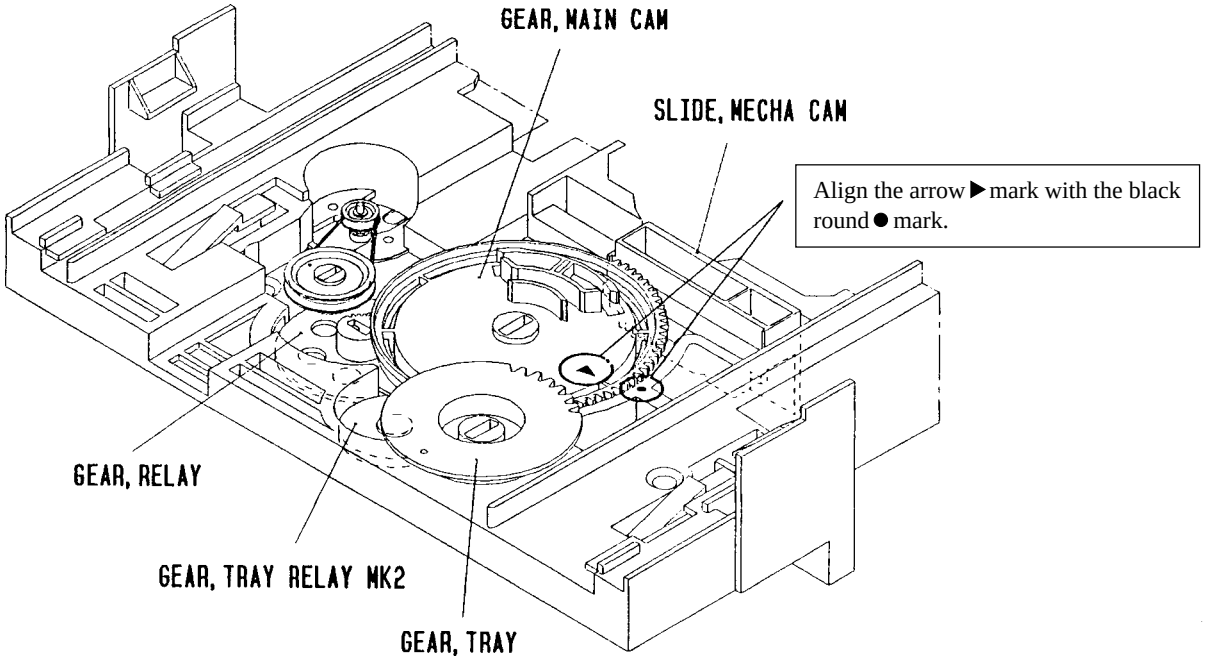

ELECTRICAL MAIN PARTS LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
IC			
	87-A20-547-010		C-IC,CXA1992AR
	87-A20-919-040		C-IC,BA5915FP
	87-A20-917-010		C-IC,CXD2540Q-1/2
	84-ZG1-697-010		C-IC,UPD78016FGC-549
	87-017-825-010		IC,GP1F32T
	87-017-760-080		IC,M51943BML
	87-A20-602-040		C-IC,M5291FP
	87-A20-925-040		C-IC,BA05FP
	87-A20-905-040		C-IC,BA033FP
	87-001-873-010		IC,LB1644
	87-A20-920-010		C-IC,CL680-D1
	87-A20-921-040		C-IC,SN74LVU04APW
	87-A20-656-040		C-IC,MB81V4260S-60/70PFTN
	84-ZG1-695-040		C-IC,LH5V2RN1
	87-A20-975-040		C-IC,SN74LV74APW
	87-A20-974-040		C-IC,LC74781M-9017
	87-A20-918-040		C-IC,SM5878AM
TRANSISTOR			
	87-026-463-080		TR,2SA933S (0.3W)
	87-026-237-080		CHIP-TR,DTC124XK
	89-327-125-080		CHIP TR,2SC2712GR
	87-026-231-080		CHIP-TRANSISTER,DTA124XK
	87-A30-117-010		TR,2SA1357
	89-111-625-080		TR,2SA1162 (0.15W)
	87-026-580-080		C-TR,DTA123JK
	87-026-470-080		TR,HN1C03F (0.3W)
DIODE			
	87-020-027-080		CHIP-DIODE 1SS184
	87-017-024-040		C-DIODE,DA204K
	87-A40-180-040		C-DIODE,SB07-015C
	87-A40-384-080		C-ZENER,UDZ3.3B
3CD C.B			
C101	87-010-182-080		C-CAP,S 2200P-50 B
C102	87-016-669-080		C-CAP,S 0.1-25 K B
C103	87-016-669-080		C-CAP,S 0.1-25 K B
C104	87-016-669-080		C-CAP,S 0.1-25 K B
C105	87-010-404-040		CAP,E 4.7-50 SME
C106	87-016-369-080		C-CAP,S 0.033-25 B K
C107	87-010-197-080		CAP, CHIP 0.01 DM
C108	87-010-401-040		CAP,E 1-50 SME
C109	87-010-382-040		CAP,E 22-25 SME
C110	87-010-213-080		C-CAP,S 0.015-50 B
C111	87-010-263-040		CAP,E 100-10
C112	87-010-197-080		CAP, CHIP 0.01 DM
C113	87-016-369-080		C-CAP,S 0.033-25 B K
C114	87-016-369-080		C-CAP,S 0.033-25 B K
C115	87-016-369-080		C-CAP,S 0.033-25 B K
C116	87-012-158-080		C-CAP,S 390P-50 CH
C117	87-012-154-080		C-CAP,S 150P-50 CH
C118	87-010-494-040		CAP,E 1-50 GAS
C119	87-010-152-080		C-CAP,S 8P-50 CH
C120	87-010-992-080		C-CAP,S 0.047-25 B
C121	87-010-992-080		C-CAP,S 0.047-25 B
C123	87-016-669-080		C-CAP,S 0.1-25 K B
C125	87-010-198-080		CAP, CHIP 0.022
C126	87-016-669-080		C-CAP,S 0.1-25 K B
C127	87-010-555-040		CAP,E 100-10 GAS
C130	87-010-555-040		CAP,E 100-10 GAS
C131	87-010-555-040		CAP,E 100-10 GAS
C132	87-010-178-080		CHIP CAP 1000P
C133	87-010-555-040		CAP,E 100-10 GAS
C134	87-010-196-080		CHIP CAPACITOR,0.1-25
C135	87-010-196-080		CHIP CAPACITOR,0.1-25
C136	87-010-196-080		CHIP CAPACITOR,0.1-25
C137	87-010-196-080		CHIP CAPACITOR,0.1-25
C138	87-010-182-080		C-CAP,S 2200P-50 B
C139	87-010-197-080		CAP, CHIP 0.01 DM
C140	87-010-112-040		CAP,E 100-16
C141	87-010-196-080		CHIP CAPACITOR,0.1-25
C142	87-010-196-080		CHIP CAPACITOR,0.1-25
C143	87-010-213-080		C-CAP,S 0.015-50 B
C151	87-010-263-040		CAP,E 100-10
C152	87-010-197-080		CAP, CHIP 0.01 DM
C153	87-A10-893-040		CAP,E 220-10 M PW
C154	87-010-197-080		CAP, CHIP 0.01 DM
C155	87-010-184-080		CHIP CAPACITOR 3300P(K)
C156	87-010-992-080		C-CAP,S 0.047-25 B
C157	87-010-992-080		C-CAP,S 0.047-25 B
C158	87-012-156-080		C-CAP,S 220P-50 CH
C159	87-016-526-080		C-CAP,S 0.47-16 BK
C160	87-010-314-080		C-CAP,S 22P-50V
C161	87-010-182-080		C-CAP,S 2200P-50 B
C162	87-010-178-080		CHIP CAP 1000P
C201	87-016-669-080		C-CAP,S 0.1-25 K B
C204	87-010-197-080		CAP, CHIP 0.01 DM
C205	87-010-379-040		CAP,E 22-16 M SME
C206	87-010-322-080		C-CAP,S 100P-50 CH
C207	87-010-322-080		C-CAP,S 100P-50 CH
C208	87-010-322-080		C-CAP,S 100P-50 CH
C209	87-010-322-080		C-CAP,S 100P-50 CH
C210	87-016-669-080		C-CAP,S 0.1-25 K B
C211	87-010-263-040		CAP,E 100-10
C213	87-010-190-080		S CHIP F 0.01
C214	87-010-196-080		CHIP CAPACITOR,0.1-25
C301	87-016-251-040		CAP,E 220-16 SMG
C302	87-012-140-080		CAP 470P
C303	87-010-178-080		CHIP CAP 1000P
C304	87-010-384-040		CAP,E 100-25 SME
C305	87-010-982-040		CAP,E 33-25 GAS
C306	87-010-112-040		CAP,E 100-16
C307	87-010-196-080		CHIP CAPACITOR,0.1-25
C308	87-010-263-040		CAP,E 100-10
C309	87-010-196-080		CHIP CAPACITOR,0.1-25
C310	87-010-263-040		CAP,E 100-10
C311	87-010-196-080		CHIP CAPACITOR,0.1-25
C312	87-010-178-080		CHIP CAP 1000P
C320	87-010-196-080		CHIP CAPACITOR,0.1-25
C401	87-016-044-040		CAP,E 100-16 GAS
C402	87-010-190-080		S CHIP F 0.01
C403	87-010-190-080		S CHIP F 0.01
C501	87-010-197-080		CAP, CHIP 0.01 DM
C502	87-010-197-080		CAP, CHIP 0.01 DM
C503	87-010-197-080		CAP, CHIP 0.01 DM
C504	87-010-154-080		CAP CHIP 10P
C505	87-010-154-080		CAP CHIP 10P
C506	87-010-197-080		CAP, CHIP 0.01 DM
C508	87-010-263-040		CAP,E 100-10
C509	87-016-669-080		C-CAP,S 0.1-25 K B
C510	87-010-263-040		CAP,E 100-10
C511	87-016-669-080		C-CAP,S 0.1-25 K B
C512	87-010-197-080		CAP, CHIP 0.01 DM
C513	87-010-197-080		CAP, CHIP 0.01 DM
C514	87-010-197-080		CAP, CHIP 0.01 DM
C518	87-010-322-080		C-CAP,S 100P-50 CH
C519	87-012-145-080		CAP, CHIP S 270P CH
C520	87-012-157-080		C-CAP,S 330P-50 CH
C521	87-012-154-080		C-CAP,S 150P-50 CH
C522	87-010-371-080		CAP, ELECT 470-6.3V
C523	87-010-197-080		CAP, CHIP 0.01 DM
C524	87-010-197-080		CAP, CHIP 0.01 DM
C525	87-010-197-080		CAP, CHIP 0.01 DM
C526	87-010-197-080		CAP, CHIP 0.01 DM

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
C527	87-010-197-080		CAP, CHIP 0.01 DM
C528	87-010-197-080		CAP, CHIP 0.01 DM
C529	87-010-197-080		CAP, CHIP 0.01 DM
C530	87-010-197-080		CAP, CHIP 0.01 DM
C531	87-010-197-080		CAP, CHIP 0.01 DM
C532	87-010-374-040		CAP,E 47-10
C533	87-010-197-080		CAP, CHIP 0.01 DM
C534	87-010-555-040		CAP,E 100-10 GAS
C535	87-010-197-080		CAP, CHIP 0.01 DM
C536	87-010-078-040		CAP,E 47-6.3 5L
C537	87-010-197-080		CAP, CHIP 0.01 DM
C538	87-010-196-080		CHIP CAPACITOR,0.1-25
C539	87-016-669-080		C-CAP,S 0.1-25 K B
C540	87-010-078-040		CAP,E 47-6.3 5L
C541	87-010-197-080		CAP, CHIP 0.01 DM
C542	87-010-318-080		C-CAP,S 47P-50 CH
C544	87-010-197-080		CAP, CHIP 0.01 DM
C546	87-010-197-080		CAP, CHIP 0.01 DM
C549	87-010-494-040		CAP,E 1-50 GAS
C550	87-010-196-080		CHIP CAPACITOR,0.1-25
C551	87-012-153-080		C-CAP,S 120P-50 CH
C552	87-016-526-080		C-CAP,S 0.47-16 BK
C554	87-010-197-080		CAP, CHIP 0.01 DM
C556	87-010-378-040		CAP,E 10-16
C557	87-010-316-080		C-CAP,S 33P-50 CH
C558	87-010-315-080		C-CAP,S 27P-50 CH
C560	87-010-197-080		CAP, CHIP 0.01 DM
C601	87-010-197-080		CAP, CHIP 0.01 DM
C602	87-010-197-080		CAP, CHIP 0.01 DM
C603	87-010-112-040		CAP,E 100-16
C604	87-010-196-080		CHIP CAPACITOR,0.1-25
C605	87-010-197-080		CAP, CHIP 0.01 DM
C606	87-010-197-080		CAP, CHIP 0.01 DM
C607	87-010-313-080		CAP, CHIP 18P
C608	87-010-313-080		CAP, CHIP 18P
C609	87-010-178-080		CHIP CAP 1000P
C610	87-010-178-080		CHIP CAP 1000P
C611	87-010-178-080		CHIP CAP 1000P
C612	87-010-178-080		CHIP CAP 1000P
C613	87-010-403-040		CAP,E 3.3-50 SME
C614	87-010-403-040		CAP,E 3.3-50 SME
C615	87-010-318-080		C-CAP,S 47P-50 CH
C616	87-010-318-080		C-CAP,S 47P-50 CH
CN101	87-A60-424-010		CONN,16P V TOC-B
CN102	87-099-199-010		CONN,6P 6216 H
CN401	87-099-212-010		CONN,5P 6216 V
CN403	87-099-030-010		CONN,13P 6216H
J501	87-009-502-010		JACK,PIN 1P Y EARTH
L101	87-005-196-080		COIL,10UH
L301	87-A50-095-010		COIL,68UH RCR875D
L302	87-005-426-080		COIL,3.3UH K FLR50
L502	87-005-204-080		COIL,47UH
L503	87-005-189-080		COIL 2.7UH
L504	87-005-187-080		COIL,1.8UH
L505	87-005-204-080		COIL,47UH
L506	87-005-204-080		COIL,47UH
L507	87-005-204-080		COIL,47UH
L508	87-005-817-080		C-COIL, 33UH J FLC32
M401	87-045-305-010		MOTOR, RF-500TB DC-5V (2MA)
R130	87-022-364-080		C-RES,S 82K-1/10W F
R131	87-022-364-080		C-RES,S 82K-1/10W F
R132	87-022-364-080		C-RES,S 82K-1/10W F
R133	87-022-364-080		C-RES,S 82K-1/10W F
R134	87-022-364-080		C-RES,S 82K-1/10W F
R135	87-022-364-080		C-RES,S 82K-1/10W F
R507	87-A00-408-080		C-RES,S 2K-1/10W D
S201	87-A90-162-010		SW,SL 1-1-3 SSSU
S401	87-036-109-010		PUSH SWITCH
S402	87-036-109-010		PUSH SWITCH
W1	84-ZG1-673-010		F-CABLE,5P 1.25 210MM BLACK N
W2	85-NFT-611-110		FF-CABLE 16P-1.0
W3	84-ZG1-630-010		CABLE FFC 6P-1.25
X201	87-A70-124-080		VIB,CER 8.0MHZ
X501	87-A70-125-080		VIB,XTAL 27MHZ 50PPM
X601	87-030-270-080		VIB,XTAL 16.9344MHZ
LED C.B			
LED401	87-070-200-080		LED,SLP636C-81-S-T1
LED402	87-017-350-080		LED,SEL1550CM
LED403	87-017-350-080		LED,SEL1550CM
LED404	87-070-200-080		LED,SLP636C-81-S-T1
T-T C.B			
C401	87-018-214-080		CAP TC U 0.1-50F
CON401	86-NFZ-675-010		CONN,5P H 6216-11H
PS401	87-026-573-010		IC,GP1S53V
DRIVE C.B			
CN3	87-009-349-010		CONN,6P H WHT PH
M20	87-045-358-010		MOT,RF-310TA 43
M21	87-045-356-010		MOT,RF-310TA 30
SW1	87-A90-042-010		SW,LEAF MSW-17310MVPO
CD MOTOR C.B			
CN4	87-099-210-010		CONN,5P H BLK 6216
M1	87-045-305-010		MOT,RF-500TB
SW1	87-035-110-010		SW,MICRO SPPB62
SW2	87-035-110-010		SW,MICRO SPPB62

- Regarding connectors, they are not stocked as they are not the initial order items.
  The connectors are available after they are supplied from connector manufacturers upon the order is received.

○ チップ抵抗部品コード / CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち
Chip Resistor Part Coding

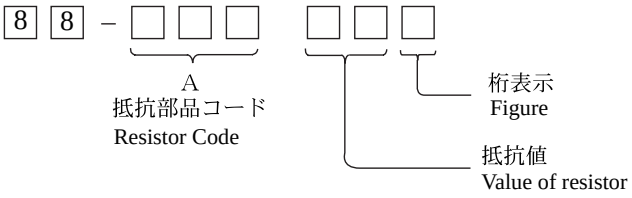

チップ抵抗
Chip resistor

容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法 / Diamensions (mm)				抵抗コード　: A Resistor Code : A
				外形 / Form	L	W	t	
1/16W	1608	5%	CJ		1.6	0.8	0.45	108
1/10W	2125	5%	CJ		2	1.25	0.45	118
1/8W	3216	5%	CJ		3.2	1.6	0.55	128

TRANSISTOR ILLUSTRATION



2SA933S

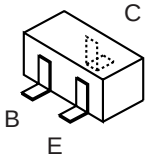

2SA1162
2SC2712
DTA123JK
DTA124XK
DTC124XK



2SA1357

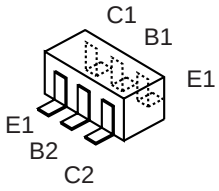

HN1C03F

BLOCK DIAGRAM

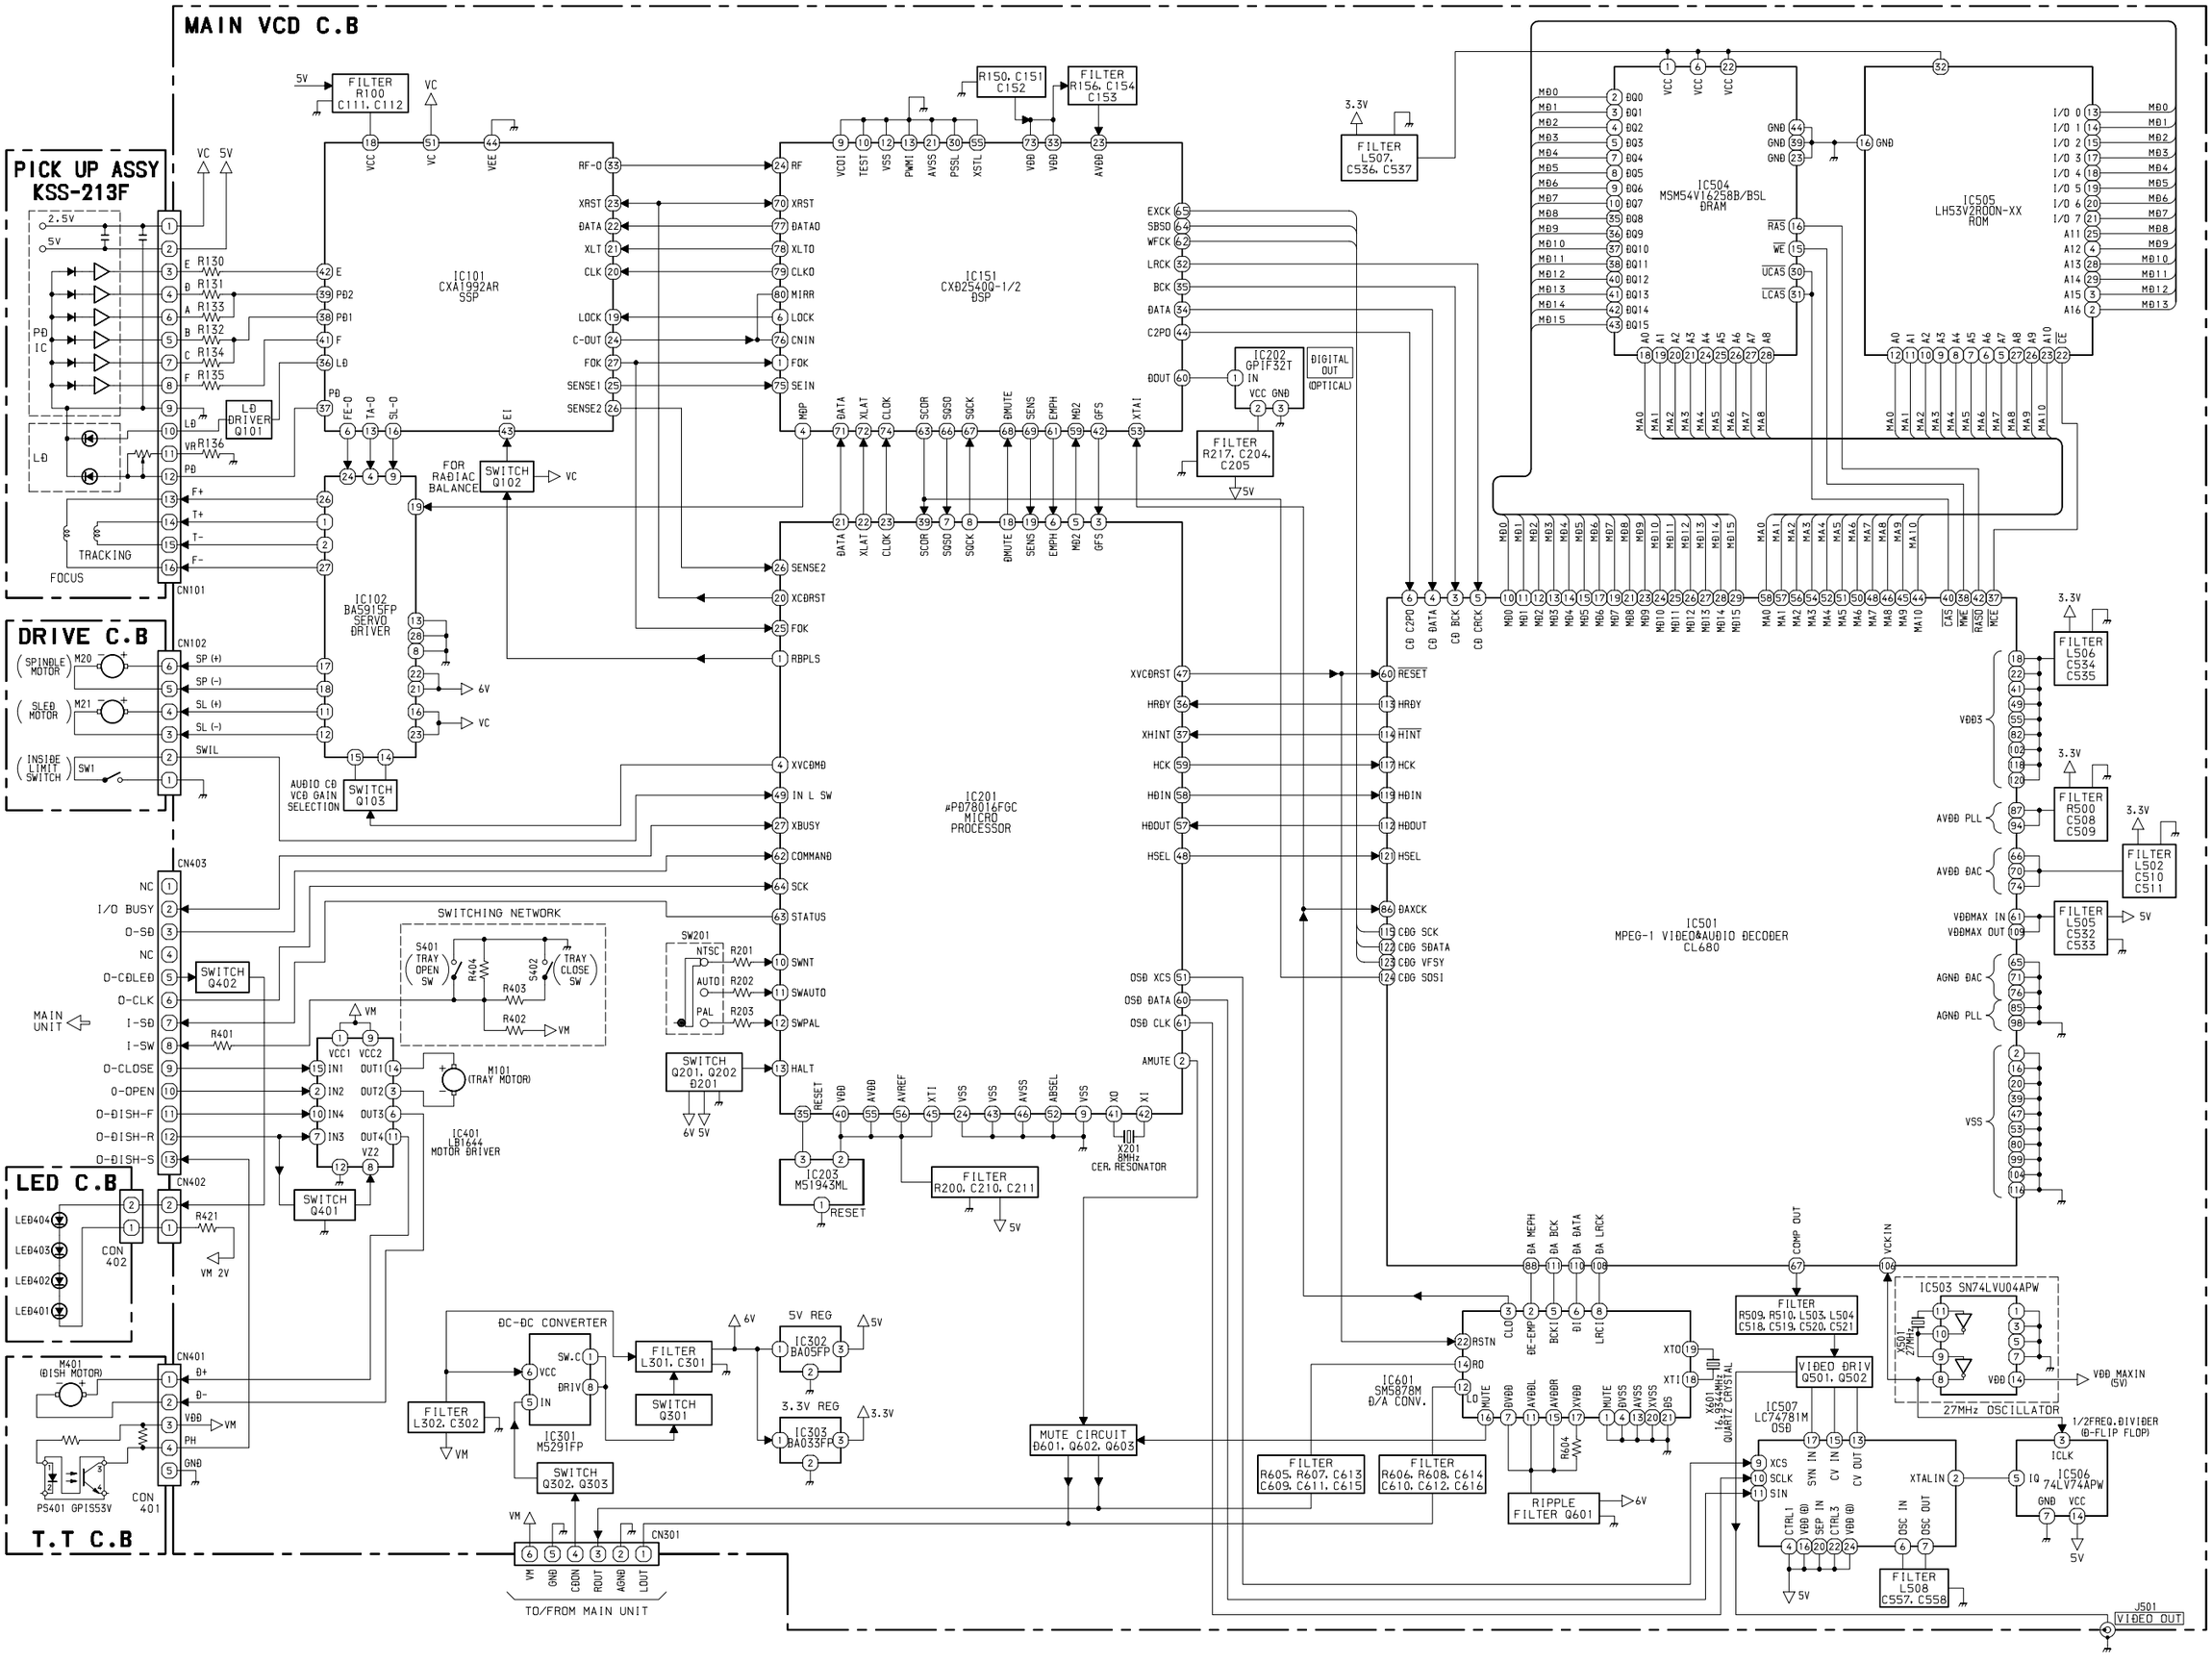

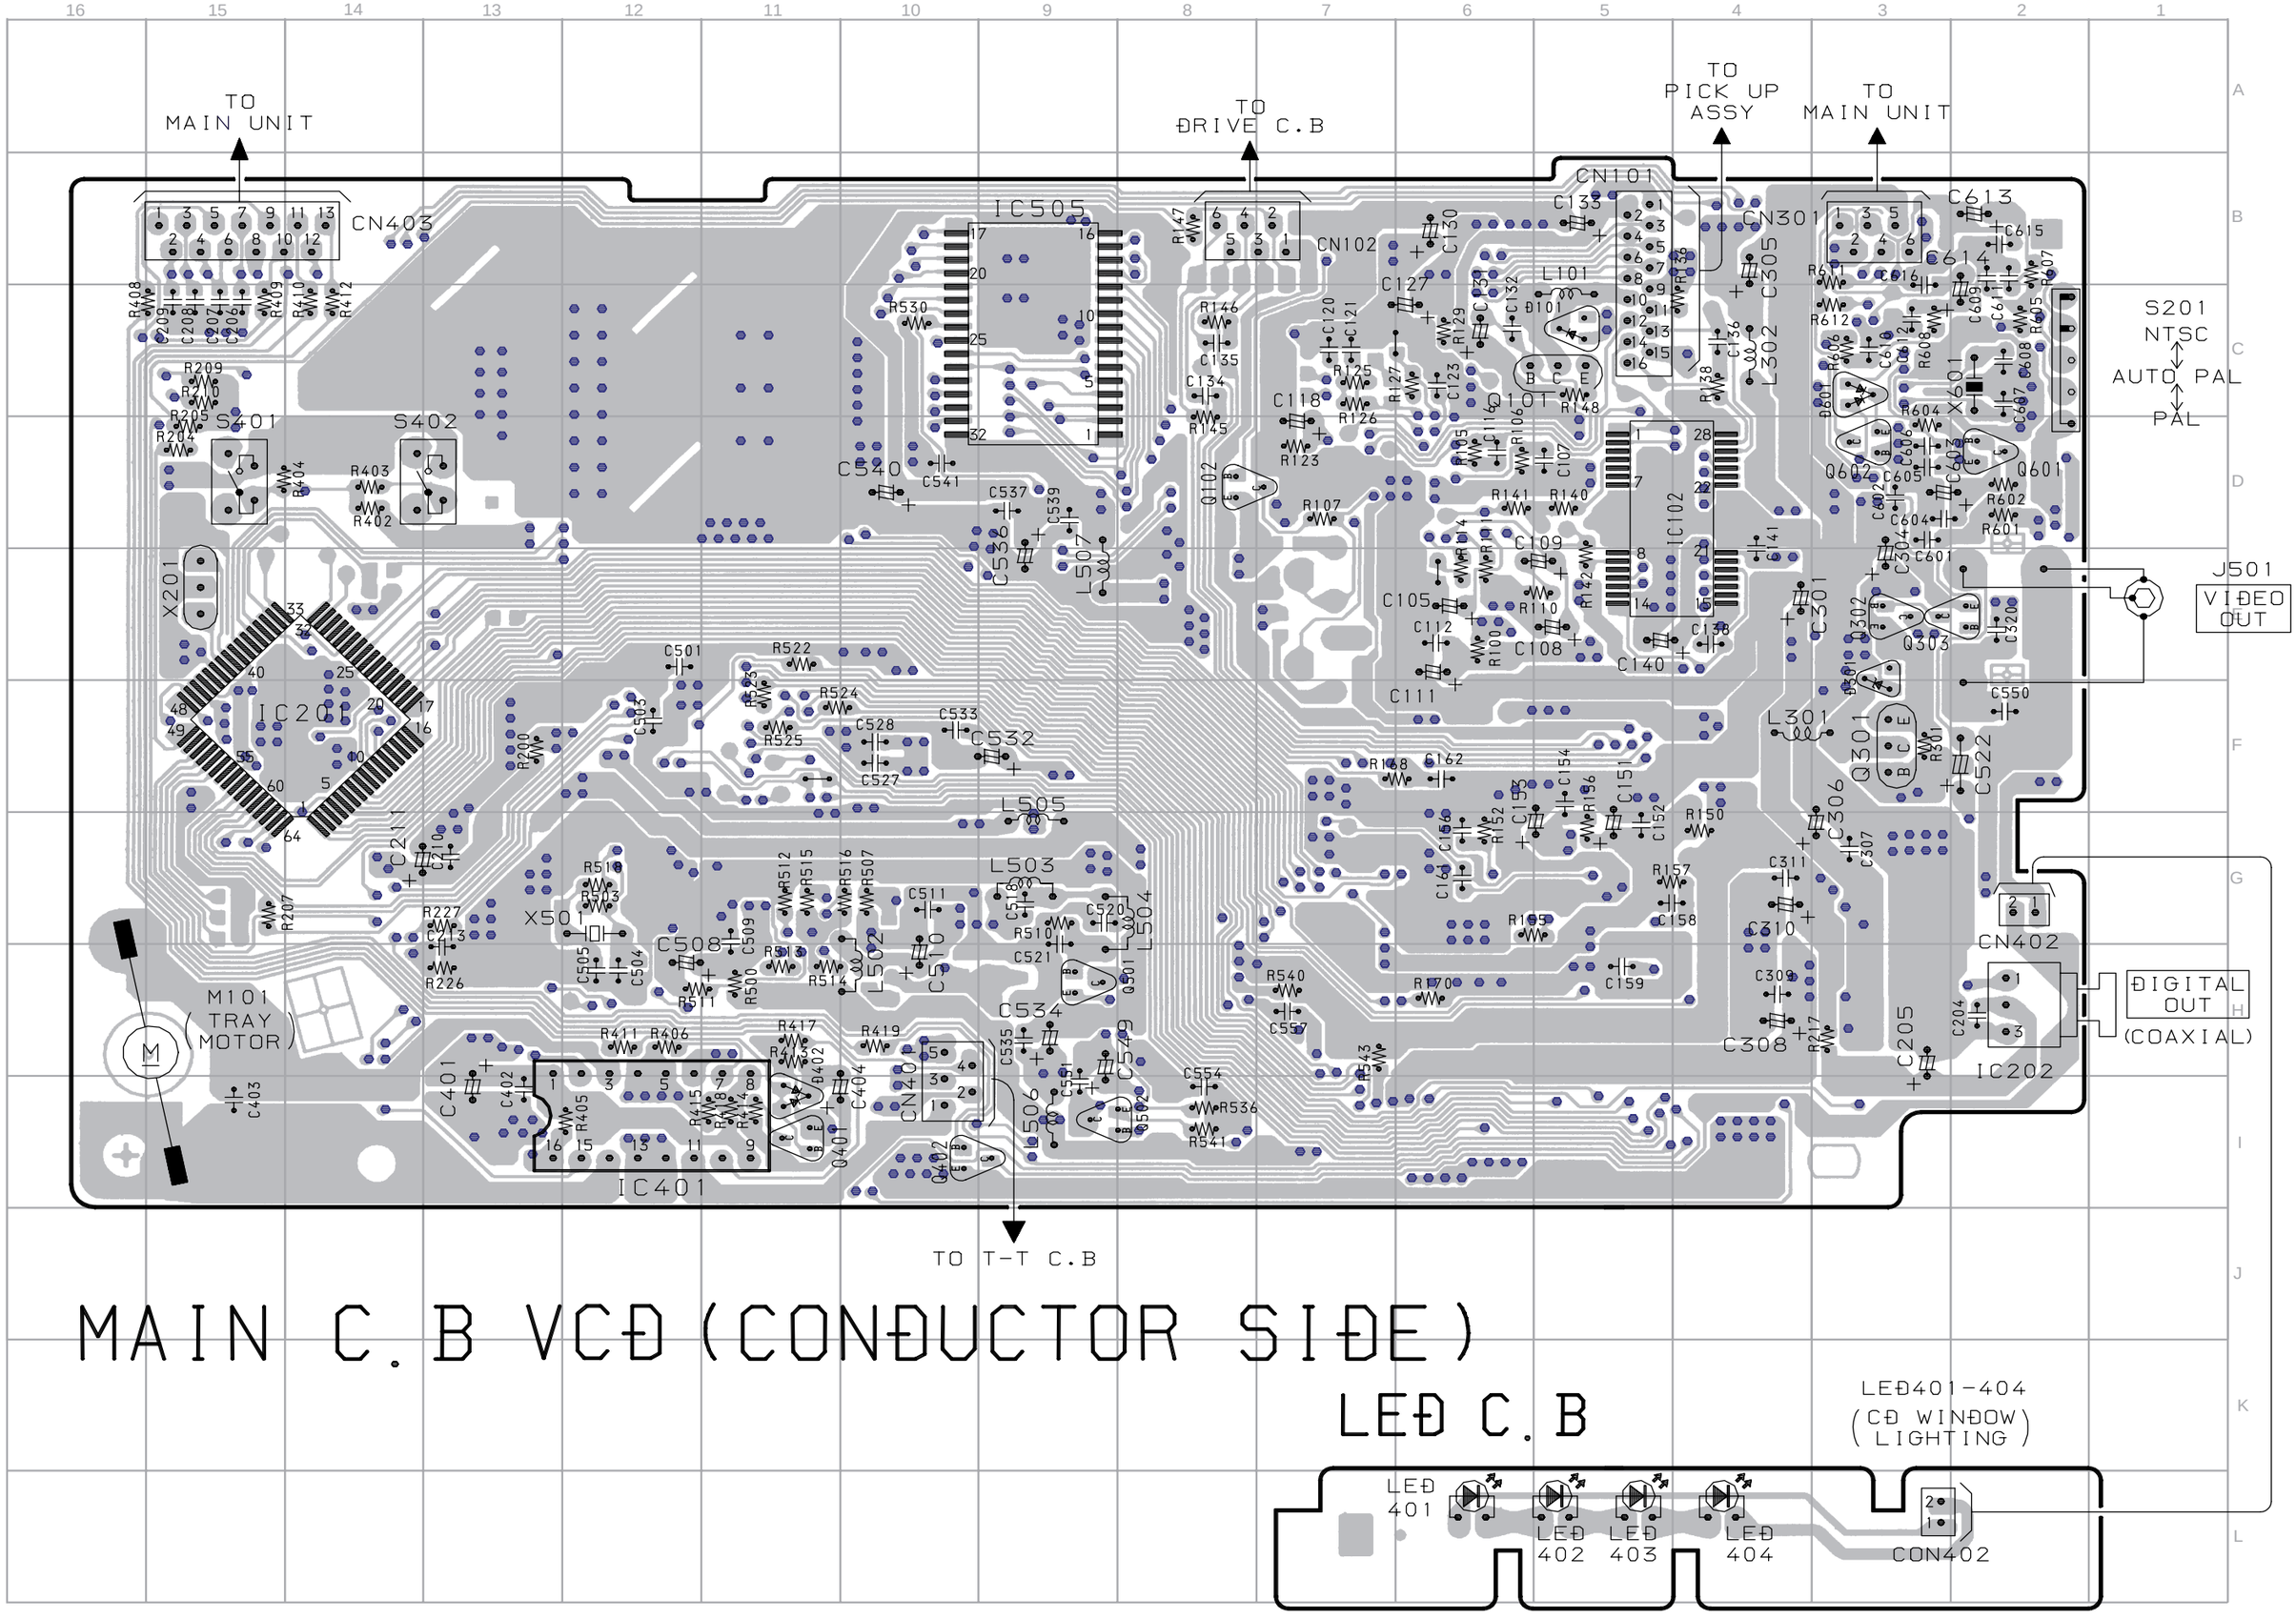
TO MAIN UNIT
TO ÐRIVE C.B
TO PICK UP ASSY
TO MAIN UNIT
CN403
CN102
CN101
CN301
CN402
IC505
IC201
IC401
IC202
IC102
S401
S402
S201 NTSC AUTO PAL PAL
J501 VIÐEO OUT
ÐIGITAL OUT (COAXIAL)
M101 (TRAY MOTOR)
TO T-T C.B
MAIN C.B VCÐ (CONÐUCTOR SIÐE)
LEÐ C.B
LEÐ401-404 (CÐ WINÐOW LIGHTING)
LEÐ 401
LEÐ 402
LEÐ 403
LEÐ 404
CON402

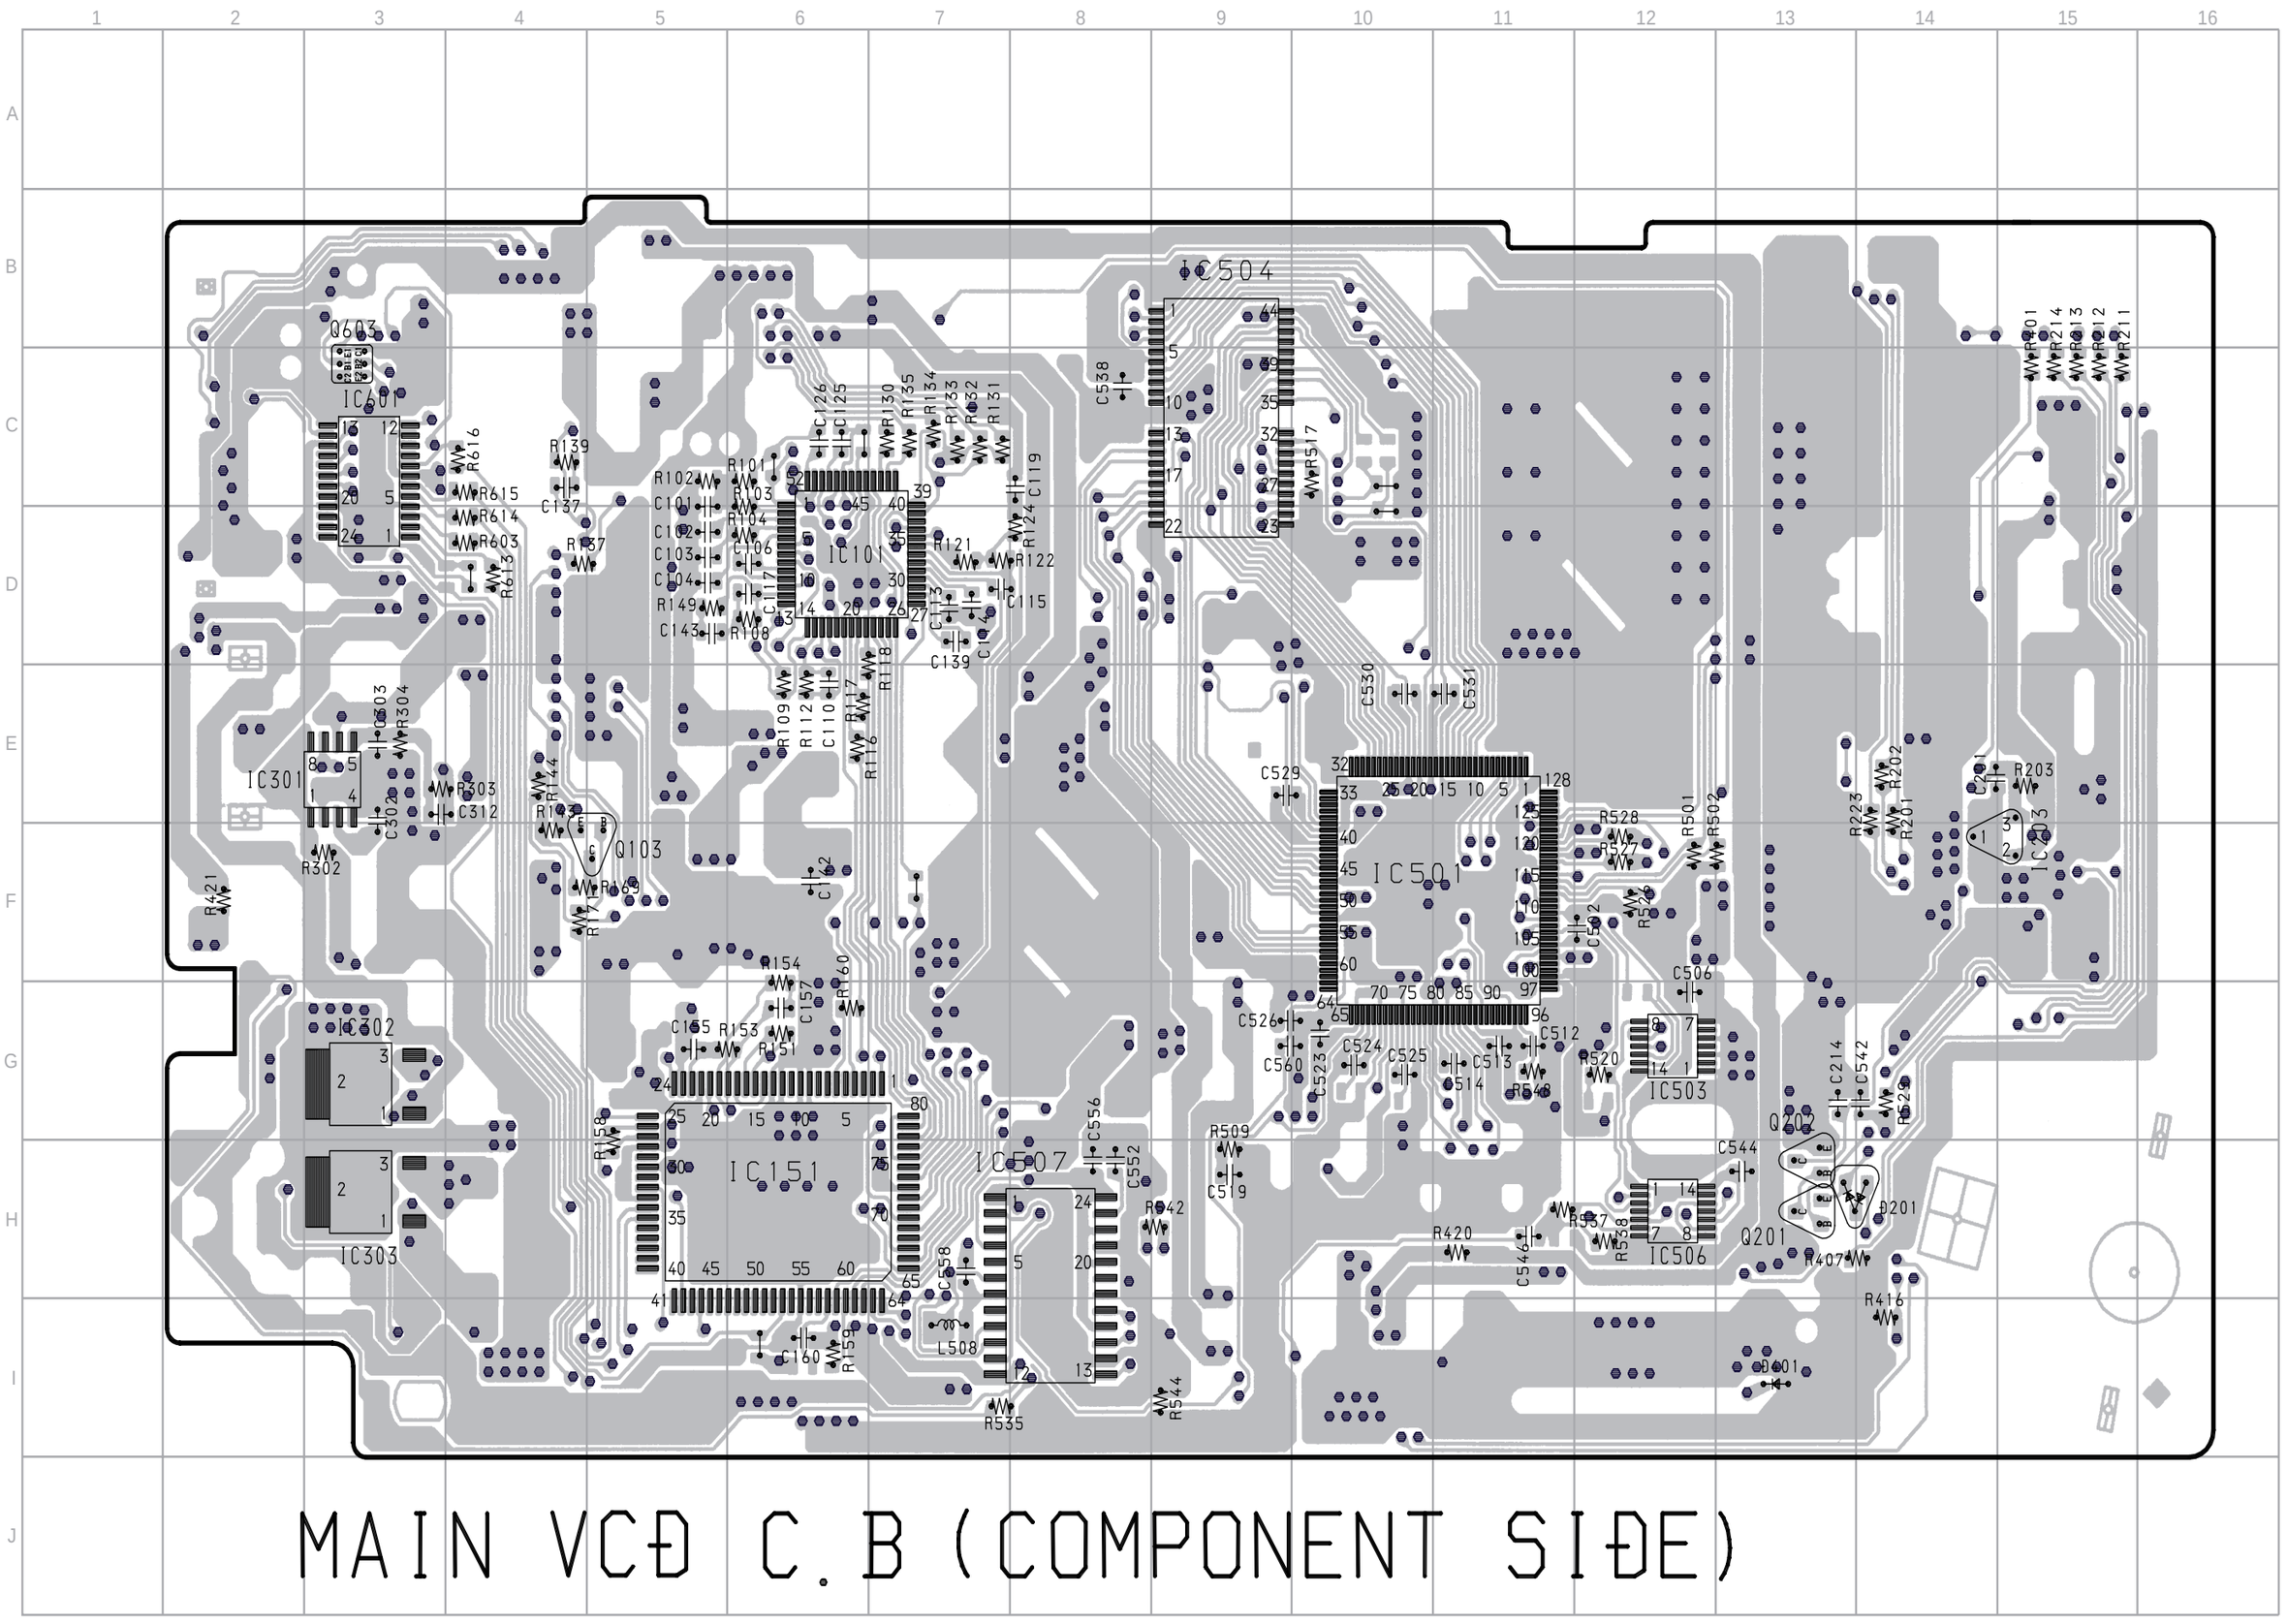

MAIN VCÐ C.B (COMPONENT SIÐE)

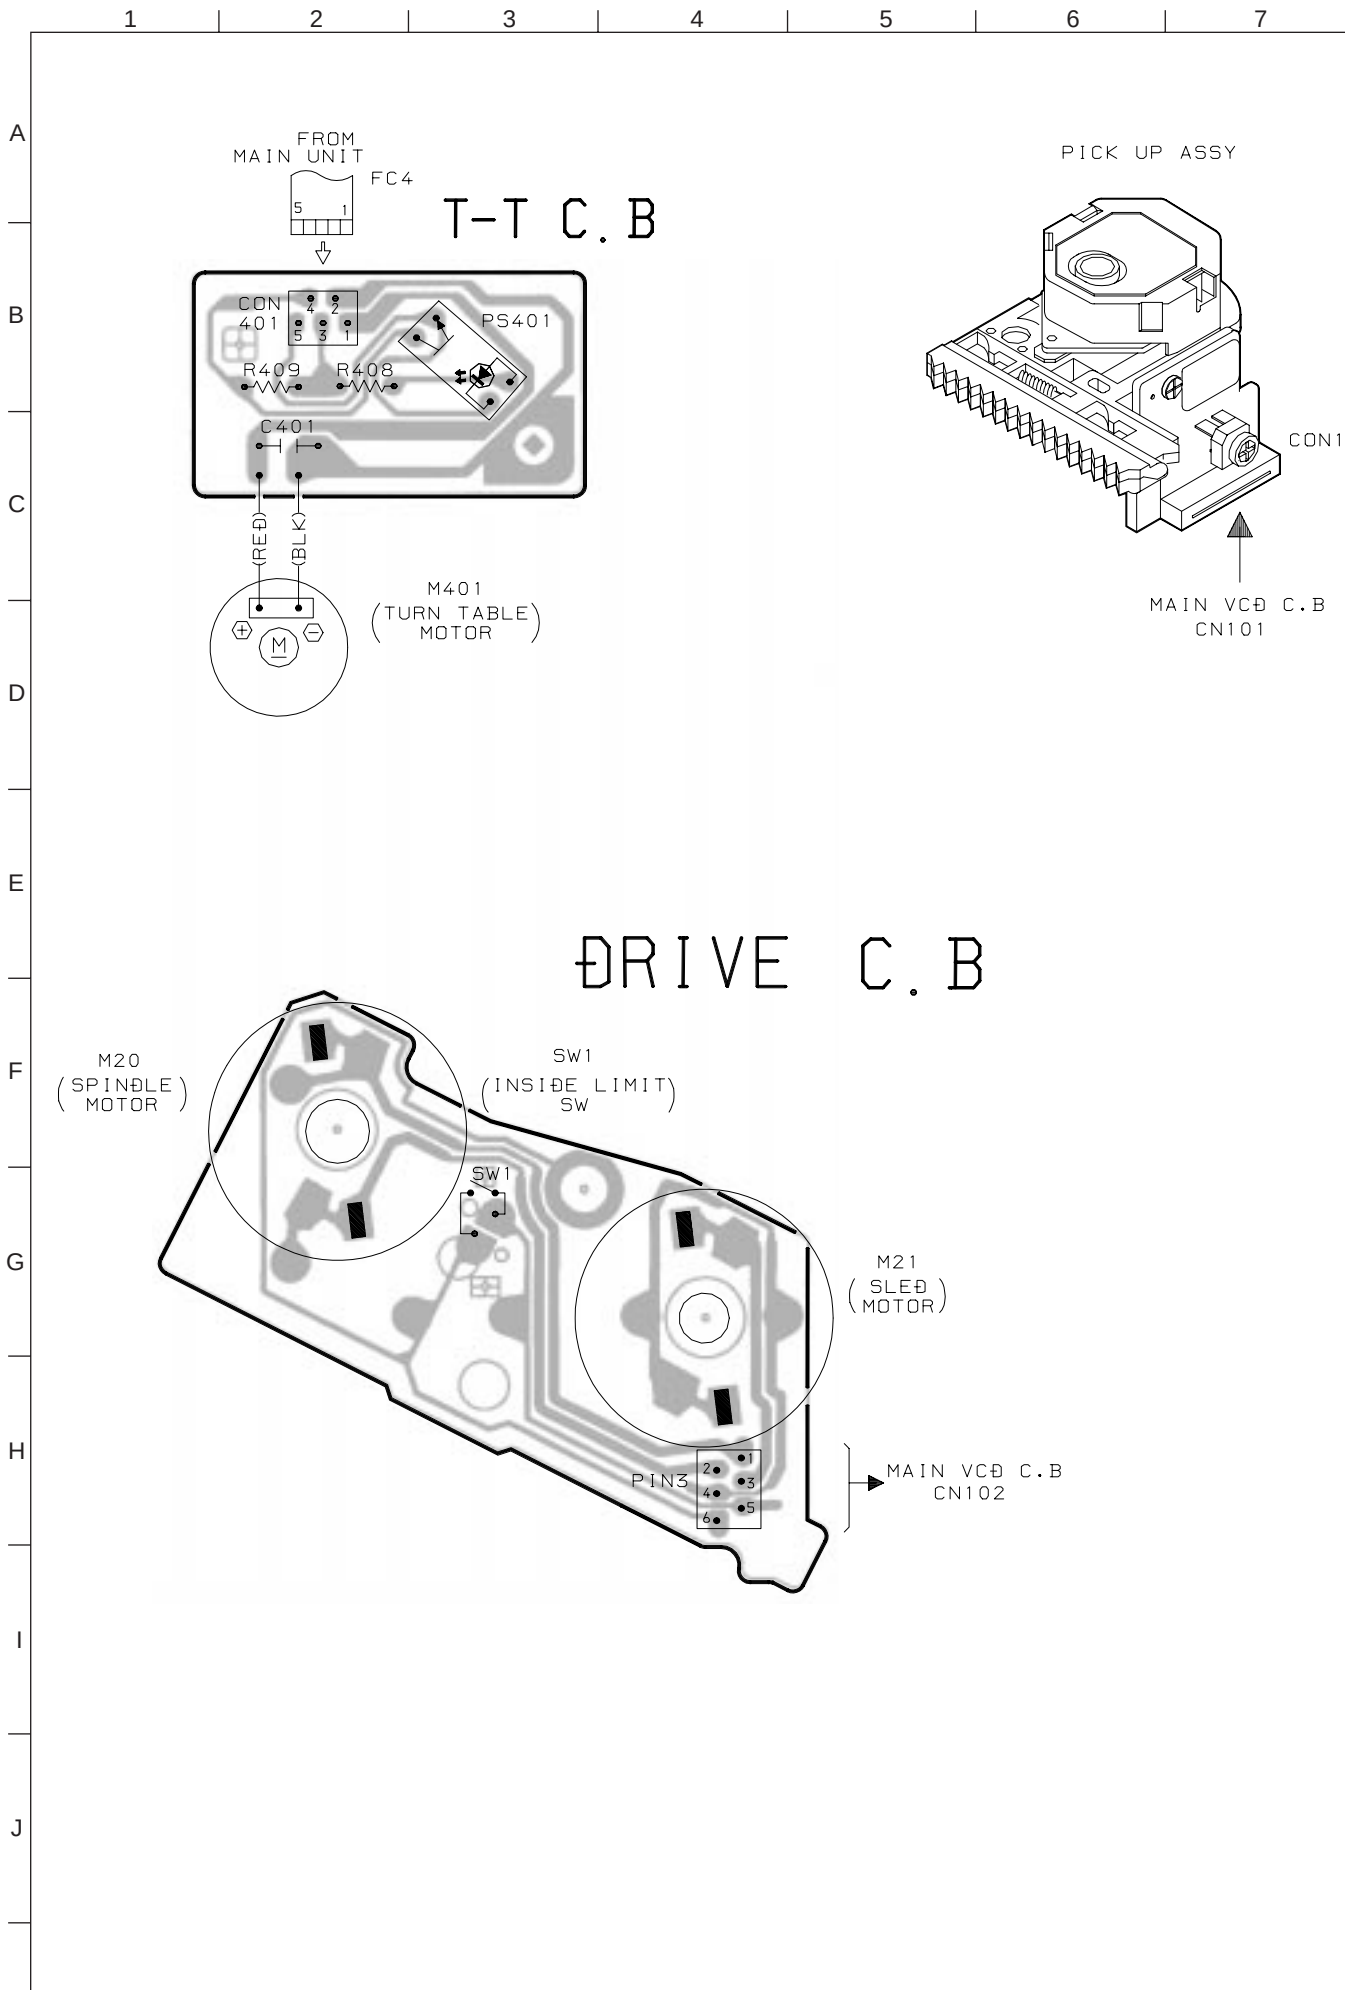
FROM
MAIN UNIT
FC4
5
1
T-T C.B
CON
401
4
2
5
3
1
PS401
R409
R408
C401
(RED)
(BLK)
M401
(TURN TABLE
MOTOR)
M
PICK UP ASSY
CON1
MAIN VCD C.B
CN101
DRIVE C.B
M20
(SPINDLE
MOTOR)
SW1
(INSIDE LIMIT
SW)
SW1
M21
(SLED
MOTOR)
PIN3
1
2
3
4
5
6
MAIN VCD C.B
CN102

SCHEMATIC DIAGRAM-1

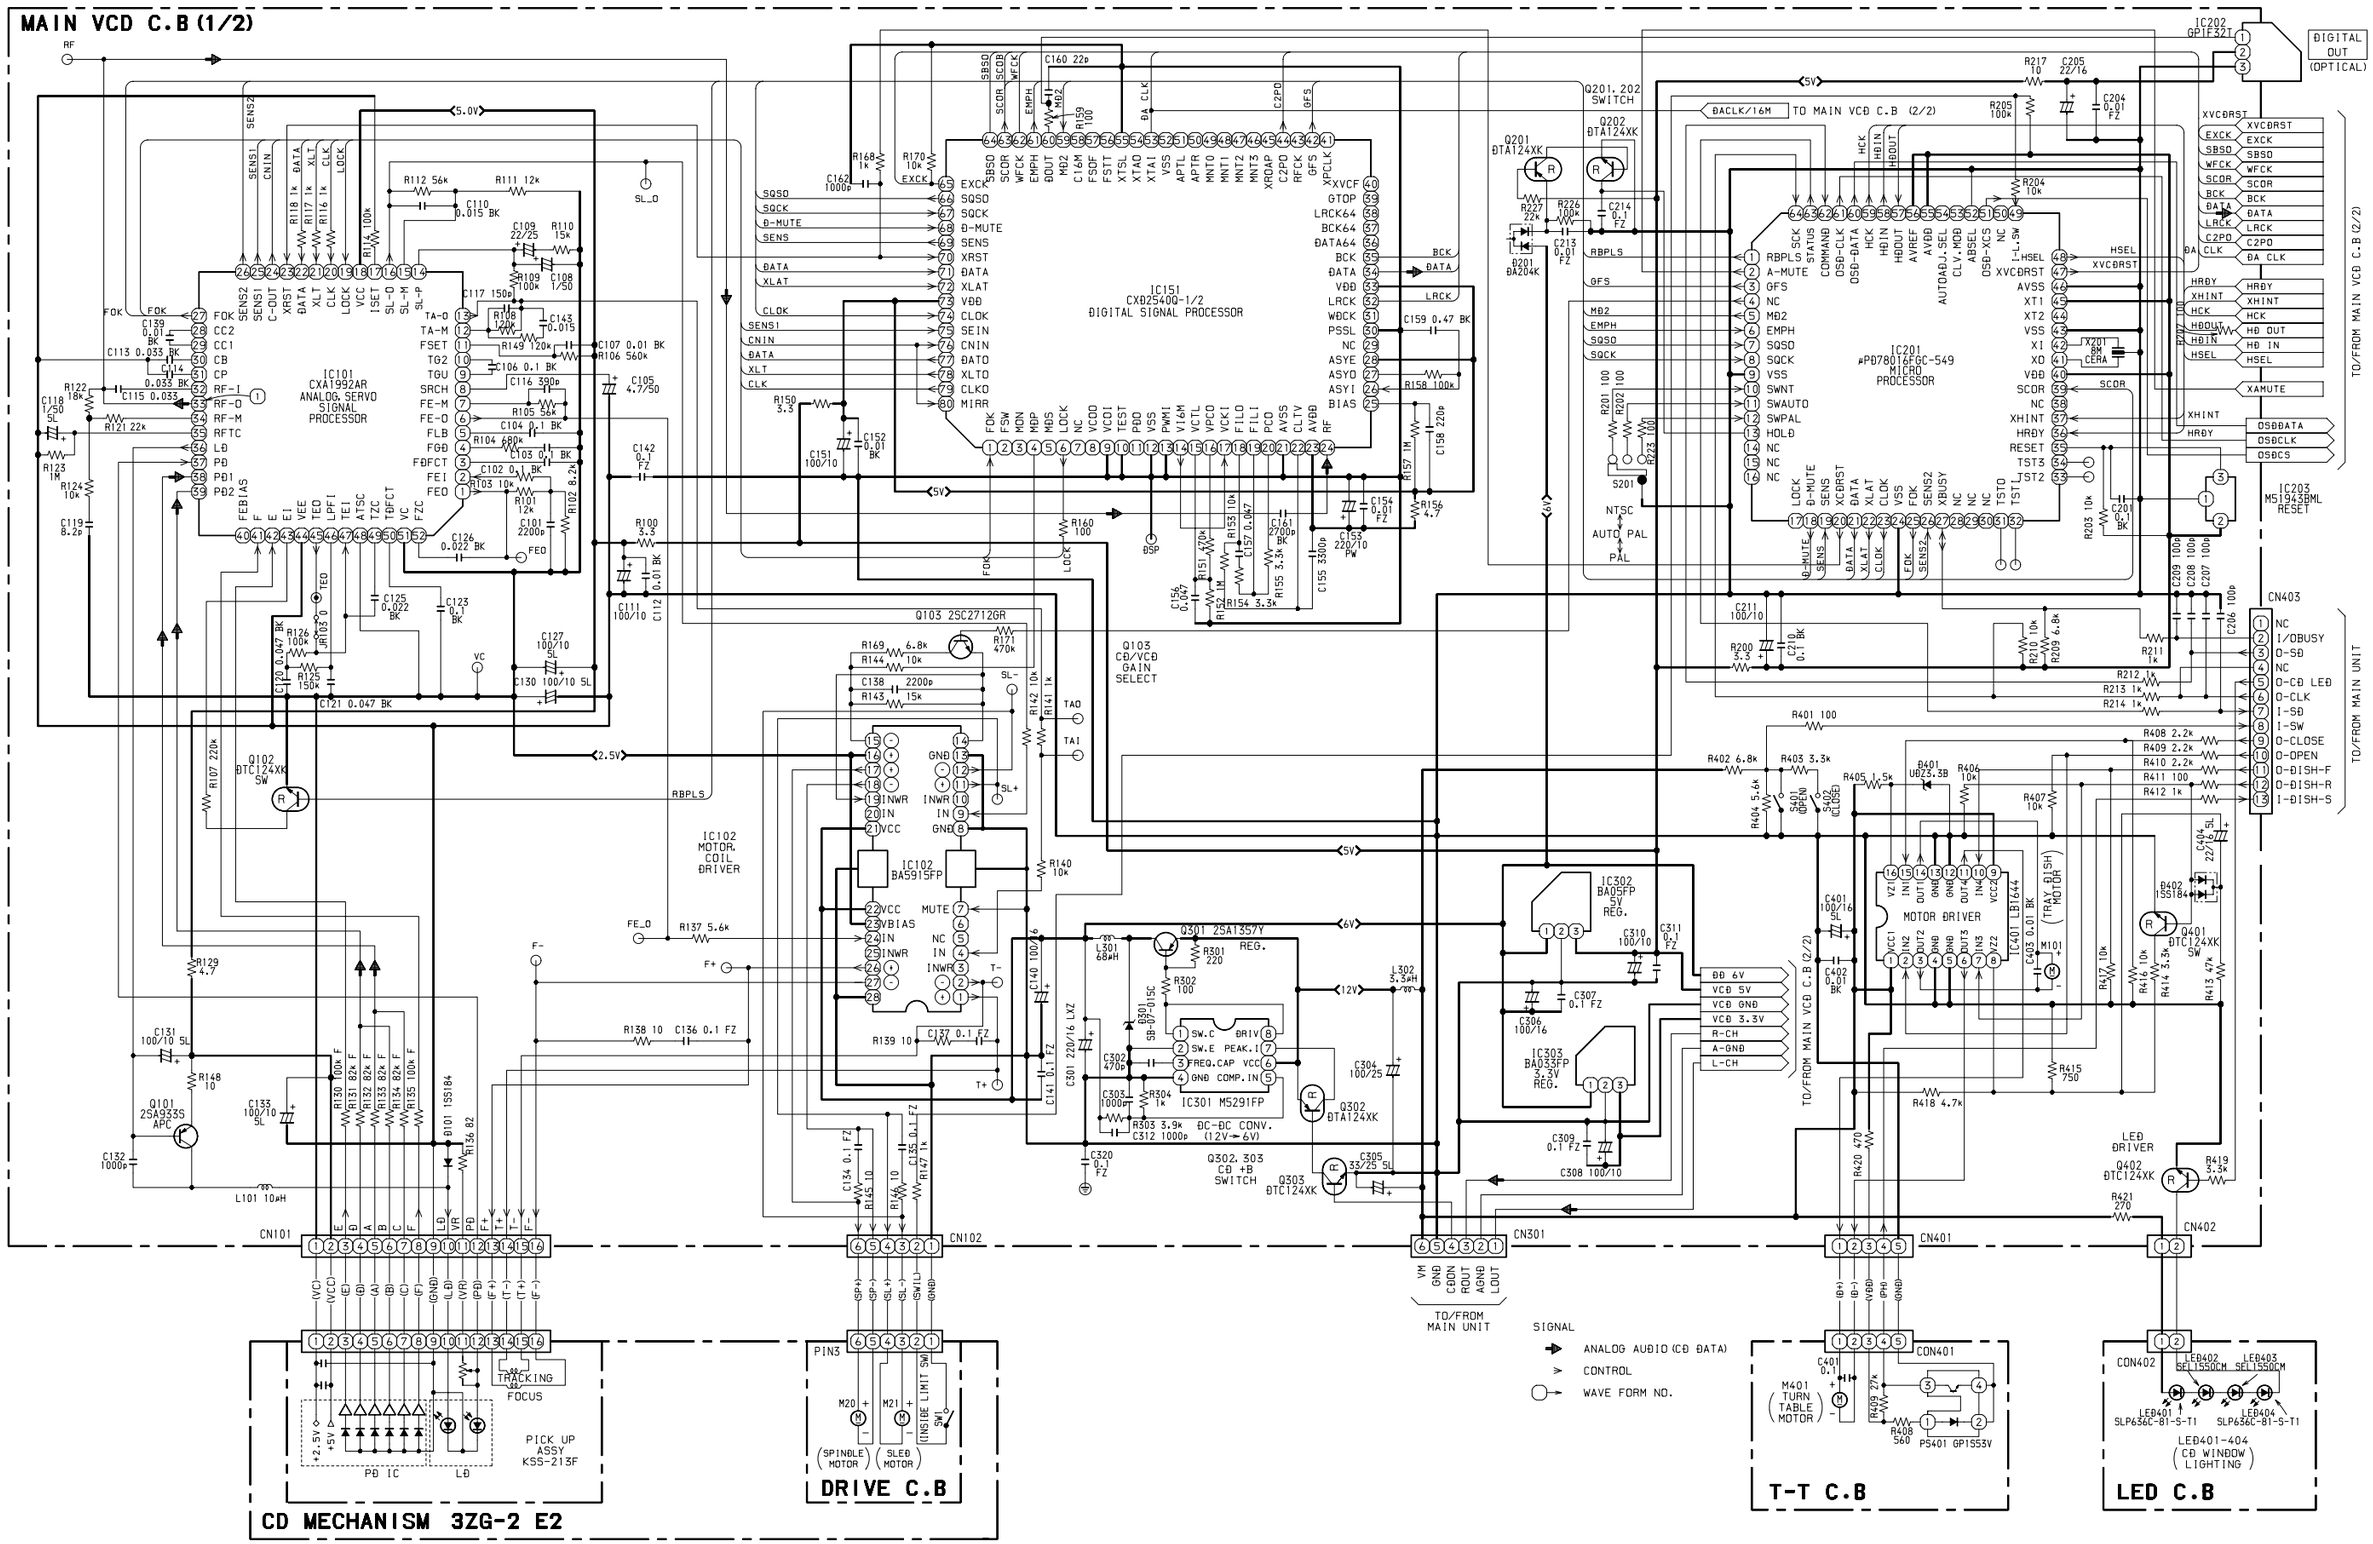

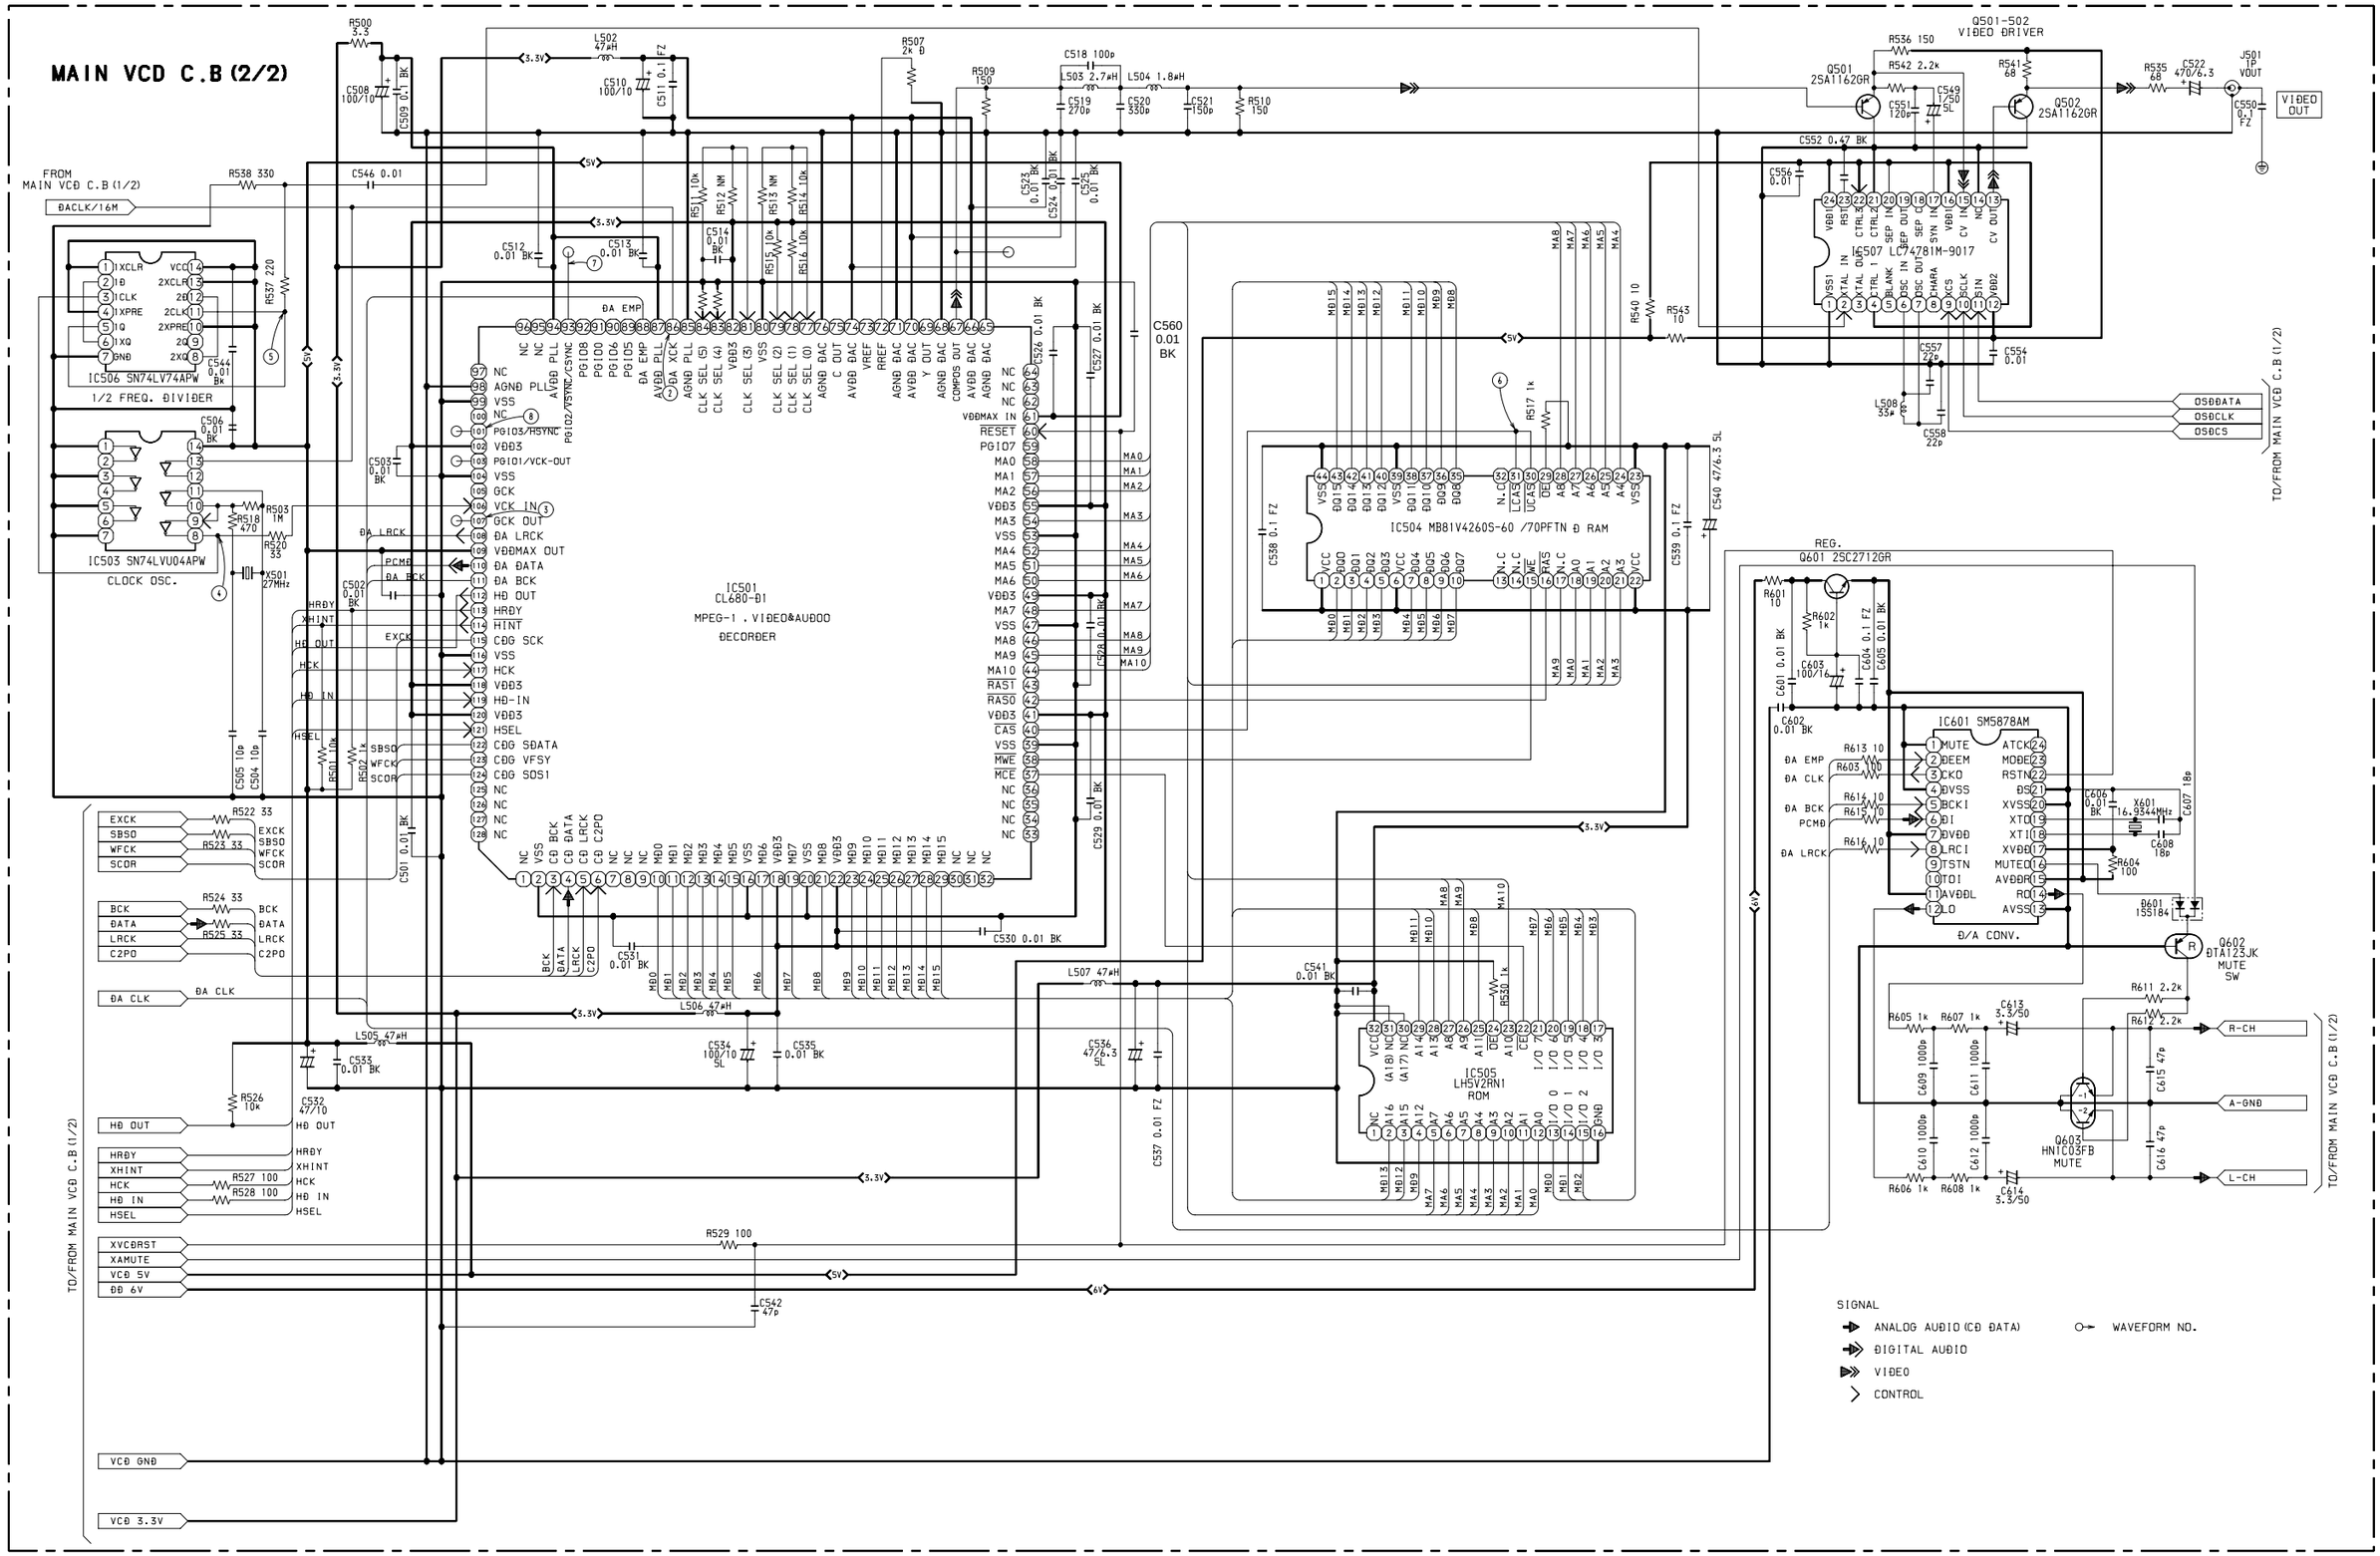
MAIN VCD C.B (2/2)
FROM MAIN VCD C.B (1/2)
ÐACLK/16M
IC506 SN74LV74APW
1/2 FREQ. ÐIVIÐER
IC503 SN74LVU04APW
CLOCK OSC.
X501 27MHz
IC501 CL680-Ð1
MPEG-1 . VIÐEO&AUÐIO ÐECORÐER
IC504 MB81V4260S-60 /70PFTN Ð RAM
IC505 LH5V2RN1 ROM
IC507 LC74781M-9017
Q501-502 VIÐEO ÐRIVER
Q501 2SA1162GR
Q502 2SA1162GR
REG. Q601 2SC2712GR
IC601 SM5878AM
Ð/A CONV.
Q602 ÐTA123JK MUTE SW
Q603 HN1C03FB MUTE
D601 1SS184
VIÐEO OUT
TO/FROM MAIN VCÐ C.B (1/2)
TO/FROM MAIN VCÐ C.B (1/2)
OSÐÐATA
OSÐCLK
OSÐCS
R-CH
A-GNÐ
L-CH
SIGNAL
ANALOG AUÐIO (CÐ ÐATA)
ÐIGITAL AUÐIO
VIÐEO
CONTROL
WAVEFORM NO.

WAVE FORM

① IC101 Pin ㉝ (RF-O)
VOLT/DIV: 200mV
TIME/DIV: 0.5µS

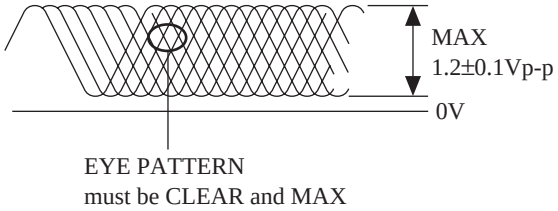

EYE PATTERN
must be CLEAR and MAX

② IC501 Pin ㊽ DA XCK
16.93MHz
VOLT/DIV: 1V
TIME/DIV: 20nS

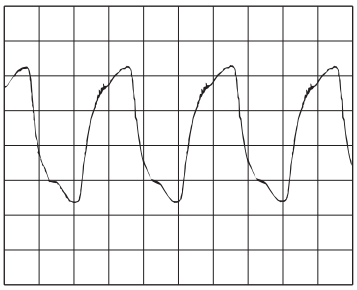

③ IC501 Pin ⑩⑦ GCK OUT
42.3MHz
VOLT/DIV: 1V
TIME/DIV: 10nS

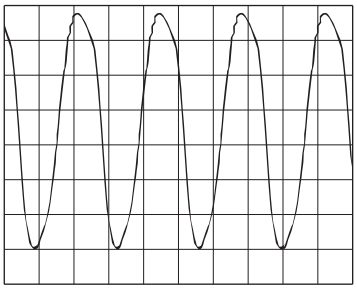

④ IC503 Pin ⑧ 33 VCK
27MHz±1.35kHz
VOLT/DIV: 1V
TIME/DIV: 10nS

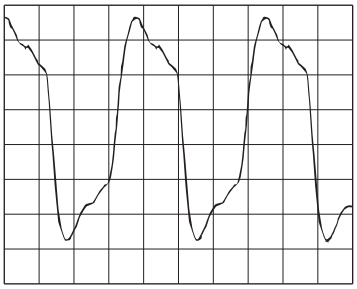

⑤ IC506 Pin ⑪ OSD CLK
13.5MHz±675Hz
VOLT/DIV: 1V
TIME/DIV: 20nS

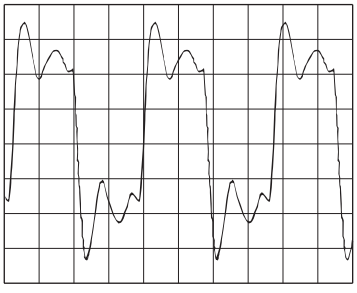

⑥ IC504 Pin ㉚ $\overline{\text{UCAS}}$
(Pin ㉛ $\overline{\text{LCAS}}$)
VOLT/DIV: 1V
TIME/DIV: 2µS

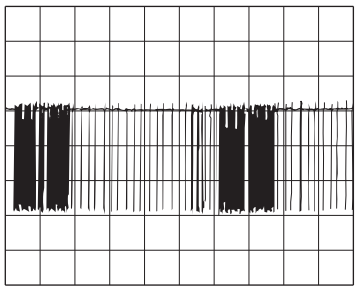

⑦ IC501 Pin ㉝ $\overline{\text{VSync}}$
NTSC
VOLT/DIV: 1V
TIME/DIV: 5mS

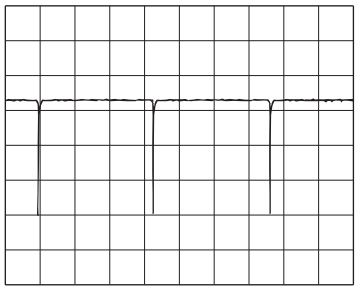

⑧ IC501 Pin ㉝ $\overline{\text{VSync}}$
PAL
VOLT/DIV: 1V
TIME/DIV: 5mS

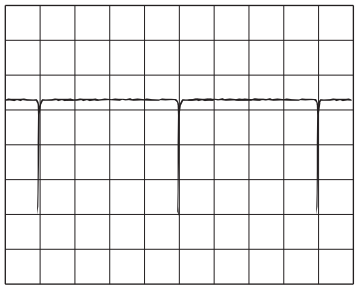

⑧ IC501 Pin ⑩① $\overline{\text{HSync}}$
PAL
VOLT/DIV: 1V
TIME/DIV: 20µS

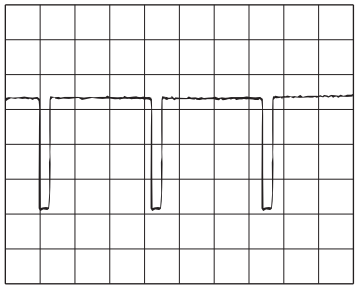

IC501 Pin ⑩① $\overline{\text{HSync}}$
NTSC
VOLT/DIV: 1V
TIME/DIV: 20µS

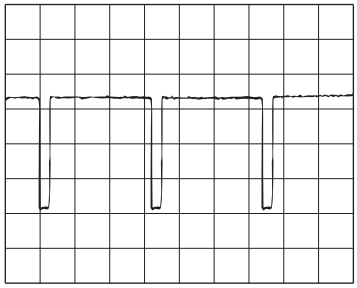

IC DESCRIPTION

IC, CXA1992AR

Pin No.	Pin Name	I/O	Description
1	FEO	O	Output terminal for focus error amplifier. Internally connected to window comparator input for bias condition.
2	FEI	I	Input terminal for focus error.
3	FDFCT	I	Capacitor connection terminal for time constant used when there is defect.
4	FGD	I	This pin is connected to GND via capacitor when high frequency gain of the focus servo is attenuated.
5	FLB	I	This is a pin where the time constant is externally connected to raise the low frequency gain of the focus servo.
6	FE_O	O	Focus drive output.
7	FEM	I	Focus amplifier inverted input pin.
8	SRCH	I	This is a pin where the time constant is externally connected to generate the focus search waveform.
9	TGU	I	This is a pin where the selection time constant is externally connected to set the tracking servo the high frequency gain.
10	TG2	I	This is a pin where the selection time constant is externally connected to set the tracking high frequency gain.
11	FSET	I	Pin for setting peak of the phase compensator of the focus tracking.
12	TA_M	I	Tracking amplifier inverted input pin.
13	TA_O	O	Tracking drive output.
14	SL_P	I	Sled amplifier non-inverted input pin.
15	SL_M	I	Sled amplifier inverted input pin.
16	SL_O	O	Sled drive output.
17	ISET	I	The current which determines height of the focus search, track jump and sled kick is input with external resistance connected.
18	Vcc	I	Power supply.
19	LOCK	I	“L” setting starts sled disorder-prevention circuit. (Not pull-up resistance)
20	CLK	I	Clock input for serial data transfer from CPU. (No pull-up resistance)
21	XLT	I	Latch input from CPU. (No pull-up resistance)
22	DATA	I	Serial data input from CPU. (No pull-up resistance)
23	XRST	I	Reset system at “L” setting. (No pull-up resistance)
24	C_OUT	O	Signal output for track number counting.
25	SENS1	O	FZC, DFCT1, TZC, BALH, TGH, FOH, or ATSC is output depending on the command from CPU.
26	SENS2	O	DFCT2, MIRR, BALL, TGL or FOL is output depending on the command from CPU.
27	FOK	O	Output terminal for focus OK comparator.
28	CC2	I	Input pin where the DEFECT bottom hold output is capacitance coupled.
29	CC1	O	DEFECT bottom-hold output terminal. Internally connected to interruption comparator input.
30	CB	I	Connection terminal for DEFECT bottom-hold capacitor.
31	CP	I	Connection terminal for MIRR hold-capacitor. Anti-reverse input terminal for MIRR comparator.

Pin No.	Pin Name	I/O	Description
32	RF_I	I	Input terminal by capacity combination of RF summing amplifier.
33	RF_O	O	Output terminal of RF summing amplifier. Checkpoint of Eye pattern.
34	RF_M	I	Anti-reverse input terminal for RF summing amplifier. The gain of RF amplifier is decided by the connection resistance between RF_M and RFO terminals.
35	RFTC	I	This is a pin where the selection time constant is externally connected to control the RF level.
36	LD	O	APC amplifier output terminal.
37	PD	I	APC amplifier input terminal.
38, 39	PD1, PD2	I	RFI-V amplifier inverted input pin. These pins are connected to the A+C and B+C pins of the optical pickup, receiving by currents input.
40	FEBIAS	I/O	Bias adjustment pin of the focus error amplifier.
41, 42	F, E	I	F and EIV amplifier inverted input pins. These pins are connected to the F and E of the optical pickup, receiving by current input.
43	EI	—	Gain adjustment pin of the I-V amplifier E. (When not in use of BAL automatic adjustment)
44	VEE	—	GND connection pin.
45	TEO	O	Output terminal for tacking-error amplifier. Output E-F signal.
46	LPFI	I	BAL adjustment comparator input pin. (Input through LPF from TEO)
47	TEI	I	Input terminal for tracking error.
48	ATSC	I	Window-comparator input terminal for detecting ATSC.
49	TZC	I	Input terminal for tracking-zero cross comparator.
50	TDFCT	I	Capacitor connection pin for the time constant used when there is defect.
51	VC	O	Output terminal for DC voltage reduced to half of VCC+VEE.
52	FZC	I	Input terminal for focus-zero cross comparator.

IC, CXD2540Q

Pin No.	Pin Name	I/O	Description
1	FOK	I	Focus OK input. Used for SENS output and the servo auto sequencer.
2	FSW	O	Spindle motor output filter switching output.
3	MON	O	Spindle motor on/off control output.
4	MDP	O	Spindle motor servo control.
5	MDS	O	
6	LOCK	O	High, when sampled value of GFS at 460Hz is high. Low, when sampled value of GFS at 460Hz is low by 8 times successively.
7	NC		
8	VCOO	O	Analog EFM PLL oscillation circuit output.
9	VCOI	I	Analog EFM PLL oscillation circuit input. fLOCK=8.6436MHz.
10	TEST	I	TEST pin.
11	PDO	O	Analog EFM PLL charge pump output.
12	VSS		GND.
13	PWMI	I	Spindle motor external control input.
14	V16M	O	VCO2 oscillation output for the wide-band EFM PLL.
15	VCTL	I	VCO2 control voltage input for the wide-band EFM PLL.
16	VPCO	O	Wide-band EFM PLL charge pump output.
17	VCKI	I	VCO2 oscillation input for the wide-band EFM PLL.
18	FILO	O	Multiplier PLL (slave=digital PLL) filter output.
19	FILI	I	Multiplier PLL filter input.
20	PCO	O	Multiplier PLL charge pump output.
21	AVSS		Analog GND.
22	CLTV	I	Multiplier VCO1 control voltage input.
23	AVDD		Analog power supply (5V).
24	RF	I	EFM signal input.
25	BIAS	I	Constant current input of the asymmetry circuit.
26	ASYI	I	Asymmetry comparator voltage input.
27	ASYO	O	EFM full-swing output.
28	ASYE	I	Low: asymmetry circuit off; high: asymmetry circuit on.
29	NC		
30	PSSL	I	Audio data output mode switching input. Low: serial output; high: parallel output.
31	WDCK	O	D/A interface for 48-bit slot. Word clock f=2Fs.
32	LRCK	O	D/A interface for 48-bit slot. LR clock f=Fs.
33	VDD		Power supply (5V).
34	DA16	O	DA16 (MSB) output when PSSL=1. 48-bit slot serial data (two's complement, MSB first) when PSSL=0.
35	DA15	O	DA15 output when PSSL=1. 48-bit slot bit clock when PSSL=0.
36	DA14	O	DA14 output when PSSL=1. 64-bit slot serial data (two's complement, LSB first) when PSSL=0.
37	DA13	O	DA13 output when PSSL=1. 64-bit slot bit clock when PSSL=0.
38	DA12	O	DA12 output when PSSL=1. 64-bit slot LR clock when PSSL=0.

Pin No.	Pin Name	I/O	Description
39	DA11	O	DA11 output when PSSL=1. GTOP output when PSSL=0.
40	DA10	O	DA10 output when PSSL=1. XUGF output when PSSL=0.
41	DA09	O	DA09 output when PSSL=1. XPLCK output when PSSL=0.
42	DA08	O	DA08 output when PSSL=1. GFS output when PSSL=0.
43	DA07	O	DA07 output when PSSL=1. RFCK output when PSSL=0.
44	DA06	O	DA06 output when PSSL=1. C2PO output when PSSL=0.
45	DA05	O	DA05 output when PSSL=1. XRAOF output when PSSL=0.
46	DA04	O	DA04 output when PSSL=1. MNT3 output when PSSL=0.
47	DA03	O	DA03 output when PSSL=1. MNT2 output when PSSL=0.
48	DA02	O	DA02 output when PSSL=1. MNT1 output when PSSL=0.
49	DA01	O	DA01 output when PSSL=1. MNT0 output when PSSL=0.
50	APTR	O	Aperture compensation control output. This pin outputs a high signal when the right channel is used.
51	APTL	O	Aperture compensation control output. This pin outputs a high signal when the left channel is used.
52	VSS		GND.
53	XTAI	I	Crystal oscillation circuit input.
54	XTAO	O	Crystal oscillation circuit output.
55	XTSL	I	Crystal selector input.
56	FSTT	O	2/3 frequency divider output for Pins 53 and 54.
57	FSOF	O	1/4 frequency divider output for Pins 53 and 54.
58	C16M	O	16.9344MHz output. (V16M output in CLV-W and CAV-W modes)
59	MD2	I	Digital-out on/off control. High: on; low: off
60	DOUT	O	Digital-out output.
61	EMPH	O	Outputs a high signal when the playback disc has emphasis, and a low signal when there is no emphasis.
62	WFCK	I	WFCK (write frame clock) output.
63	SCOR	O	Outputs a high signal when either subcode sync S0 or S1 is detected.
64	SBSO	O	Sub P to W serial output.
65	EXCK	I	SBSO readout clock input.
66	SQSO	O	Sub Q 80-bit and PCM peak, level metter and internal status outputs.
67	SQCK	I	SQSO readout clock input.
68	MUTE	I	High: mute; low: release
69	SENS	—	SENS output to CPU.
70	XRST	I	System reset. Reset when low.
71	DATA	O	Serial data input from CPU.
72	XLAT	O	Latch input from CPU. Serial data is latched at the falling edge.
73	VDD		Power supply (5V).
74	CLOK	O	Serial data transfer clock input from CPU.
75	SEIN	I	SENS input from SSP.
76	CNIN	I	Track jump count signal input.

Pin No.	Pin Name	I/O	Description
77	DATO	O	Serial data output to SSP.
78	XLTO	O	Serial data latch output to SSP. Latched at the falling edge.
79	CLKO	O	Serial data transfer clock output to SSP.
80	MIRR	I	Mirror signal input. Used when the number of tracks is 128 or more for the 2N-track jump and M track move of the auto sequencer.

Notes)

- The 64-bit slot is an LSB first, two's complement output, and the 48-bit slot is an MSB first, two's complement output.
- GTOP is used to monitor the frame sync protection status. (High: sync protection window open.)
- XUGF is the negative pulse for the frame sync obtained from the EFM signal. It is the signal before sync protection.
- XPLCK is the inverse of the EFM PLL clock. The PLL is designed so that the falling edge and the EFM signal transition point coincide.
- GFS goes high when the frame sync and the insertion protection timing match.
- RFCK is derived from the crystal accuracy, and has a cycle of 136μ.
- C2PO represents the data error status.
- XRAOF is generated when the 32K RAM exceeds the ±28F jitter margin.

IC, CL680

Pin No.	Pin Name	I/O	Description
1	NC	—	No connection.
2	VSS	—	GND.
3	CD BCK	I	Bit clock input from CD DSP.
4	CD DATA	I	Data input from CD DSP.
5	CD LRCK	I	LRCK input from CD DSP.
6	CD C2PO	I	C2 pointer input from CD DSP.
7-9	NC	—	No connection.
10-15	MD0-MD5	I/O	DRAM/ROM interface. (DATA)
16	VSS	—	Ground.
17	MD6	I/O	DRAM/ROM interface. (DATA)
18	VDD3	—	Power supply 3.3V.
19	MD7	I/O	DRAM/ROM interface. (DATA)
20	VSS	—	Ground.
21	MD8	I/O	DRAM/ROM interface. (DATA)
22	VDD3	—	Power supply 3.3V.
23-29	MD9-MD15	I/O	DRAM/ROM interface. (DATA)
30-36	NC	—	No connection.
37	$\overline{\text{MCE}}$	—	ROM chip enable.
38	$\overline{\text{MWE}}$	O	DRAM write enable.
39	VSS	—	Ground.
40	$\overline{\text{CAS}}$	O	DRAM/ROM interface.
41	VDD3	—	Power supply 3.3V.
42	$\overline{\text{RASO}}$	O	DRAM/ROM interface.
43	$\overline{\text{RASI}}$	O	
44-46	MA10-MA8	O	DRAM/ROM interface. (Address)
47	VSS	—	Ground.
48	MA7	O	DRAM/ROM interface. (Address)
49	VDD3	—	Power supply 3.3V.
50-52	MA6-MA4	O	DRAM/ROM interface. (Address)
53	VSS	—	Ground.
54	MA3	O	DRAM/ROM interface. (Address)
55	VDD3	—	Power supply 3.3V.
56-58	MA2-MA0	O	DRAM/ROM interface. (Address)
59	PGIO7	I/O	Programmable I/O.
60	$\overline{\text{RESET}}$	I	Reset input.
61	VDD MAX IN	—	Power supply - VDDMAX. (5.0V)
62-64	NC	—	No connection.
65	AGND DAC	—	Analog ground.
66	A DAC	—	Analog power supply (DAC) : 3.3V.
67	COMP OUT	O	Composite out.
68	AGND DAC	—	Analog ground.

Pin No.	Pin Name	I/O	Description
69	Y OUT	O	Video signal “Y” OUT.
70	AVDD DAC	—	Analog power supply (DAC) 3.3V.
71	AGND DAC	—	Analog ground.
72	R REF	I	Reference resistor input.
73	V REF	I	Voltage reference input.
74	AVDD DAC	—	Analog power supply (DAC) : 3.3V.
75	C OUT	O	Video signal “C” out.
76	AGND DAC	—	Analog ground.
77-79	CLK SEL0-2	I	Clock selection input.
80	VSS	—	Ground.
81	CLK SEL3	I	Clock selection input.
82	VDD3	—	Power supply 3.3V.
83, 84	CLK SEL4, 5	I	Clock selection input.
85	AGND PLL	—	Analog ground.
86	DA XCK	I	DA XCK (16.933MHz) input.
87	AVDD PLL	—	Analog power supply 3.3V.
88	DA EMP	O	DAC-emphasis output.
89, 90	PGIO5, O6	I/O	Programmable I/O.
91	PGIO0	I/O	
92	PGIO8	I/O	
93	$\overline{\text{VSYNC}}/\overline{\text{CSYNC}}$	O	$\overline{\text{VSYNC}}/\overline{\text{CSYNC}}$ output.
94	AVDD PLL	—	Analog power supply (PLL) 3.3V.
95	VID_DAC_CK	O	Video DAC clock.
96	PROC_CK	O	Processor clock.
97	AUD_XCK	O	Audio XCK.
98	AGND PLL	—	Analog ground.
99	VSS	—	Ground.
100	NC	—	No connection.
101	$\overline{\text{HSYNC}}$	O	$\overline{\text{HSYNC}}$ output.
102	VDD3	—	Power supply 3.3V.
103	VCK OUT	O	VCK out.
104	VSS	—	Ground.
105	GCK	I	Global clock signal input. (42.3MHz)
106	VCK	I	Video clock signal input. (27.0MHz)
107	GCK OUT	O	Global clock signal output. (27.0MHz)
108	DA LRCK	O	DAC-LRCK output.
109	VDD MAX OUT	—	Power supply (VDD MAX) : 5.0V.
110	DA DATA	O	DAC-PCM data output.
111	DA BCK	O	DAC-BIT clock output.
112	HD OUT	O	Micon interface. (Data out)
113	HRDY	O	Micon interface. (Host ready)

Pin No.	Pin Name	I/O	Description
114	$\overline{\text{HINT}}$	O	Micon interface. (Host interrupt)
115	CDG SCK	I	CD-G serial clock input.
116	VSS	—	Ground.
117	HCK	I	Micon interface. (Host clock)
118	VDD3	—	Power supply 3.3V.
119	HD IN	I	Micon interface. (Host data in)
120	VDD3	—	Power supply 3.3V.
121	HSEL	I	Micon interface. (Host select in)
122	CDG DATA	I	CD-G data input.
123	CDG VFSY	I	CD-G VFSY input.
124	CDG SOSI	I	CD-G SOSI input.
125	DSP-XCK	O	DSP-XCK output.
126-128	NC	—	No connection.

IC, LC74781M

Pin No.	Pin Name	I/O	Description
1	VSS1	—	GND connection terminal. (Digital ground terminal).
2	Xtal IN	I	External X'tal and capacitor for internal sync generator, or the external clock are connected to this terminal. (2fsc or 4fsc).
3	Xtal OUT	O	
4	CTRL1	I	Either the external clock input mode or the X'tal generator mode is selected by this selector terminal. L: X'tal generator mode, H: External clock input.
5	BLANK	O	Blank signal (character and the green ORed signal) is output from this terminal. (MODE 0: composite sync signal is output at H.) When reset ($\overline{RST}$ terminal = L), the X'tal clock signal is output. (It is not output when reset by the reset command).
6	OSC IN	I	External coil and capacitor for the character output dot clock generator are connected to this terminal.
7	OSC OUT	O	
8	CHARA	O	The character signal is output from this terminal. (MOD 0: when H, the external sync signal identification signal is output from this terminal. This output signal tells whether the external sync signal is present or not. When external sync signal is present, H is output.) When reset ($\overline{RST}$ terminal = L), the dot clock signal (LC oscillator) is output. (It is not output when reset by the reset command).
9	$\overline{CS}$	I	Enable signal for the serial data input is input to this terminal. The serial data input is enabled at L. Pull-up resistor is built-in. (Hysteresis input).
10	SCLK	I	Clock of the serial data input is input to this terminal. Pull-up resistor is built-in. (Hysteresis input).
11	SIN	I	Serial data input terminal. Pull-up resistor is built-in. (Hysteresis input).
12	VDD2	—	Power supply for the composite video signal level adjustment. (Analog power supply).
13	CV OUT	O	Composite video signal output terminal.
14	NC	—	Connected to GND or not connected.
15	CV IN	I	Composite video signal input terminal.
16	VDD1	—	Power supply (+5V digital power supply).
17	SYN IN	I	Video signal for the internal sync separator circuit is input to this terminal. (When the internal sync separator circuit is not used, the horizontal sync signal or composite sync signal is input to this terminal).
18	SEP C	—	Internal sync separator circuit bias voltage monitoring terminal.
19	SEP OUT	O	The composite sync output signal of the internal sync separator circuit is output from this terminal. (H: MOD 1. H: during internal sync mode. L: during external sync mode.) (When internal sync separator circuit is not used, the SYN IN input signal is output from this terminal).
20	SEP IN	I	The output signal of the SEP OUT terminal is integrated so that the vertical sync signal is input to this terminal. An integrator circuit must be connected between the SEP OUT terminal and this terminal. When this terminal is not used, it must be connected to VDD1.
21	CTRL2	I	When selecting any of the NTSC or PAL or PAL-M or PAL-N system, the pin setting has priority. When L, the NTSC system is selected after resetting. Selection of either NTSC or PAL or PAL-M or PAL-N system by the command becomes effective. H: PAL-M system.

Pin No.	Pin Name	I/O	Description
22	CTRL3	I	Controls whether or not to input the $\overline{\text{VSYNC}}$ signal to the SEPIN input. L: to input the $\overline{\text{VSYNC}}$ signal. H: not to input the $\overline{\text{VSYNC}}$ signal.
23	$\overline{\text{RST}}$	I	System reset input terminal. Pull-up resistor is built-in. (Hysteresis input).
24	VDD1	—	Power supply. (+5V digital power supply).

IC, µPD78016FGC

Pin No.	Pin Name	I/O	Description
1	RBPLS	O	RADIAL BALANCE PLUS.
2	AMUTE	O	AUDIO ANALOG MUTE (H=MUTE ON).
3	GFS	I	GFS.
4	XVCDMD	I	AUDIO/VIDEO CD MODE (L=VCD=SPINDLE GAIN UP).
5	MD2	O	DOUT MUTE CONT.
6	EMPH	I	EMPHASIS.
7	SQSO	I	SQDATA FROM CD.
8	SQCK	O	SQCLK TO CD.
9	VSS	—	GND.
10	SWNT	I	SW TV OUT MODE (L=NTSC).
11	SWAUTO	I	SW TV OUT MODE (L=NTSC/PAL AUTO).
12	SWPAL	I	SW TV OUT MODE (L=PAL).
13	EMERG	I	POWER EMERGENCY STOP (L*3sec=STOP).
14	NC	—	Nou used.
15	LPCSEL	I	“LPC ON/OFF (H=ON, NORMAL)”.
16	NC	—	Nou used.
17	LOCK	O	GFS (FRAME SYNC) LOCK (NO USE=H).
18	DMUTE	O	DIGITAL DATA OUT MUTE.
19	SENS	I	DSP SENS1 FROM CD.
20	XCDRST	O	CD RESET.
21	DATA	O	DATA TO CD.
22	XLAT	O	XLT TO CD.
23	CLOK	O	CLK TO CD.
24	VSS	—	GND.
25	FOK	I	FOCUS OK.
26	SENS2	I	SSP SENS2 FROM CD.
27	XBUSY	I/O	READY/BUSY I/O TO HOST OD.
28	NC	—	Nou used.
29	NC	—	
30	NC	—	
31	TST0	I/O	CHECK LAND.
32	TST1	I/O	
33	TST2	I/O	
34	TST3	I/O	
35	RESET	I	RESET.
36	HRDY	I	HRDY FROM CL680.
37	XHINT	I	HINT FROM CL680.
38	NC	—	Nou used.
39	SCOR	I	SCOR FROM CD.
40	VDD	—	5.0VDD.
41	XO	O	8.0MHz CERALOCK.

Pin No.	Pin Name	I/O	Description
42	XI	I	8.0MHz CERALOCK.
43	VSS	—	GND.
44	XT2	—	Nou used.
45	XT1	I	5.0VDD.
46	AVSS	—	GND.
47	XMPGRST	O	MPEG BLOCK IC RESET.
48	HSEL	O	ADDRESS/DATA SEL TO CL680.
49	INLSW	I	INSIDE LIMIT SW.
50	NC	—	Nou used.
51	OSDXCS	O	OSD CHIP SELECT.
52	ABSEL	I	CXA1992A/B SELECT (L=CXA1992A).
53	CLVSEL	I	CLV MODE SELECT (H=CLV-N).
54	AADSEL	I	AUTO ADJUST SELECT (H=AUTO ON).
55	AVDD	—	5.0VDD.
56	AVREF	—	
57	HDOUT	I	HD-OUT FROM CL680.
58	HDIN	O	HD-IN TO CL680.
59	HCK	O	HCK TO CL680.
60	OSDDATA	O	OSD DATA.
61	OSDCLK	O	OSD CLOCK.
62	COMMAND	I	COMMAND FROM HOST.
63	STATUS	O	STATUS TO HOST.
64	SCK	I	SCK FROM HOST.

IC, SM5878M

Pin No.	Pin Name	I/O	Description
1	MUTE	I	MODE = H: Soft mute ON/OFF terminal. (Mute at H). MODE = L: Attenuator level DOWN/UP terminal. (DOWN at H).
2	DEEM	I	De-emphasis ON/OFF terminal. (De-emphasis ON at H).
3	CKO	O	Oscillator clock output. (16.9344 MHz).
4	DVSS	—	Digital VSS terminal.
5	BCKI	I	Bit clock input terminal.
6	DI	I	Serial data input terminal.
7	DVDD	—	Digital VDD terminal.
8	LRCI	I	Sample rate clock (fs) input terminal. (H = L ch/L = R ch).
9	TSTN	I	Test input. (“H” or open during normal operation)
10	TO1	O	Test output 1. (Normally low level output).
11	AVDDL	—	Analog VDD terminal. (For L ch).
12	LO	O	Left channel analog output terminal.
13	AVSS	—	Analog VSS terminal.
14	RO	O	Right channel analog output terminal.
15	AVDDR	—	Analog VDD terminal. (For R ch).
16	MUTEO	O	Infinity zero detection output.
17	XVDD	—	X’tal system VDD terminal.
18	XTI	I	X’tal oscillator terminal. (Or external clock input terminal of 16.9344 MHz).
19	XTO	O	X’tal oscillator terminal.
20	XVSS	—	X’tal system VSS terminal.
21	DS	I	Double-speed/normal playback selection. (Double-speed at H).
22	RSTN	I	Reset terminal. (Reset at L).
23	MODE	I	Soft mute/Attenuator mode selection. (Soft mute at H).
24	ATCK	I	Attenuator level setup clock (Ignored when MODE = H).

IC BLOCK DIAGRAM

IC, BA5915FP

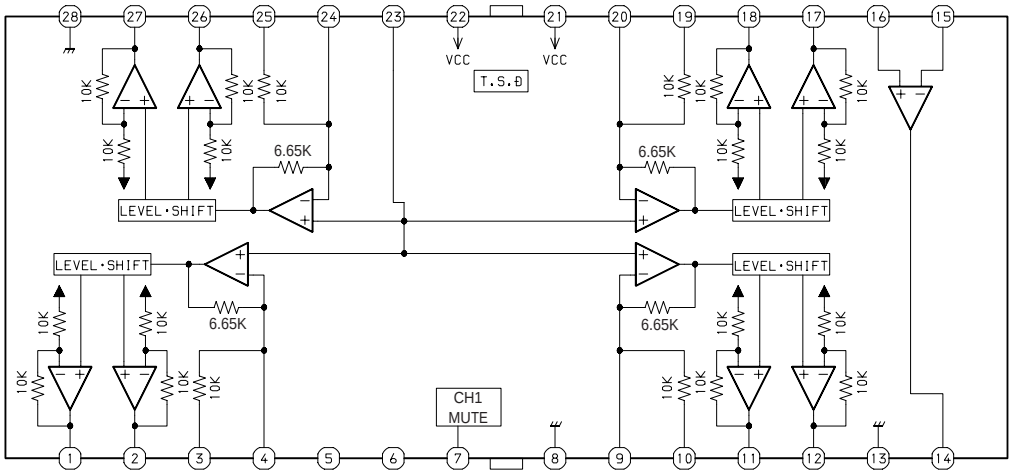

T.S.D: Thermal shut-down
Resistors are in units of Ω.

IC, M5291FP

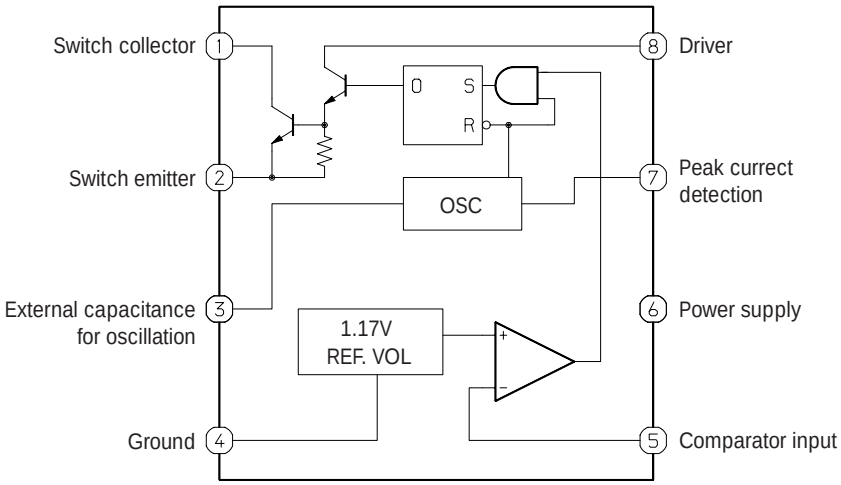

IC, LB1644

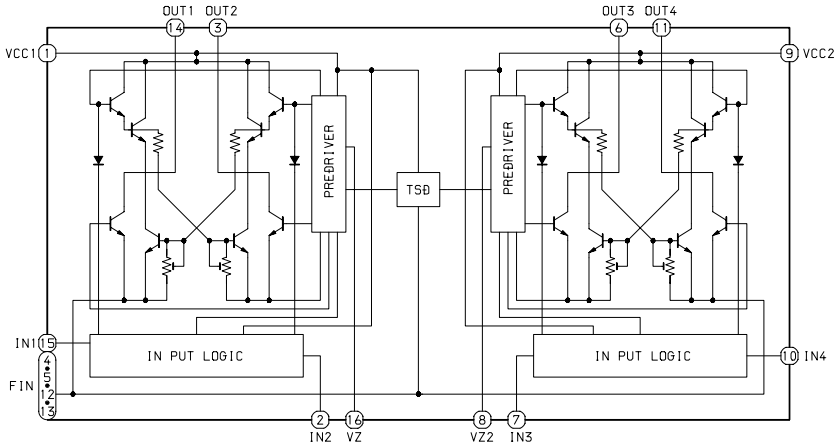

TRUH TABLE

IN1	IN2	OUT1	OUT2	IN3	IN4	OUT3	OUT4
0	0	L	L	0	0	L	L
1	0	H	L	1	0	H	L
0	1	L	H	0	1	L	H
1	1	L	L	1	1	L	L

INPUT			OUTPUT				MODE	
IN1	IN2.3	IN4	OUT1	OUT2	OUT3	OUT4	M1	M2
0	0	0	L	L	L	L	BRAKE	BRAKE
1	0	0	H	L	L	L	FF/REW	BRAKE
0	1	1	L	H	L	L	REW/FF	BRAKE
1	1	0	L	L	H	L	BRAKE	FF/REW
0	0	1	L	L	L	H	BRAKE	REW/FF
1	1	1	L	L	L	L	BRAKE	BRAKE

TEST MODE

1. How to Activate CD Test Mode
   Insert the AC plug while pressing the function CD button.
   All FL display tubes will light up, and the test mode will be activated.

2. How to Cancel CD Test Mode
   Either one of the following operations will cancel the CD test mode.
   - Press the function button. (except CD function button)
   - Press the power switch button.
   - Disconnect the AC plug

3. CD Test Mode Functions
   When test mode is activated, the following mode functions from No.1 to No.5 can be used by pressing the operation keys.

Mode/No.	Operation	FL display	Operation	Contents
Start mode No.1	Activation	TEST□□ □□ □□ Flashes repeatdly	• Test mode is activated. • CD block power is ON.	• Test mode
Search mode No.2	■ key		• Continual focus search (The pickup lens repeats the full-swing up-down motion.) * Avoid continual searches that last for more than 10 minutes. * NOTE 1	FOCUS SERVO • Check focus search waveform • Check focus error waveform (FOK/FZC are not monitored in the search mode)
Play mode No.3	◀▶key		• Normal playback • Focus search is continued if TOC cannot be read. * NOTE 1	FOCUS SERVO/TRACKING SERVO CLV SERVO/SLED SERVO Check FOK/FZC
Traverse mode No.4	⏸ key		• During normal disc playback Press once; tracking servo OFF Press twice; tracking servo ON * NOTE 2	TRACKING SERVO ON/OFF Tracking balance (traverse) check
Sled mode No.5	⏮key ⏭	All lamps light	• Pickup moves to the outermost track • Pickup moves to the innermost track * NOTE 3 (During playback, machine operates normally.)	SLED SERVO Check SLED mechanism operation

* NOTE 1: There are cases when the tracking servo cannot be locked owing to the protection circuit being operated when heat builds up in the driver IC if the focus search is operated continually for more than 10 minutes. In these cases the power supply should be switched off for 10 minutes until heat has been reduced and then re-started.
* NOTE 2: Do not press the ⏮ or ⏭ keys when the machine is in the ⏸ status is active. If they are pressed, playback will not be possible after the ⏸ status has been canceled. If the ⏮ or ⏭ keys are pressed in the ⏸ status, press the ■ key and return to the start mode (No.1).
* NOTE 3: When pressing the ⏮ or ⏭ keys, take care to avoid damage to the gears. Because the sled motor is activated when the ⏮ or ⏭ keys are pressed, even when the pick-up is at the outermost or innermost track.

4. Operation Outline
   The operation of each mode is carried out in the direction of the arrows from the start mode as indicated in the following illustration.

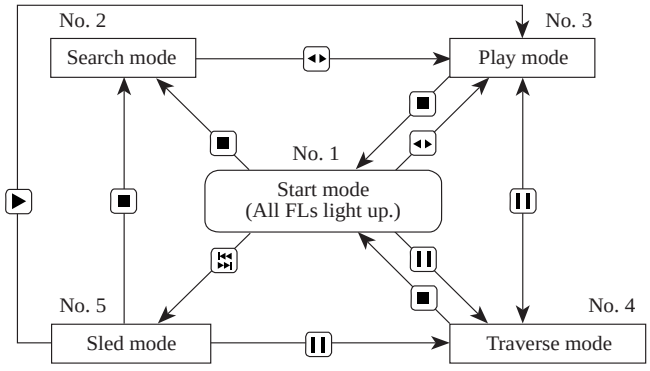

   If the DISC DIRECT PLAY button is pressed, the machine performs the same operation as the PLAY button is pressed as shown. If the tray is opened by pressing OPEN/CLOSE button during Play mode or Traverse mode, the machine returns to the Start mode.

5. How to check the Automatic Adjustment Values
   The automatic adjustment values can be checked by pressing the square (■) button.
   FL display (displayed in hexadecimal values)



Note) The reference value is “20 08 08”.

MECHANICAL EXPLODED VIEW 1/1

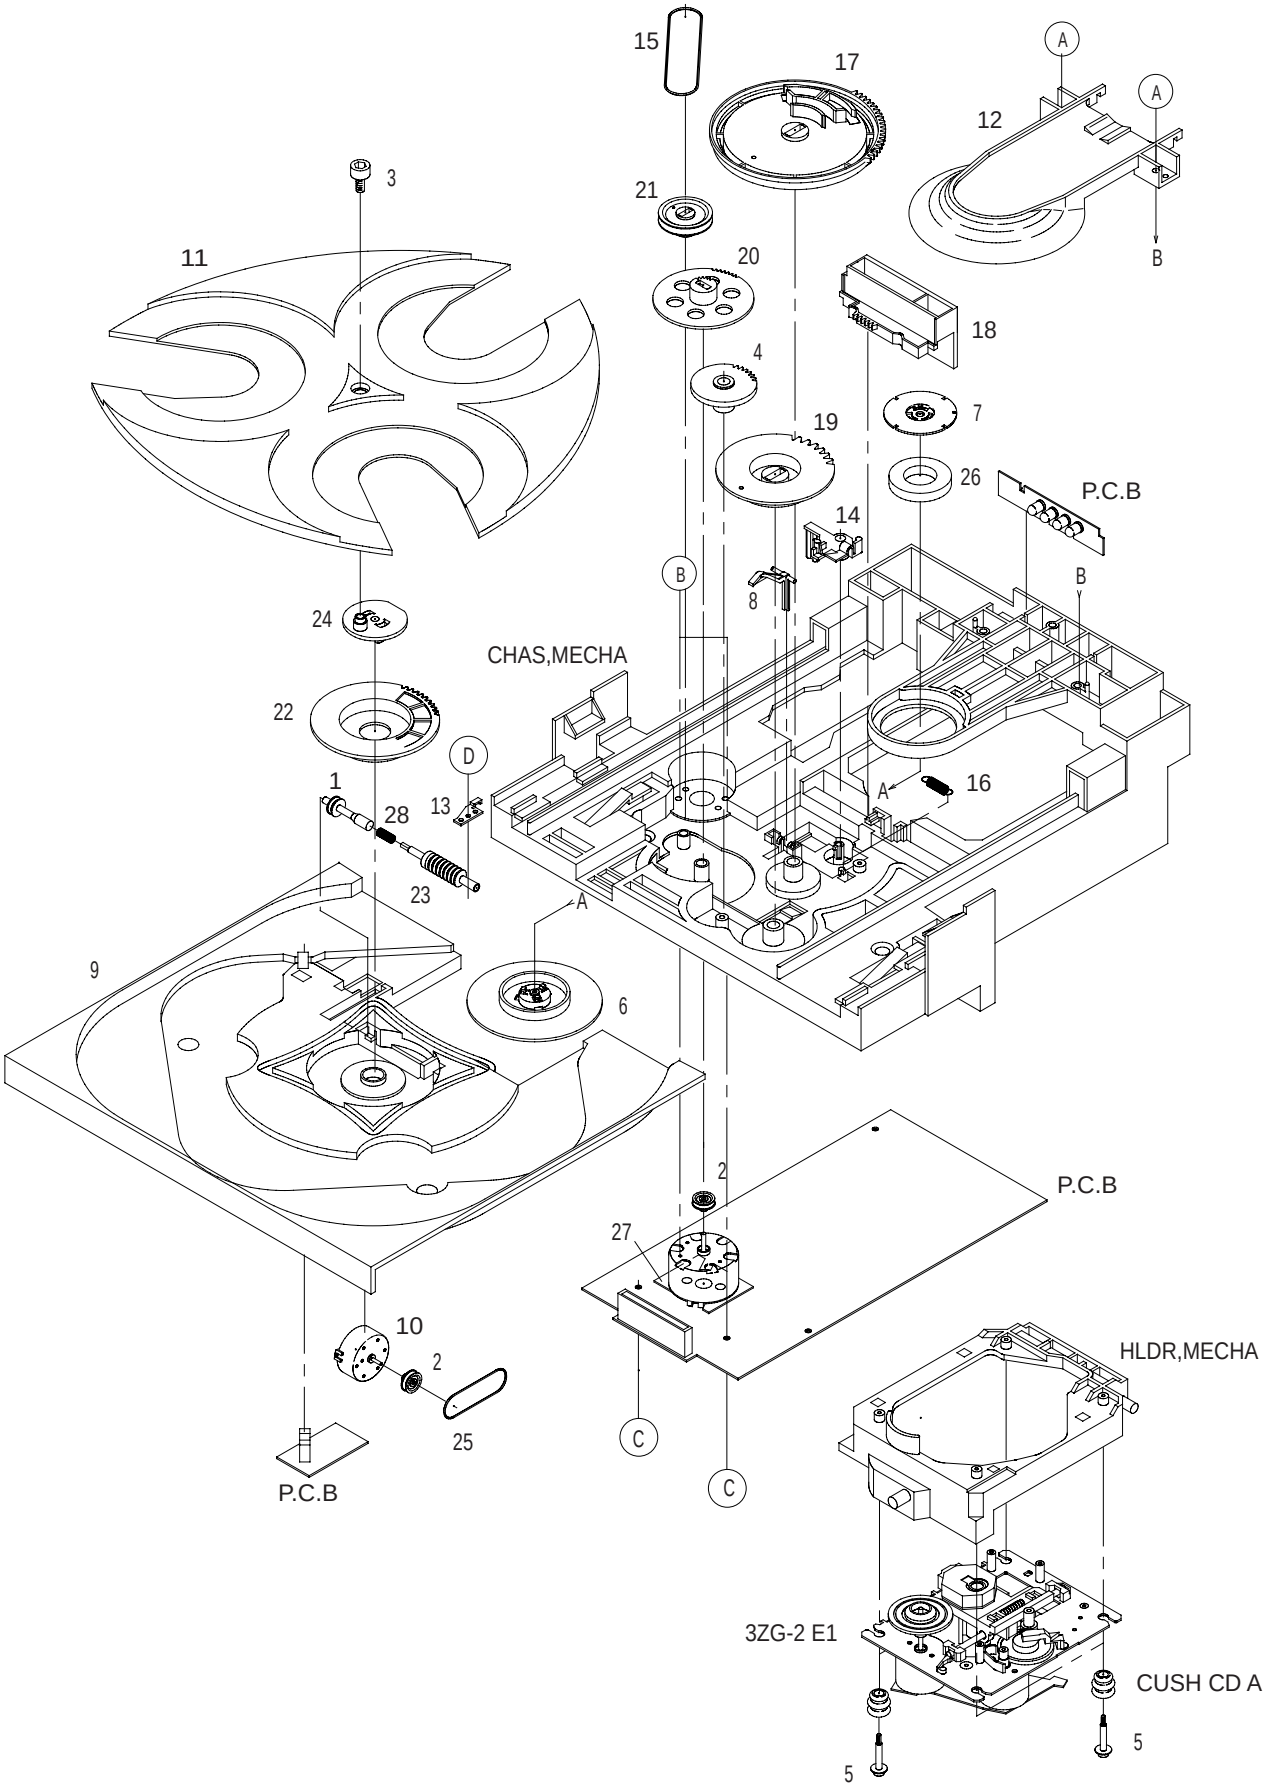

MECHANICAL PARTS LIST 1/1

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	84-ZG1-239-210		PULLY,WORM N
2	84-ZG1-267-010		PULLEY,LOAD MO 8
3	81-ZG1-239-010		S-SCREW,TT
4	81-ZG1-291-110		GEAR,TRAY RELAY NO3
5	81-ZG1-271-010		S-SCREW MECH REAR
6	81-ZG1-277-310		HLDR,MAGNET N
7	81-ZG1-255-110		PLATE,MAGNET MK2
8	83-ZG3-213-010		LVR,SW
9	84-ZG1-003-310		TRAY,NO2-B
10	87-045-364-010		MOTOR(BCH3B14)
11	84-ZG1-005-210		TURNTABLE,NO1(*)
12	84-ZG1-011-010		REFLECTOR,CD
13	84-ZG1-259-010		SPR-P,WORM
14	84-ZG1-208-210		LEVER,CAM
15	84-ZG1-209-010		BELT,SQ1.8-117.7
16	84-ZG1-211-010		SPR-E CAM S
17	84-ZG1-215-410		GEAR,MAIN CAM BLU
18	84-ZG1-216-310		SLIDE,MECHA CAM YEL
19	84-ZG1-205-110		GEAR,TRAY
20	84-ZG1-206-110		GEAR,RELAY
21	84-ZG1-207-010		PULLEY,RELAY
22	84-ZG1-221-010		GEAR,MAIN TT
23	84-ZG1-238-010		GEAR,WORM N
24	84-ZG1-224-010		LEVER,TT
25	84-ZG1-225-010		BELT,SQ1.0-63.3
26	83-ZG3-602-010		RING,MAG
27	87-045-305-010		MOTOR, RF-500TB DC-5V (2MA)
28	84-ZG1-248-010		SPR-C,WORM
A	87-067-703-010		TAPPING SCREW, BVT2+3-10
B	87-251-070-410		U+2.6-3
C	87-342-036-210		UT2+2-8
D	87-067-981-010		BVT2+3-6 BLK

CD MECHANISM EXPLODED VIEW 1/1 (3ZG-2 E1)

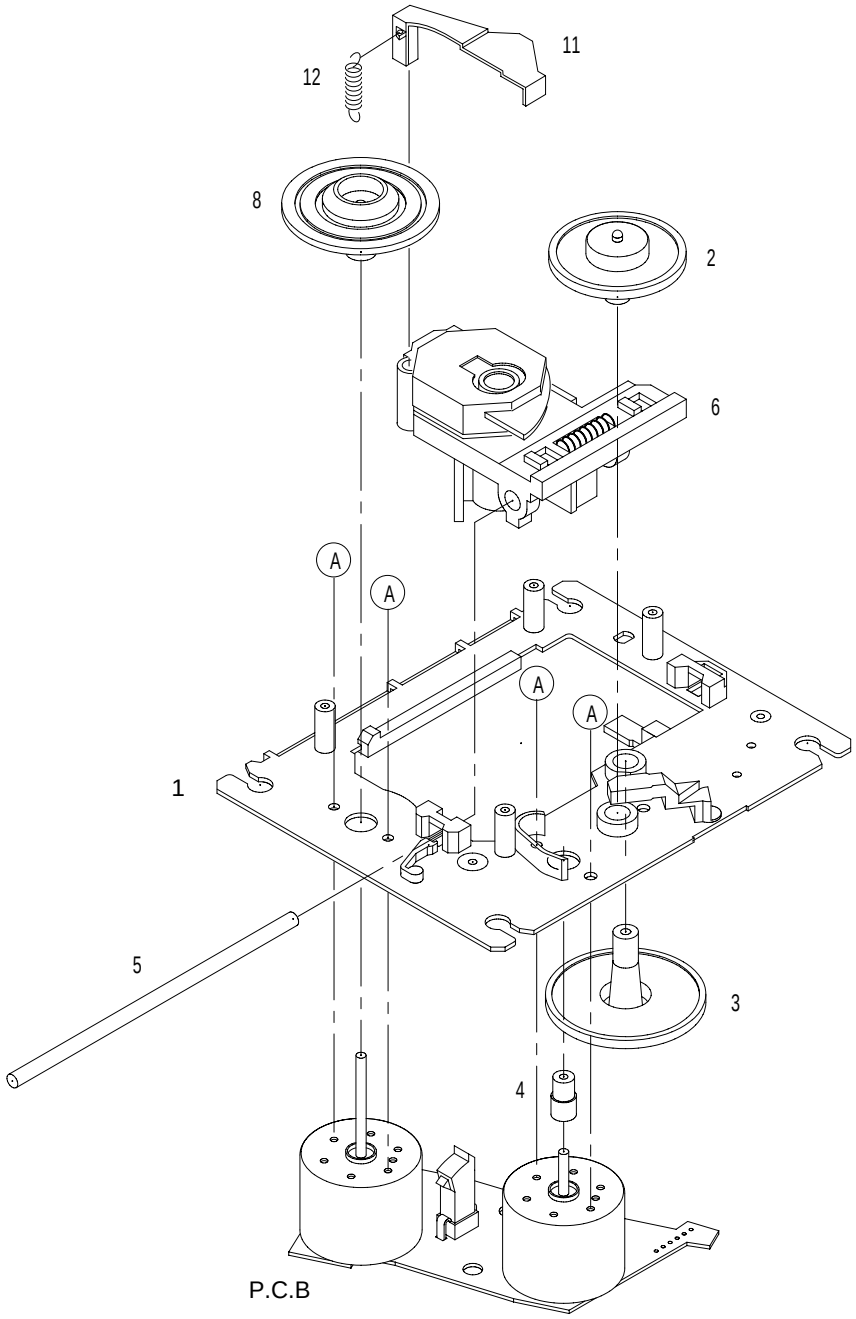

CD MECHANISM PARTS LIST 1/1 (3ZG-2 E1)

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	83-ZG2-243-110		CHAS ASSY,SHT
2	83-ZG2-235-010		GEAR,A3
3	83-ZG2-205-210		GEAR,B
4	83-ZG2-236-010		GEAR MOTOR 3
5	83-ZG2-240-010		SHAFT,SLIDE 3
6	87-A90-836-010		PICKUP,KSS-213F
8	83-ZG2-233-010		TURN TABLE,A5
11	83-ZG2-245-110		LEVER,SHUTTER
12	83-ZG2-250-010		SPR-E,SHT 2
A	87-261-032-210		SCREW V+2-3

CX-NAK572
CX-NK270
CX-NK290
CX-NK370
CX-NK570
CX-NK765
CX-NK770
CX-NK970
DX-SNKH100

REFERENCE NAME LIST

ELECTRICAL SECTION

DESCRIPTION	REFERENCE NAME
ANT	ANTENNAS
C-	CHIP
C-CAP	CAP, CHIP
C-CAP TN	CAP, CHIP TANTALUM
C-COIL	COIL, CHIP
C-DI	DIODE, CHIP
C-DIODE	DIODE, CHIP
C-FET	FET, CHIP
C-FOTR	FILTER, CHIP
C-JACK	JACK, CHIP
C-LED	LED, CHIP
C-RES	RES, CHIP
C-SFR	SFR, CHIP
C-SLIDE SW	SLIDE SWITCH, CHIP
C-SW	SWITCH, CHIP
C-TR	TRANSISTOR, CHIP
C-VR	VOLUME, CHIP
C-ZENER	ZENER, CHIP
CAP, CER	CAP, CERA-SOL
CAP, E	CAP, ELECT
CAP, M/F	CAP, FILM
CAP, TC	CAP, CERA-SOL
CAP, TC-U	CAP, CERA-SOL SS
CAP, TN	CAP, TANTALUM
CERA FIL	FILTER, CERAMIC
CF	FILTER, CERAMIC
DL	DELAY LINE
E/CAP	CAP, ELECT
FILT	FILTER
FLTR	FILTER
FUSE RES	RES, FUSE
MOT	MOTOR
P-DIODE	PHOTO DIODE
P-SNSR	PHOTO SENSER
P-TR	PHOTO TRANSISTOR
POLY VARI	VARIABLE CAPACITOR
PPCAP	CAP, PP
PT	POWER TRANSFORMER
PTR, RES	PTR, MELF
RC	REMOTE CONTROLLER
RES NF	RES, NON-FLAMMABLE
RESO	RESONATOR
SHLD	SHIELD
SOL	SOLENOID
SPKR	SPEAKER
SW, LVR	SWITCH, LEVER
SW, RTRY	SWITCH, ROTARY
SW, SL	SWITCH, SLIDE
TC CAP	CAP, CERA-SOL
THMS	THERMISTOR
TR	TRANSISTOR
TRIMMER	CAP, TRIMMER
TUN-CAP	VARIABLE CAPACITOR
VIB, CER	RESONATOR, CERAMIC
VIB, XTAL	RESONATOR, CRYSTAL
VR	VOLUME
ZENER	DIODE, ZENER

MECHANICAL SECTION

DESCRIPTION	REFERENCE NAME
ADHESHIVE	SHEET ADHESHIVE
AZ	AZIMUTH
BAR-ANT	BAR-ANTENNA
BAT	BATTERY
BATT	BATTERY
BRG	BEARING
BTN	BUTTON
CAB	CABINET
CASS	CASSETTE
CHAS	CHASSIS
CLR	COLLAR
CONT	CONTROL
CRSR	CURSOR
CU	CUSHION
CUSH	CUSHION
DIR	DIRECTION
DUBB	DUBBING
FL	FRONT LOADING
FLY-WHL	FLYWHEEL
FR	FRONT
FUN	FUNCTION
G-CU	G-CUSHION
HDL	HANDOL
HIMERON	CLOTH
HINGE, BAT	HINGE, BATTERY
HLDR	HOLDER
HT-SINK	HEAT SINK
IB	INSTRUCTION BOOKLET
IDLE	IDLER
IND, L-R	INDICATOR, L-R
KEY, CONT	KEY, CONTROL
KEY, PRGM	KEY, PROGRAM
KNOB, SL	KNOB, SLIDE
LBL	LABEL
LID, BATT	LID, BATTERY
LID, CASS	LID, CASSETTE
LVR	LEVER
P-SP	P-SPRING
PANEL, CONT	PANEL, CONTROL
PANEL, FR	PANEL, FRONT
PRGM	PROGRAM
PULLY, LOAD MO	PULLY, LOAD MOTOR
RBN	RIBBON
S-	SPECIAL
SEG	SEGMENT
SH	SHEET
SHLD-SH	SHIELD-SHEET
SL	SLIDE
SP	SPRING
SP-SCREW	SPECIAL-SCREW
SPACER, BAT	SPACER, BATTERY
SPR	SPRING
SPR-P	P-SPRING
SPR-PC-PUSH	P-SPRING, C-PUSH
T-SP	T-SPRING
TERM	TERMINAL
TRIG	TRIGGER
TUN	TUNING
VOL	VOLUME
W	WASHER
WHL	WHEEL
WORM-WHL	WORM-WHEEL

サービス技術ニュース	
番号	連絡内容
G一　一	
G一　一	
G一　一	

アイワ株式会社
AIWA CO.,LTD.

〒110　東京都台東区池之端1-2-11　☎03（3827）3111（代表）

912162

Tokyo Japan

Printed in Singpore